



E Commands

This chapter covers the following commands:

- [enable](#), page 5-2
- [exit](#), page 5-3

enable

To change the management session from Monitor mode to Administrator mode, use the **enable** command. Monitor mode, which is the default mode, provides view-only access to the storage router management interface. Administrator mode allows you to create entities and make changes to the configuration of the storage router.

enable

Syntax Description This command has no arguments or keywords.

Defaults None.

Command Modes Monitor.

Command History	Release	Modification
	2.2.1	This command was introduced for the SN 5428.
	3.2.1	This command was introduced for the SN 5428-2.

Usage Guidelines Issue the **enable** command after a successful CLI login to change to Administrator mode. You are prompted to enter the Administrator mode password, if required. Use the **exit** command to return to Monitor mode.

Examples The following example changes the session from Monitor mode to Administrator mode.

```
[SN5428-2A]# enable
Enter admin password: ****
[Entering Administrator mode]
```

Related Commands	Command	Description
	aaa authentication enable	Configure AAA authentication services for Administrator mode access to the storage router via the CLI enable command.
	exit	Leave Administrator mode and enter Monitor mode.
	logout	Terminate the management session.
	show aaa	Display AAA configuration information.

exit

To return the management session to Monitor mode from Administrator mode, use the **exit** command.

exit

Syntax Description This command has no arguments or keywords.

Defaults None.

Command Modes Administrator.

Command History	Release	Modification
	2.2.1	This command was introduced for the SN 5428.
	3.2.1	This command was introduced for the SN 5428-2.

Usage Guidelines Issue the **exit** command to return to Monitor mode after previously issuing the **enable** command.

Examples The following example returns the CLI session to Monitor mode:

```
[SN5428-2A]# exit
[Leaving Administrator mode]
```

Related Commands	Command	Description
	enable	Enter Administrator mode.
	logout	Terminate the management session.

