

Send documentation comments to mdsfeedback-doc@cisco.com.



INDEX

A

account name
 factory default **B-7**
 maintenance mode **B-6**
Activity LED **1-3**
 Ethernet port **1-7**
 FC port **1-4**
auto mode **1-6**

B

boot loader **B-9**
brackets
 rack-mount **2-5**
 shelf **2-8**

C

cabinet **2-5**
cable
 console **1-5, D-2**
 Ethernet **1-5**
 fiber optic **3-6**
configuration
 file system error **B-3, B-4**
 remove **B-8**
 restore default **B-7**
console
 cable **1-5, 1-7, D-2**
 connection **3-2**
 port **1-7, D-2**
critical error **B-3**

D

domain ID **B-5**

E

E Port **B-5**
E port **1-6**
equipment **2-3**
Ethernet
 cable **1-5**
 port **1-7, 3-3, D-3**

F

features **1-1**
fiber optic cable **3-6, 3-8**
Fibre Channel port **1-6, 3-3**
firmware
 failure **B-3**
FL port **1-6**
F port **1-6**
Fx port **1-6**

G

grounding **2-3, 2-9**

H

Heartbeat LED **1-3, 1-5**

Send documentation comments to mdsfeedback-doc@cisco.com.

I

Input Power LED **1-3, B-2**

installation

guidelines **2-2**

options **2-2**

internal firmware failure **B-3**

J

jumper cord **C-5**

L

LED

Activity **1-3**

Fibre Channel Port Activity LED **1-4**

Fibre Channel Port Logged-In **1-4**

Heartbeat **1-3, 1-5**

Input Power **1-3, B-2**

Link Status **1-3**

Logged-In **1-4, B-4**

System Fault **1-4, B-2**

Link Status LED **1-3, 1-7**

Logged-In LED **1-4, B-4**

M

maintenance

button **1-4**

exit **B-7**

fibre optic cable **3-8**

menu **B-6**

mode **1-4, 1-5, B-6**

transceiver **3-8**

maintenance button **1-4, 1-5, B-6**

management port **3-3**

N

network connections **3-1**

non-critical error **B-3**

null-modem DB-9 cable **1-7, 3-2, D-2**

O

over temperature **B-4**

P

password

file reset **B-7**

maintenance mode **B-6**

restore default **B-7**

port

console **3-2, D-2**

diagnostics **B-4**

Ethernet **D-3**

Ethernet management **3-3**

Fibre Channel **1-6, 3-3**

power

cords and plugs **C-4**

jumper cord **C-5**

receptacle **1-2**

requirements **2-3**

specifications **C-2**

power on self test **B-3**

pre-installation **2-2**

R

rack **2-5, 2-8**

rack-mount

brackets **2-5**

kit **2-6**

recovering a switch **B-6**

Send documentation comments to mdsfeedback-doc@cisco.com.

remake filesystem **B-8**
 required equipment **2-3**
 RJ-45 cable **3-3**
 RS-232 port **3-2**

S

screw torques **2-3**
 serial cable **D-2**
 serial port **1-7**
 SFP transceiver **1-6, 3-4, 3-5, 3-8, D-4**
 shelf brackets **2-8**
 slider bracket **2-8**
 specifications
 power **C-2**
 switch **C-1**
 transceiver **D-5**

switch
 grounding **2-9**
 inspection **2-4**
 installation **2-1**
 LEDs **1-3**
 overheating **B-4**
 rack installation **2-5**
 recovery **B-6**
 reset **1-5, B-8**
 slides **2-6**
 specifications **C-1**
 start up **2-9**
 unpacking **2-4**
 system error **B-3**
 System Fault LED **1-4, B-2**

T

temperature error **B-4**
 terminal emulation **3-2**
 timeout value **B-5**

torques **2-3**
 transceiver
 cable installation **3-6**
 cable removal **3-7**
 description **1-6, 3-4, D-4**
 electrical specifications **D-5**
 general specifications **D-4**
 install **3-5**
 maintenance **3-8**
 remove **3-5**

Z

zone membership conflict **B-5**