



Send documentation comments to mdsfeedback-doc@cisco.com.

CHAPTER **21**

Z Commands

The commands in this chapter apply to the Cisco MDS 9000 Family of multilayer directors and fabric switches. All commands are shown here in alphabetical order regardless of command mode. Please see the Command Mode section to determine the appropriate mode for each command. For more information, see the *Cisco MDS 9000 Family Configuration Guide*.

- zone copy
- zone default-zone
- zone merge
- zone name
- zoneset

zone copy

Send documentation comments to mdsfeedback-doc@cisco.com.

zone copy

To copy the active zoneset to the full zoneset, use the **zone copy** command.

zone copy active -zoneset full-zoneset [vsan integer]

Syntax Description	<i>active-zoneset</i> The zone name of the active zoneset. <i>full-zoneset</i> The zone name of the full zoneset. vsan Indicates that the active-zoneset. <i>integer</i> The id of the VSAN (1-4096).
Defaults	None
Command Modes	EXEC
Usage Guidelines	None.
Examples	<pre>switch# zone copy test1 test2 in default vsan only (vsan1) switch#</pre>

Send documentation comments to mdsfeedback-doc@cisco.com.

zone default-zone

To define whether a default zone (nodes not assigned a created zone) will permit or deny access to all in the default zone, use the **zone default-zone** command. Use the **no** form of this command to deny.

zone default-zone permit vsan number

Syntax Description	zone Zone configuration command. default-zone Define default zoning behavior. permit Default permit. vsan Defines default zoning behavior for the specified VSAN. number The ID of the VSAN (1-4096).
---------------------------	--

Defaults	permit
-----------------	--------

Command Modes	Configuration
----------------------	---------------

Usage Guidelines	None
-------------------------	------

Examples	<pre>switch# config t switch(config)# zone ? default-zone Defines default zoning behavior name Configure a zone switch(config)# zone default-zone ? permit Default permit switch(config)# zone default-zone permit ? vsan Defines default zoning behavior for the specified VSAN switch(config)# zone default-zone permit vsan ? <1-4093> VSAN id range switch(config)# zone default-zone permit vsan 2 ? <cr> Carriage Return</pre>
-----------------	---

zone merge

Send documentation comments to mdsfeedback-doc@cisco.com.

zone merge

To merge zone server databases, use the **zone merge** command. This command can be used to recover from link isolation due to zone merge failure

zone merge interface [fc | port-channel] integer {import | export} vsan vsan int range

Syntax Description	
interface	The name of the interface.
fc integer	A Fibre Channel interface. The <i>integer</i> is the slot number.
port-channel integer	A Port Channel interface. The <i>integer</i> is the Port Channel number.
export	Exports the zone server database to the adjacent switch on the specified interface. The active zoneset in this switch becomes the activated zoneset of the merged SAN.
import	Imports the zone server database to the adjacent switch on the specified interface. The active zoneset in the adjacent switch becomes the activated zoneset of the merged SAN.
vsan	Merges the zone server database of a VSAN on the specified interface.
vsan int range	The id of the VSAN (1-4096).

Defaults	None
Command Modes	EXEC

Usage Guidelines	None.
-------------------------	-------

Examples	switch# zone merge interface port-channel 3 export vsan 3 switch#
-----------------	--

Send documentation comments to mdsfeedback-doc@cisco.com.

zone name

To create a zone, use the **zone name** command.

```
zone name name vsan number [ exit ] [ member fcalias name | fcid value | fwwn value | pwwn value ] [ no ]
```

Syntax Description

zone	Zone configuration command.
name	Configuration zone.
<i>name</i>	Enter the name of zone (Max Size - 64).
vsan	Configure a zone on a VSAN.
<i>number</i>	The ID of the VSAN (1-4096).
exit	Exit from this submode
member	Add a member to zone
fcalias	Add fcalias to zone
<i>name</i>	Enter the name of fcalias (Max Size - 64)
fcid	Add FCID member to zone
fwwn	Add Fabric Port WWN member to zone
pwwn	Add Port WWN member to zone
no	Negate a command or set its defaults

Defaults

None

Command Modes

Configuration

Usage Guidelines

Zones are assigned to Zoneset, Zoneset are then activated from one switch and propagates across fabric to all switches. Zones allow security by permitting and denying access between nodes (hosts and storage). **zone name** commands are issued from the config t mode. Configure a zone for a VSAN from the config-zone sub mode.

Examples

```
switch# config t
switch(config)# zone name ?
<WORD> Enter the name of zone (Max Size - 64)

switch(config)# zone name Somename ?
vsan Configure a zone on a VSAN

switch(config)# zone name Somename vsan ?
<1-4093> VSAN id
switch(config)# zone name somename vsan 1
switch(config-zone)# ?
Configure a zone for a VSAN:
exit Exit from this submode
member Add a member to zone
```

zone name

Send documentation comments to mdsfeedback-doc@cisco.com.

```

no      Negate a command or set its defaults

switch(config-zone)# ?
Configure a zone for a VSAN:
  exit    Exit from this submode
  member  Add a member to zone
  no      Negate a command or set its defaults

switch(config-zone)# member ?
  fcalias Add fcalias to zone
  fcid    Add FCID member to zone
  fwvn   Add Fabric Port WWN member to zone
  pwvn   Add Port WWN member to zone

switch(config-zone)# member fcalias ?
<WORD> Enter the name of fcalias (Max Size - 64)

switch(config-zone)# member fcalias aabb ?
<cr> Carriage Return

switch(config-zone)# member fcalias aabb
Alias not present
switch(config-zone)# member fcid ?
<0xhhhhhh> Enter FCID

switch(config-zone)# member fwvn ?
<hh:hh:hh:hh:hh:hh> Enter Fabric Port WWN

switch(config-zone)# member pwvn ?
<hh:hh:hh:hh:hh:hh> Enter Port WWN

switch(config-zone)# member pwvn

```

Send documentation comments to mdsfeedback-doc@cisco.com.

zoneset

To group zones under one zoneset, use the **zoneset** command.

```
zoneset [ activate name name vsan number ] [distribute full vsan vsan-id][ name string vsan vsan-id]
```

Syntax Description

zoneset	Zoneset configuration command.
activate	Activate a zoneset
name	Zoneset name.
<i>name</i>	Enter name for zoneset.
distribute full	Enable zoneset propagation
name	Configure a zoneset
vsan	Activate a zoneset on the specified VSAN. The id of the VSAN (1-4096).
<i>number</i>	The id of the VSAN (1-4096).

Defaults

None

Command Modes

Configuration

Usage Guidelines

Zones are activated by activating the parent Zoneset.

Examples

```
switch# conf t
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# zoneset ?
  activate    Activates a zoneset
  distribute  Enable zoneset propagation
  name        Configures a zoneset

switch(config)# zoneset name ?
<WORD>  Enter the name of zoneset

switch(config)# zoneset name gottons ?
  vsan   Configures a zoneset on a VSAN

switch(config)# zoneset name gottons vsan 333
switch(config-zoneset)# ?
Configures a zoneset for a VSAN:
  exit      Exit from this submode
  member    Add zone to zoneset
  no       Negate a command or set its defaults
  zone     Configures an __inline__ zone

switch(config-zoneset)# member getsome

switch(config)# zoneset activate name gottons vsan 333
```

zoneset

Send documentation comments to mdsfeedback-doc@cisco.com.

```
Zoneset Activation initiated. check zone status  
switch(config)#
```