



Send documentation comments to mdsfeedback-doc@cisco.com.

CHAPTER

1

CLI Overview

This chapter prepares you to configure switches from the CLI (command-line interface). It also lists the information you need to have before you begin, and it describes the CLI command modes.

This chapter includes the following sections:

- [About the Cisco MDS 9000 Family Switch Prompt, page 1-2](#)
- [About the CLI Command Modes, page 1-3](#)
- [Understanding CLI Command Hierarchy, page 1-4](#)
- [Navigating Through CLI Commands, page 1-9](#)
- [Using the File System, page 1-12](#)
- [Role-Based CLI, page 1-19](#)
- [Using Valid Formats and Ranges, page 1-20](#)

Send documentation comments to mdsfeedback-doc@cisco.com.

About the Cisco MDS 9000 Family Switch Prompt

When the switch boots for the first time, you see the following output if you are connected to the console port:

```
Auto booting bootflash:/boot-279 bootflash:/system_image;...
Booting kickstart image:bootflash:/boot-279...
.....Image verification OK

Starting kernel...
INIT:version 2.78 booting
Checking all filesystems..... done.
Loading system software
Uncompressing system image:bootflash:/system_image
CCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC
INIT:Entering runlevel:3

<<<<<<SAN OS bootup log messages>>>>>>

      ---- Basic System Configuration Dialog ----

This setup utility will guide you through the basic configuration of
the system. Use ctrl-c to abort configuration dialog at any prompt.

Basic management setup configures only enough connectivity for
management of the system.

Would you like to enter the basic configuration dialog (yes/no):yes

<<<<<<after configuration>>>>>>

MDS Switch
switch login:
```



Note

Refer to the *Cisco MDS 9200 Series Hardware Installation Guide* or the *Cisco MDS 9500 Series Hardware Installation Guide* for installation and connection instructions.

When the switch boots each subsequent time, you see the following output if you are connected to the console port:

```
Auto booting bootflash:/boot-279 bootflash:/system_image;...
Booting kickstart image:bootflash:/boot-279...
.....Image verification OK

Starting kernel...
INIT:version 2.78 booting
Checking all filesystems..... done.
Loading system software
Uncompressing system image:bootflash:/system_image
CCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC
INIT:Entering runlevel:3

MDS Switch
switch login:
```

Send documentation comments to mdsfeedback-doc@cisco.com.

Once the switch is powered on successfully, you see the default switch prompt (`switch#`). You can perform embedded CLI operations, access command history, and access command parsing functions at this prompt. The switch gathers the command string upon detecting an **Enter** (CR). It accepts commands from a terminal, from a file (input redirection), or from the piped output from another program.

About the CLI Command Modes

Switches in the Cisco MDS 9000 Family have two main command modes—user EXEC mode and configuration mode. The commands available to you depend on the mode you are in. To obtain a list of available commands in either mode, type a question mark (?) at the system prompt.

[Table 1-1](#) lists and describes the two commonly used modes, how to enter the modes, and the resulting system prompts. The system prompt helps you identify which mode you are in and hence, which commands are available to you.

Table 1-1 Frequently Used Switch Command Modes

| Mode | Description of Use | How to Access | Prompt |
|--------------------|---|---|-----------------|
| EXEC | Enables you to temporarily change terminal settings, perform basic tests, and display system information. Note Changes made in this mode are generally not saved across system resets. | At the switch prompt, enter the required EXEC mode command. | switch# |
| Configuration mode | Enables you to configure features that affect the system as a whole. Note Changes made in this mode are saved across system resets if you save your configuration. See the “Saving a Configuration” section on page 1-19. | From EXEC mode, enter the config terminal command. | switch(config)# |


You can abbreviate commands and keywords by entering just enough characters to make the command unique from other commands. For example, you can abbreviate the **config terminal** command to **conf t**.

[Send documentation comments to mdsfeedback-doc@cisco.com.](mailto:mdsfeedback-doc@cisco.com)

Understanding CLI Command Hierarchy

The CLI commands are organized hierarchically, with commands that perform similar functions grouped under the same level. For example, all commands that display information about the system, configuration, or hardware are grouped under the **show** command, and all commands that allow you to configure the switch are grouped under the **config terminal** command. Figure 1-1 illustrates a portion of the **config terminal** command hierarchy.

Figure 1-1 CLI Command Hierarchy Example

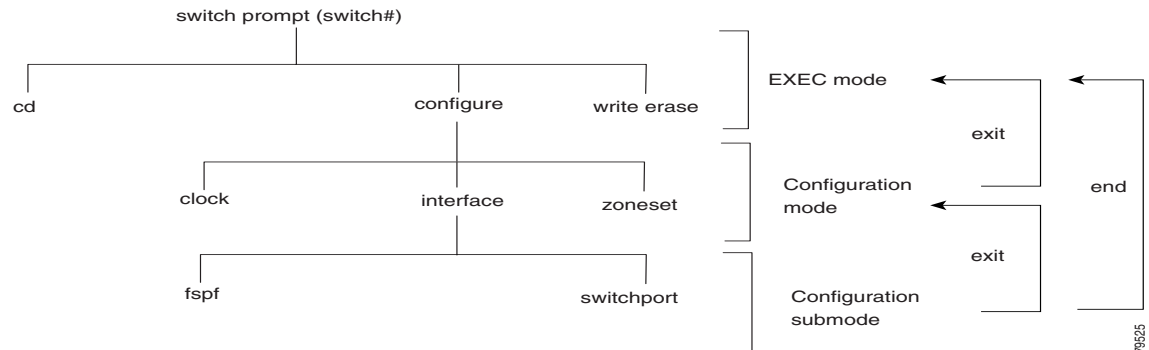

To execute a command, you enter the command by starting at the top level of the hierarchy. For example, to configure a Fibre Channel interface, use the **config terminal** command. Once you are in configuration mode, issue the **interface** command. When you are in the interface submenu, you can query the available commands there.

The following example shows how to query the available commands in the interface submenu:

```

switch# config t
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# interface fc1/1
switch(config-if)# ?
Interface configuration commands:
 channel-group  Add to/remove from a port-channel
 exit           Exit from this submenu
 fcdomain      Enter the interface submenu
 fspf          To configure FSPF related parameters
 no            Negate a command or set its defaults
 shutdown      Enable/disable an interface
 switchport    Configure switchport parameters
  
```

Send documentation comments to mdsfeedback-doc@cisisco.com.

EXEC Mode Options

When you start a session on the switch, you begin in EXEC mode. Based on the role or group to which you belong, you have access to limited commands or to all commands (refer to the *Cisco MDS 9000 Family Configuration Guide*). From the EXEC mode, you can enter configuration mode. Most of the EXEC commands are one-time commands, such as **show** commands, which display the current configuration status. Here is a list of EXEC mode commands:

```
switch# ?
Exec Commands:
  attach      Connect to a specific linecard
  callhome    Callhome commands
  cd          Change current directory
  clear       Reset functions
  clock       Manage the system clock
  config      Enter configuration mode
  copy        Copy from one file to another
  debug       Debugging functions
  delete      Remove files
  dir         Directory listing for files
  discover    Discover information
  exit        Exit from the EXEC
  fcping      Ping an N-Port
  fctrace     Trace the route for an N-Port.
  find        Find a file below the current directory
  format      Format disks
  install     Upgrade software
  load        Load system image
  mkdir       Create new directory
  move        Move files
  no          Disable debugging functions
  ping        Send echo messages
  purge       Deletes unused data
  pwd         View current directory
  reload      Reboot the entire box
  rmdir       Remove existing directory
  run-script  Run shell scripts
  send        Send message to all the open sessions
  setup       Run the basic SETUP command facility
  show        Show running system information
  sleep       Sleep for the specified number of seconds
  system      System management commands
  tail        Display the last part of a file
  telnet      Telnet to another system
  terminal    Set terminal line parameters
  test        Test command
  traceroute  Trace route to destination
  undebg     Disable Debugging functions (See also debug)
  write       Write current configuration
  zone        Execute Zone Server commands
```

Send documentation comments to mdsfeedback-doc@cisco.com.

Configuration Mode

Configuration mode allows you to make changes to the existing configuration. When you save the configuration, these commands are preserved across switch reboots. Once you are in configuration mode, you can enter interface configuration mode, zone configuration mode, and a variety of protocol-specific modes. Configuration mode is the starting point for all configuration commands. When you are in configuration mode, the switch expects configuration commands from the user.

The following example shows output from the **config terminal** command:

```
switch# config terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)#
```

Configuration Mode Commands and Submodes

The following is a list of configuration mode commands:

```
switch# config t
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# ?
Configure commands:
  aaa                Configure AAA
  arp                [no] remove an entry from the ARP cache
  boot              Configure boot variables
  callhome          Enter the callhome configuration mode
  clock            Configure time-of-day clock
  end              Exit from configure mode
  exit             Exit from configure mode
  fcalias          Fcalias configuration commands
  fcanalyzer       Configure cisco fabric analyzer
  fcc              Configure FC Congestion Control
  fcdomain         Enter the fcdomain configuration mode
  fcdroplattency  Configure switch or network latency
  fcflow           Configure fcflow
  fcinterop        Interop commands.
  fcns             Name server configuration
  fcroute          Configure FC routes
  fcs              Configure Fabric Config Server
  fctimer          Configure fibre channel timers
  fspf             Configure fspf
  in-order-guarantee Set in-order delivery guarantee
  interface        Select an interface to configure
  ip               Configure IP features
  line             Configure a terminal line
  logging          Modify message logging facilities
  no               Negate a command or set its defaults
  ntp              NTP Configuration
  power            Configure power supply
  poweroff         Poweroff a module in the switch
  qos              Configure priority of FC control frames
  radius-server    Configure RADIUS related parameters
  role             Configure roles
  rscn             Config commands for RSCN
  snmp-server      Configure snmp server
  span            Enter SPAN configuration mode
  ssh             Configure SSH parameters
  switchname       Configure system's network name
  system          System config command
  telnet          Enable telnet
  trunk           Configure Switch wide trunk protocol
```

Send documentation comments to mdsfeedback-doc@cisco.com.

```
username          Configure user information.
vsan              Enter the vsan configuration mode
wwn              Set secondary base MAC addr and range for additional WWNs
zone             Zone configuration commands
zoneset          Zoneset configuration commands
```

Configuration mode, also known as terminal configuration mode, has several submodes. Each of these submodes places you deeper in the prompt hierarchy. When you type **exit**, the switch backs out one level and returns you to the previous level. When you type **end**, the switch backs out to the user EXEC level. You can also type **Ctrl-Z** in configuration mode as an alternative to typing **end**.



Note

When in configuration mode, you can enter an EXEC mode command followed by a **Ctrl-z**. In response, the switch returns to the EXEC level. The entered command is then executed at the EXEC level. The following example executes the **copy running-config startup-config** command from configuration mode, if you press **Ctrl-z**, instead of **Enter**.

```
switch(config)# copy run start
[#####] 100%
switch#
```

Table 1-2 displays the commonly used configuration submodes.

Table 1-2 Submodes Within the Configuration Mode

| Submode Name | From Configuration Mode Enter | Submode Prompt | Configured Information |
|-------------------------|--|-------------------------------------|--|
| Call Home | callhome | switch(config-callhome)# | Contact, destination, and e-mail |
| FCS Registration | fcs register | switch(config-fcs-register)# | FCS attribute registration |
| | From FCS registration submode: platform name name vsan vsan-id | switch(config-fcs-register-attrib)# | Platform name and VSAN ID association |
| Fibre Channel alias | fcalias name name vsan vsan-id | switch(config-fcalias)# | Alias member |
| FSPF | fspf config vsan vsan-id | switch(config-(fspf-config))# | Static SPF computation, hold time, and autonomous region |
| Interface configuration | interface type slot/port | switch(config-if)# | Channel groups, Fibre Channel domains, FSPF parameters, switch port trunk and beacon information, and IP address |
| | From the VSAN or mgmt0 (management) interface configuration submode: vrrp number | switch(config-if-vrrp)# | Virtual router (refer to the <i>Cisco MDS 9000 Family Configuration Guide</i>) |
| Line console | line console | switch(config-console)# | Primary terminal console |
| VTY | line vty | switch(config-line)# | Virtual terminal line |
| Role | role name | switch(config-role)# | Rule |
| SPAN | span session number | switch(config-span)# | SPAN source, destination, and suspend session information |
| VSAN database | vsan database | switch(config-vsan-db)# | VSAN database |

Send documentation comments to mdsfeedback-doc@cisco.com.

Table 1-2 Submodes Within the Configuration Mode (continued)

| Submode Name | From Configuration Mode Enter | Submode Prompt | Configured Information |
|--------------|---|-------------------------|------------------------|
| Zone | zone name <i>string</i> vsan <i>vsan-id</i> | switch(config-zone)# | Zone member |
| Zone set | zoneset name <i>name</i> vsan <i>vsan-id</i> | switch(config-zoneset)# | Zone set member |

Send documentation comments to mdsfeedback-doc@cisco.com.

Navigating Through CLI Commands

To redisplay a command you previously entered, press the **Up Arrow** key. You can continue to press the **Up Arrow** key to see more previously issued commands. Similarly, you can press the **Down Arrow**, **Right Arrow**, **Left Arrow**, and **Delete** keys to navigate through the command history and to modify an existing command string.

Getting Help

In any command mode, you can get a list of available commands by entering a question mark (?).

```
switch# ?
```

To obtain a list of commands that begin with a particular character sequence, type in those characters followed immediately by the question mark (?). Do not include a space.

```
switch# co?
configure copy
```

To list keywords or arguments, enter a question mark in place of a keyword or argument. Include a space before the question mark. This form of help is called command syntax help, because it reminds you which keywords or arguments are applicable based on the commands, keywords, and arguments you have already entered.

```
switch# config ?
terminal Configure the system from the terminal
```



Tip

If you are having trouble entering a command, check the system prompt and enter the question mark (?) for a list of available commands. You might be in the wrong command mode or using incorrect syntax.

Command Completion

In any command mode, you can begin a particular command sequence and immediately press the **Tab** key to complete the rest of the command.

```
switch (config)# ro<Tab>
switch (config)# role <Tab>
switch (config)# role name
```

This form of help is called command completion, because it completes a word for you. If several options are available for the typed letters, all options that match those letters are presented:

```
switch(config)# fc<Tab>
fcalias          fcdomain          fcs
fcanalyzer       fcdroplacency    fcns              fctimer
fcc              fcinterop        fcroute
switch(config)# fcd<Tab>
fcdomain          fcdroplacency
switch(config)# fcd<Tab>
switch(config)# fcdomain
```

Send documentation comments to mdsfeedback-doc@cisco.com.

Using the no and Default Forms of Commands

You can issue the **no** form of any command to perform the following actions:

- Undo a wrongly issued command.

If you issue the **zone member** command, you can undo the results:

```
switch(config)# zone name test vsan 1
switch(config-zone)# member pwwn 12:12:12:12:12:12:12:12
switch(config-zone)# no member pwwn 12:12:12:12:12:12:12:12
WARNING: Zone is empty. Deleting zone test. Exit the submode.
switch(config-zone)#
```

- Delete a created facility

If you want to delete a zone that you created:

```
switch(config)# zone name test vsan 1
switch(config-zone)# exit
switch(config)# no zone name test vsan 1
switch(config)#
```

You cannot delete a zone facility called test while residing in it. You must first exit the zone submode and return to configuration mode.

Entering CLI Commands

You can configure the software in one of two ways:

- You can create the configuration for the switch interactively, working at the CLI prompt.
- You can create an ASCII file containing a switch configuration and then load this file on the required system. You can then use the CLI to edit and activate the file (refer to the *Cisco MDS 9000 Family Configuration Guide*).

Viewing a Configuration

You can view the ASCII form of the configuration file when required. To view the current configuration tree from the EXEC prompt, issue the **show running-config** command. If the running configuration is different from the startup configuration, issue the **show startup-config** command to view the ASCII version of the current startup configuration that was used to boot the switch.

You can gather specific information on the entire switch configuration by issuing the relevant **show** commands. Available **show** commands for each feature are listed at the end of each chapter.

Examples 1-1 to 1-3 display a few **show** command examples.

Example 1-1 Displays the Specified Interface

```
switch# show interface fc1/1
fc1/1 is up
  Hardware is Fibre Channel, 20:01:ac:16:5e:4a:00:00
  vsan is 1
  Port mode is E
  Speed is 1 Gbps
  Beacon is turned off
  FCID is 0x0b0100
    0 frames input, 0 bytes, 0 discards
```

Send documentation comments to mdsfeedback-doc@cisco.com.

```

0 runts, 0 jabber, 0 too long, 0 too short
0 input errors, 0 CRC, 0 invalid transmission words
0 address id, 0 delimiter
0 EOF abort, 0 fragmented, 0 unknown class
0 frames output, 0 bytes, 0 discards
Received 0 OLS, 0 LRR, 0 NOS, 0 loop inits
Transmitted 0 OLS, 0 LRR, 0 NOS, 0 loop inits

```

Example 1-2 *Displays the Software and Hardware Version*

```

switch# show version
Cisco Storage Area Networking Operating System (SAN-OS) Software
TAC support: http://www.cisco.com/tac
Copyright (c) 2002-2003 by Cisco Systems, Inc. All rights reserved.
The copyright for certain works contained herein are owned by
Andiamo Systems, Inc. and/or other third parties and are used and
distributed under license.

Software
  BIOS:          version 1.0.3
  loader:        version error [last 1.0(1)]
  kickstart:     version 1.1(1) [build 1.1(0.94)] [gdb]
  system:        version 1.1(1) [build 1.1(0.94)] [gdb]

  BIOS compile time:      11/18/02
  kickstart image file is: bootflash:/bootimage
  kickstart compile time: 2/12/2003 11:00:00
  system image file is:   isanimage
  system compile time:    2/12/2003 12:00:00

Hardware
  RAM 1027628 kB

  bootflash: 1000944 blocks (block size 512b)
  slot0:      0 blocks (block size 512b)

172.22.90.171 uptime is 0 days 2 hours 48 minute(s) 26 second(s)

Last reset at 669882 usecs after Thu Feb 13 07:20:41 2003
Reason: Reset Requested by CLI command reload
System version: 1.0(1)

```

Example 1-3 *Displays the Running Configuration*

```

switch# show running-config
Building Configuration ...
  interface fc1/1
  interface fc1/2
  interface fc1/3
  interface fc1/4
  interface mgmt0
ip address 172.22.95.112 255.255.255.0
no shutdown
vsan database
boot system bootflash:system-237; sup-1
boot kickstart bootflash:boot-237 sup-1
callhome
ip default-gateway 172.22.95.1
switchname switch
trunk protocol enable
username admin password 5 /AFDAMD4B2xK2 role network-admin

```

Send documentation comments to mdsfeedback-doc@cisco.com.

Using the File System

The file system on a switch in the supervisor module provides a number of useful commands to help you manage software image files and configuration files.

You have access to two directories within the internal bootflash: file system. They are volatile: (temporary storage, also the default) and bootflash: (permanent storage). Files in temporary storage (volatile:) are erased when the switch reboots.

Setting the Current Directory

The **cd** command changes the current directory level to a specified directory level. CLI defaults to the volatile: files system. This command expects a directory name input.



Tip

Any file saved in the volatile: file system will be erased when the switch reboots.

The syntax for this command is **cd** *directory name*

This example changes the current directory to the mystorage directory that resides in the slot0 directory:

```
switch# cd slot0:mystorage
```

This example changes the current directory to the mystorage directory that resides in the current directory.

```
switch# cd mystorage
```

If the current directory is slot0:mydir, this command changes the current directory to slot0:mydir/mystorage.

Displaying the Current Directory

The **pwd** command displays the current directory location. This example changes the directory and displays the current directory.

```
switch# cd bootflash:
switch# pwd
bootflash:
```

Listing the Files in a Directory

The **dir** command displays the contents of the current directory or the specified directory. The syntax for this command is **dir** *directory or file name*

This example shows how to list the files on the default volatile: file system:

```
switch# dir
Usage for volatile: filesystem
          0 bytes total used
    20971520 bytes free
    20971520 bytes available
```

[Send documentation comments to mdsfeedback-doc@cisco.com.](mailto:mdsfeedback-doc@cisco.com)

Creating a New Directory

The **mkdir** command creates a directory at the current directory level or at a specified directory level.

The syntax for this command is **mkdir** *directory name*

This example creates a directory called test in the slot0 directory.

```
switch# mkdir slot0:test
```

This example creates a directory called test at the current directory level.

```
switch# mkdir test
```

If the current directory is slot0:mydir, this command creates a directory called slot0:mydir/test.

Deleting an Existing Directory

The **rmdir** command deletes an existing directory at the current directory level or at a specified directory level. The directory must be empty to be deleted.

The syntax for this command is **rmdir** *directory name*

This example deletes the directory called test in the slot0 directory.

```
switch# rmdir slot0:test
```

This example deletes the directory called test at the current directory level.

```
switch# rmdir test
```

If the current directory is slot0:mydir, this command deletes the slot0:mydir/test directory.

Moving Files

The **move** command removes a file from the source directory and places it in the destination directory. If a file with the same name already exists in the destination directory, that file is overwritten by the moved file.

This example moves the file called samplefile from the slot0 directory to the mystorage directory.

```
switch# move slot0:samplefile slot0:mystorage/samplefile
```

This example moves a file from the current directory level.

```
switch# move samplefile mystorage/samplefile
```

If the current directory is slot0:mydir, this command moves slot0:mydir/samplefile to slot0:mydir/mystorage/samplefile.

Send documentation comments to mdsfeedback-doc@cisco.com.

Copying Files

The **copy** command copies a file.

This example copies the file called samplefile from the slot0 directory to the mystorage directory.

```
switch# copy slot0:samplefile slot0:mystorage/samplefile
```

This example copies a file from the current directory level.

```
switch# copy samplefile mystorage/samplefile
```

If the current directory is slot0:mydir, this command copies slot0:mydir/samplefile to slot0:mydir/mystorage/samplefile.

You can also use the **copy** command to upload and download files from the slot0: or bootflash: file system to or from a FTP, TFTP, SFTP, or SCP server.

Displaying File Contents

The **show file** command displays the contents of a specified file in the file system.

The syntax for this command is **show file file_name**

This example displays the contents of the test file that resides in the slot0 directory.

```
switch# show file slot0:test
config t
Int fc1/1
no shut
end
show int
```

This example displays the contents of a file residing in the current directory.

```
switch# show file myfile
```

Displaying Disk Usage

The **show flash** command displays the disk usage of various devices.

```
switch# show flash
Filesystem          1k-blocks      Used Available Use% Mounted on
none                409600         37024   372576   10% /system
none                204800         39816   164984   20% /var
none                102400         2084    100316   3% /dev/shm
none                20480          0        20480   0% /volatile
/dev/hd-cfg0        19976         1699    17246   9% /mnt/cfg/0
/dev/hd-pss         20005         1473    17499   8% /mnt/pss
```

Displaying Users

The **show users** command displays all users currently accessing the switch.

```
switch# show users
admin pts/7      Jan 12 20:56 (10.77.202.149)
admin pts/9      Jan 12 23:29 (modena.cisco.com)
admin pts/11     Jan 13 01:53 (dhcp-171-71-49-49.cisco.com)
```

[Send documentation comments to mdsfeedback-doc@cisisco.com.](mailto:mdsfeedback-doc@cisisco.com)

Executing Commands Specified in a Script

The **run-script** command executes the commands specified in a file.



Note

You cannot create the script files at the switch prompt. You can create the script file on an external machine and copy it to the bootflash: directory. This section assumes that the script file resides in the bootflash: directory.

The syntax for this command is **run-script** *file_name*

This example displays the CLI commands specified in the testfile that resides in the slot0 directory.

```
switch# show file slot0:testfile
conf t
interface fc 1/1
no shutdown
end
sh interface fc1/1
```

This file output is in response to the **run-script** command executing the contents in the testfile file:

```
switch# run-script slot0:testfile
'conf t'
Enter configuration commands, one per line. End with CNTL/Z.

'interface fc1/1'

'no shutdown'

'end'

'sh interface fc1/1'
fc1/1 is down (Fcot not present)
Hardware is Fibre Channel
Port WWN is 20:01:00:05:30:00:48:9e
Admin port mode is auto, trunk mode is on
vsan is 1
Beacon is turned off
Counter Values (current):
 0 frames input, 0 bytes, 0 discards
 0 runts, 0 jabber, 0 too long, 0 too short
 0 input errors, 0 CRC, 0 invalid transmission words
 0 address id, 0 delimiter
 0 EOF abort, 0 fragmented, 0 unknown class
 0 frames output, 0 bytes, 0 discards
Received 0 OLS, 0 LRR, 0 NOS, 0 loop inits
Transmitted 0 OLS, 0 LRR, 0 NOS, 0 loop inits
Counter Values (5 minute averages):
 0 frames input, 0 bytes, 0 discards
 0 runts, 0 jabber, 0 too long, 0 too short
 0 input errors, 0 CRC, 0 invalid transmission words
 0 address id, 0 delimiter
 0 EOF abort, 0 fragmented, 0 unknown class
 0 frames output, 0 bytes, 0 discards
Received 0 OLS, 0 LRR, 0 NOS, 0 loop inits
Transmitted 0 OLS, 0 LRR, 0 NOS, 0 loop inits
```

To use this command, be sure to create the file and specify commands in the required order.

Send documentation comments to mdsfeedback-doc@cisco.com.

Setting the Delay Time

The **sleep** command delays an action by a specified number of seconds.

The syntax for this command is **sleep** *<seconds>*

```
switch# sleep 30
```

You will see the switch prompt return after 30 seconds.

This command is useful within scripts. For example, if you create a script called `lashtest-script`:

```
switch# show file slot0:test-script
discover scsi-target remote
sleep 10
show scsi-target disk
```

```
switch# run-script slot0:test-script
```

When you execute the `slot0:test-script`, the switch software executes the **discover scsi-target remote** command, and then waits for 10 seconds before executing the **show scsi-target disk** command.

Displaying the Last Line in a File

The **tail** command displays the last lines (tail end) of a specified file.

The syntax for this command is **tail** *<file name>* [*<number of lines>*]

```
switch# tail mylog 10
```

You see the last 10 lines of the `mylog` file.

If you specify a long file and would like to exit in the middle, enter **Ctrl-c** to exit this command.

Setting the Switch's Shell Timeout

Use the **exec-timeout** command in configuration mode to configure the lifetime of all terminal sessions on that switch. When the time limit configured by this command is exceeded, the shell exits and closes that session.

The syntax for this command from is **exec-timeout** *minutes*

The default is 30 minutes. You can configure different timeout values for a console or a virtual terminal line (VTY) session. You can set the **exec-timeout** value to 0 to disable this feature so the session remains active until you exit the switch. This change is saved in the configuration file.

- From the console:

```
switch(config)# line console
switch(config-console)# exec-timeout 60
```

Specifies the current console shell timeout to be 60 minutes.

- From a VTY session (Telnet or SSH):

```
switch(config)# line vty
switch(config-line)# exec-timeout 60
```

Specifies the current console shell timeout to be 60 minutes.

[Send documentation comments to mdsfeedback-doc@cisco.com.](mailto:mdsfeedback-doc@cisco.com)

Setting the Switch's Terminal Timeout

Use the **terminal session-timeout** command in EXEC mode to configure the automatic logout time for the current terminal session on that switch. When the time limit configured by this command is exceeded, the switch closes that session and exits.

The syntax for this command from is **terminal session-timeout** *minutes*

The default is 30 minutes. You can set the **terminal session-timeout** value to 0 to disable this feature so the terminal remains active until you choose to exit the switch. This change is not saved in the configuration file.

```
switch# terminal session-timeout 600
```

Specifies the terminal timeout to be 600 minutes for the current session.

Setting the Switch's Terminal Type

Use the **terminal terminal-type** command in EXEC mode to specify the terminal type for a switch:

The syntax for this command is **terminal terminal-type** *terminal-type*

```
switch# terminal terminal-type vt100
```

Specifies the terminal type. The *terminal-type* string is restricted to 80 characters and must be a valid type (for example vt100 or xterm). If a Telnet or SSH session specifies an unknown terminal type, the switch uses the vt100 terminal by default.

Setting the Switch's Terminal Length

To set the terminal screen length for the current session, use the **terminal length** command in EXEC mode:

The syntax for this command is **terminal length** *lines*

```
switch# terminal length 20
```

Sets the screen length for the current session to 20 lines for the current terminal session. The default is 24 lines.

This command is specific to only the console port. Telnet and SSH sessions set the length automatically.

Setting the Switch's Terminal Width

To set the terminal screen width for the current session, use the **terminal width** command in EXEC mode:

The syntax for this command is **terminal width** *columns*

```
switch# terminal width 86
```

Sets the screen length for the current session to 86 columns for the current terminal session. The default is 80 columns.

This command is specific to only the console port. Telnet and SSH sessions set the width automatically.

Send documentation comments to mdsfeedback-doc@cisco.com.

Displaying Terminal Settings

The `show terminal` command displays the terminal settings for the current session:

```
switch# show terminal
TTY: Type: "vt100"
Length: 24 lines, Width: 80 columns
Session Timeout: 525600 minutes
```

Saving Command Output to a File

You can force all screen output to go to a file by appending `> filename` to any command. For example, enter `show interface > samplefile` at the EXEC mode switch prompt to save the interface configuration to `samplefile`—a file created at the same directory level. At the EXEC mode switch prompt, issue a `dir` command to view all files in this directory, including the recently saved `samplefile`.

Refer to the *Cisco MDS 9000 Family Configuration Guide*.



Note

Redirection is allowed only if the current directory is on the `volatile:` (default) or `slot0:` file systems. Redirection is not allowed if the current directory is on the `bootflash:` file system. The current directory can be viewed using the `pwd` command and changed using the `cd` command.

Sending Messages to Users

The `send` command sends a message to all active CLI users currently using the switch. This message is restricted to 80 alphanumeric characters with spaces.

This example sends a warning message to all active users about the switch being shut down.

```
switch# send Shutting down the system in 2 minutes. Please log off.
```

```
Broadcast Message from admin@excal-112
(/dev/pts/3) at 16:50 ...
```

```
Shutting down the system in 2 minutes. Please log off.
```

Using ping

The `ping` command verifies the connectivity of a remote host or server by sending echo messages.

The syntax for this command is `ping <host or ip address>`

```
switch# ping 171.71.181.19
PING 171.71.181.19 (171.71.181.19): 56 data bytes
64 bytes from 171.71.181.19: icmp_seq=0 ttl=121 time=0.8 ms
64 bytes from 171.71.181.19: icmp_seq=1 ttl=121 time=0.8 ms

--- 171.71.181.19 ping statistics ---
2 packets transmitted, 2 packets received, 0% packet loss
round-trip min/avg/max = 0.8/0.8/0.8 ms
```

To abnormally terminate a ping session, type the **Ctrl-C** escape sequence

[Send documentation comments to mdsfeedback-doc@cisco.com.](mailto:mdsfeedback-doc@cisco.com)

Using traceroute

The **traceroute** command prints the routes taken by a specified host or IP address.

The syntax for this command is **traceroute** *<host or ip address>*

```
switch# traceroute www.cisco.com
traceroute to www.cisco.com (171.71.181.19), 30 hops max, 38 byte packets
 1 kingfisher1-92.cisco.com (172.22.92.2)  0.598 ms  0.470 ms  0.484 ms
 2 nubulab-gw1-bldg6.cisco.com (171.71.20.130)  0.698 ms  0.452 ms  0.481 ms
 3 172.24.109.185 (172.24.109.185)  0.478 ms  0.459 ms  0.484 ms
 4 sjc12-lab4-gw2.cisco.com (172.24.111.213)  0.529 ms  0.577 ms  0.480 ms
 5 sjc5-sbb4-gw1.cisco.com (171.71.241.174)  0.521 ms  0.495 ms  0.604 ms
 6 sjc12-dc2-gw2.cisco.com (171.71.241.230)  0.521 ms  0.614 ms  0.479 ms
 7 sjc12-dc2-cec-css1.cisco.com (171.71.181.5)  2.612 ms  2.093 ms  2.118 ms
 8 www.cisco.com (171.71.181.19)  2.496 ms * 2.135 ms
```

To abnormally terminate a traceroute session, type the **Ctrl-C** escape sequence

Saving a Configuration

To save the configuration, enter the **copy running-config startup-config** command from the EXEC mode prompt to save the new configuration into nonvolatile storage. Once this command is issued, the running and the startup copies of the configuration are identical.

Refer to the *Cisco MDS 9000 Family Configuration Guide*.

Clearing a Configuration

To completely clear a configuration, enter the **write erase** command from the EXEC mode prompt. Once this command is issued, the existing configuration is cleared and the switch reverts to factory defaults.

Role-Based CLI

By default, two roles exist in all switches:

- Network operator—Has permission to view the configuration.
- Network administrator—Has permission to execute all commands and to set up to 64 permission levels based on user roles and groups (refer to the *Cisco MDS 9000 Family Configuration Guide*).

When you execute a command, perform command completion, or obtain context sensitive help, the switch software allows the operation to progress if you have the correct permission as specified in the description of the command.

Send documentation comments to mdsfeedback-doc@cisco.com.

Using Valid Formats and Ranges



Note

Do not enter ellipsis (...), vertical bar (|), less or great (<>), bracket ([]), or braces ({ }) in command lines. These characters have special meaning in SAN-OS text strings.

Some commands require a MAC address, IP address, or IDs that must be designated in a standard format or given a range. See [Table 1-3](#).

Table 1-3 Valid Formats and Ranges

| Address | Description | Valid Format Example | Range |
|-----------------------------------|--|-------------------------|-----------------|
| MAC address | 6 bytes in hexadecimal format separated by colons (not case-sensitive) | 00:00:0c:24:d2:Fe | — |
| IP address | 32 bytes, written as 4 octets separated by periods (dotted decimal format) that are made up of a network section, an optional netmask section, and a host section. | 126.2.54.1 | — |
| VSAN | Integer that specifies the VSAN. | 7 | 1 to 4093 |
| Port WWN (pWWN) | Eight hexadecimal numbers separated by colons (not case-sensitive). | 12:34:56:78:9A:BC:dE:F1 | — |
| Node WWN (nWWN) | Eight hexadecimal numbers separated by colons (not case-sensitive). | 12:34:56:78:9A:BC:dE:F1 | — |
| LUN | 8 bytes in hexadecimal format separated by colons. A minimum of two hex characters are acceptable. The valid format is hhhh[:hhhh[:hhhh[:hhhh]]] | 64 (100d = 64h) | — |
| FC ID | Six character hexadecimal value prepended by 0x. | 0xabc123 | — |
| Domain ID | Integer that specifies the domain. | 7 | 1 to 239 |
| Timers | Integer that specifies timers in milliseconds for latency, FC time out values (TOV). | 100 | 0 to 2147483647 |
| Switching module | Slot in which the applicable switching module resides. | 1 | 1 to 15 |
| Switch priority | Integer specifying switch priority. | 5 | 1 to 254 |
| Channel group | Integer that specifies a PortChannel group addition. | 1 | 1 to 100 |
| Fabric Shortest Path First (FSPF) | Integer that specifies the hold time (in milliseconds) before making FSPF computations. | 1000 | 0 to 65535 |
| Fabric Analyzer | The allowed range for the frame size limit in bytes. | 64 | 64 to 65536 |
| Fabric Analyzer captures | An example of 10 frames, limits the number of frames captured to 10. | 10 | 0 to 2147483647 |