

*Send documentation comments to mdsfeedback-doc@cisco.com.*



## INDEX

---

## A

### AAA

- authorization and authentication process [9-4](#)
- setting authentication [9-4](#)
- usage [1-3, 9-1](#)

### Access Control Lists

*See* ACLs

- Access Control Server (ACS) [9-12](#)
- access group, configuring [12-8, B-35](#)
- accounting

    log

- configuring [9-8](#)
- displaying configuration [9-8](#)
- displaying contents [B-55](#)
- displaying size [B-56](#)

    services [9-8](#)

### account name

- default [3-3, 9-10](#)
- maintenance mode [9-10](#)

### ACLs

- access group [12-8](#)
- adding entries [12-7](#)
- clearing counters [12-10, B-7](#)
- configuring [12-3, B-37](#)
- creating [12-6, B-37](#)
- defining [12-6](#)
- displaying configuration [12-10, B-80](#)
- interface application [12-8](#)
- log dump [12-8](#)
- operands [12-7](#)
- removing entries [12-7](#)

### ACS [9-12](#)

- active
- zones [7-7](#)
- zone sets [7-10](#)
- address information, ACL [12-3](#)
- administrative
- speed, configuring [6-8](#)
- states, description [6-4](#)
- administrator password [9-10](#)
- aliases
- configuring [7-5, B-20](#)
- definition [7-4](#)
- displaying [B-59](#)
- renaming [7-12, B-21](#)
- assigning
- alias names [7-5, B-20](#)
- domain IDs [13-4, B-22](#)
- authentication, authorization, and accounting

*See* AAA

- authorization, role-based [9-5](#)

### auto interface mode

- configuring [6-8](#)
- description [6-3](#)

---

## B

### BB\_credits, reason codes [6-5](#)

### beacon mode

- configuring [6-9](#)
- identifying LEDs [6-10](#)

### bootflash recovery [4-5](#)

### buffer-to-buffer credits

*See* BB\_credits

### build fabric frames [13-3](#)

*Send documentation comments to mdsfeedback-doc@cisco.com.*

---

## C

cd command **B-4**  
 Cisco MDS 9020 switch  
   initial setup **3-2 to 3-8**  
   starting a switch **3-2**  
 Cisco SAN-OS features **A-1**  
 clear counters interface command **B-5**  
 clear fspf counters command **B-6**  
 clearing  
   ACL counters **12-10, B-7**  
   FSPF counters **11-4, B-6**  
   interface counters **B-5**  
   startup configuration **2-15, B-123**  
   zone database **B-8**  
   zone sets **7-11**  
 clear ip access-list counters command **B-7**  
 clear zone database command **B-8**  
 CLI  
   accessing submodes **2-6**  
   command  
     modes **2-6**  
     prompt **2-2**  
     scripts **2-19**  
   configuration options **2-12**  
   description **1-4**  
   Fabric Manager alternative **1-4**  
   help **B-29**  
   setting delay time **2-20**  
   setting time delay **B-111**  
 clock command **B-9**  
 clock set command **B-11**  
 command  
   completion **2-11**  
   hierarchy **2-7**  
   keys **2-10**  
   navigation **2-10**  
 command-line interface  
   See CLI

communities, SNMP **10-2**  
 computing routes **11-1**  
 config terminal command **B-12**  
 configuration  
   backing up current **3-20**  
   clearing startup **2-15, B-123**  
   displaying **2-12, B-88**  
   files  
     displaying **3-17**  
     downloading **3-19**  
     saving **3-19**  
   mode  
     commands and submodes **2-9**  
     description **2-8**  
     initiate **B-12**  
     options **2-12**  
     rolling back to previous **3-21**  
     running **2-12**  
     saving **2-14, 3-20**  
     startup **2-12, B-94**  
 console  
   CLI connection **9-2**  
   serial connection **3-9**  
 copy command **B-13**  
 current directory **2-17, B-4**

---

D

database  
 merge **7-14**  
 name server **8-2**  
 zone **7-11, B-8**  
 date  
   configuring **3-11**  
   displaying **B-57**  
 daylight savings time **3-12, B-9**  
 default  
   gateway  
     configuring **3-15**

*Send documentation comments to mdsfeedback-doc@cisco.com.*

- IP static routing **12-2**
  - user **3-3**
  - zones
    - configuring **B-124**
    - description **7-10**
    - policies **7-14**
  - delete command **B-15**
  - deny conditions **12-3, 12-6**
  - Device Manager **1-4**
  - Dijkstra's algorithm **11-2**
  - dir command **B-16**
  - distributed services **15-1**
  - do command **B-17**
  - documentation
    - additional publications **xiv**
  - domain
  - IDs
    - configuring **13-3**
    - distributing **13-2**
    - failure **6-5**
    - preferred **13-5**
    - static **13-5**
  - manager, isolation **6-5**
  - overlap, isolation **6-5**
- 
- E
  - ELP failures **6-5**
  - end command **B-18**
  - environment information **5-3**
  - E ports
    - classes of service **6-3**
    - configuring **6-8**
    - description **6-3**
    - FSPF topology **11-2**
    - isolation **6-5**
    - recovering from isolation **7-11**
  - error
    - detect **15-1**
  - disabled code **6-5**
  - messages **14-1**
  - ESC failure **6-5**
  - Exchange Link Parameter (ELP) **6-5**
  - EXEC mode options **2-8**
  - exit command **B-19**
  - exporting zone databases **7-11**
- 
- F
  - fabric
    - login (FLOGI) **8-1**
    - reconfiguration **13-2**
    - See* build fabric frames
    - See* reconfigure fabric frames
  - Fabric-Device Management Interface
    - See* FDMI
  - Fabric Manager
    - description **1-3, 1-4**
    - Web Client **1-4**
  - fault tolerant fabric
    - example (figure) **11-2**
  - fcalias
    - configuring **B-20**
    - definition **7-4**
    - displaying **B-59**
    - renaming **7-12, B-21**
  - fcalias name command **B-20**
  - fcalias rename command **B-21**
  - fcdomain
    - configuring **13-1, B-22**
    - default settings **13-7**
    - displaying information **13-6, B-60**
    - initiation **13-6**
  - fcdomain command **B-22**
  - FC IDs, allocating **13-2**
  - Fcot not present **6-5**
  - FCS
    - database, displaying **B-64**

*Send documentation comments to mdsfeedback-doc@cisco.com.*

- logging facility **14-2**
  - fctimer command **B-24**
  - FDMI display **8-4, B-66**
  - features **A-1**
  - Fibre Channel domain
    - See* fcdomain
  - files
    - copying **2-18, 3-20, B-13**
    - deleting **2-18, 3-21, B-15**
    - moving **2-18, B-45**
  - file system
    - completion **2-11**
    - listing files **2-17, B-16**
    - setting current directory **2-17, B-4**
    - volatile: **2-16**
  - File Transfer Protocol
    - See* FTP
  - FLOGI, displaying details **8-1, B-68**
  - FL ports
    - classes of service **6-3**
    - configuring **6-8**
    - description **6-3**
    - nonparticipating code **6-5**
  - F ports
    - classes of service **6-3**
    - configuring **6-8**
    - description **6-3**
  - FSPF
    - alternative paths **11-1**
    - clearing counters **11-4, B-6**
    - dead interval, configuring **B-26**
    - default settings **11-6**
    - displaying
      - global information **11-4, B-69**
      - interfaces **11-5, B-69**
    - hello interval, configuring **B-27**
    - hold time range **11-1**
    - link
      - cost, configuring **B-25**
      - state protocol **11-2**
      - reconvergence time **11-2**
      - retransmit interval, configuring **B-28**
      - routing services **11-1**
      - topologies example **11-2**
    - fspf cost command **B-25**
    - fspf dead-interval command **B-26**
    - fspf hello-interval **B-27**
    - fspf retransmit-interval command **B-28**
    - FTP logging facility **14-4**
    - full zone sets
      - considerations **7-7**
      - distribution **7-10**
    - Fx ports
      - configuring **6-8**
      - description **6-3**
- 
- G**
- gateway, configuring **12-2, B-41**
  - group, access **12-8, B-35**
- 
- H**
- hardware
    - displaying inventory **5-2, B-74**
    - overview **1-1**
  - HBA information **8-4**
  - help **2-10, B-29**
  - help command **B-29**
  - high availability, software upgrade **4-3**
- 
- I**
- ICMP packets, type value **12-5**
  - IDs
    - login IDs **3-6**
    - process IDs **16-2**

*Send documentation comments to mdsfeedback-doc@cisco.com.*

image version **4-1**  
 importing database **7-11**  
 inactive code **6-5**  
 install all command **B-31**

  benefits **4-3**  
   failure cases **4-3**  
   function **4-3**  
   requirements **4-2**  
   usage **4-4**

interface fc command **B-32**

interface mgmt command **B-33**

## interfaces

  administrative speed **6-8**  
   characteristics **6-2**  
   configuring **6-6, B-32**  
   counters **B-5**  
   default settings **6-28**  
   description **6-9**  
   displaying **6-12, B-75**  
   IP-ACL **12-8**  
   modes **6-2, 6-8**  
   reason codes **6-4**  
   shut down **B-110**  
   states **6-4**

internal bootflash **2-16**

## IP

  Access Control Lists

*See ACLs*

  address

    default gateway **B-41**  
     logging server **B-44**  
     mgmt0 interface **B-40**

  filters

    contents **12-3**  
     restricting IP traffic **12-3**  
     routing, displaying status **12-11, B-81**

ip access-group command **B-35**  
 ip access-list command **B-37**  
 ip address command **B-40**

ip default-gateway command **B-41**  
 isolation reason codes **6-5**

---

## L

link  
   cost **11-2**  
   failure **6-5**  
   isolation **7-11**  
 Link State Record (LSR) defaults **11-3**  
 local authentication **9-2**  
 log, accounting **B-56**  
 logging  
   configuring **B-42**  
   default settings **14-7**  
   displaying configuration **B-82**  
   facilities **14-4**  
   monitor message **B-43**  
   remote server IP address **B-44**  
   severity levels **14-2**  
   system messages **14-1**  
 logging level command **B-42**  
 logging monitor command **B-43**  
 logging server command **B-44**  
 LSR **11-4**

---

## M

MAC= keyword **12-8**  
 Maintenance button **9-10**  
 management access  
   description **3-9**  
   obtaining **3-14**  
   out-of-band **3-5 to 3-7**  
   using force option **3-14**  
 management interface **12-2**  
   *See mgmt0 interface*  
 mgmt0 interface

*Send documentation comments to mdsfeedback-doc@cisco.com.*

autosensing port [3-13, 6-11](#)  
 configuring [3-13, 6-11, 12-2, B-33](#)  
 IP address [B-40](#)  
 out-of-band configuration [3-6, B-54](#)  
 overview [6-1](#)  
 move command [B-45](#)

---

## N

name server  
 displaying entries [8-2, B-61](#)  
 network  
 administrators, permissions [2-6, 9-2](#)  
 connectivity, diagnose [B-47](#)  
 operators, permissions [2-6, 9-2](#)  
 Network Time Protocol  
*See NTP*  
 NL ports  
 interface modes [6-3](#)  
 zone enforcement [7-9](#)  
 no command form [2-11](#)  
 nonparticipating code [6-5](#)  
 N ports, zone enforcement [7-9](#)  
 NTP  
 configuring [3-13, B-46](#)  
 logging facility [14-2](#)  
 ntp server command [B-46](#)

---

## O

offline code [6-5](#)  
 operational state [6-4](#)

---

## P

passwords  
 administrator [3-3](#)  
 maintenance mode [9-10](#)

---

recover [9-10](#)  
 setting administrator default [3-5](#)

permit conditions [12-3, 12-6](#)

ping command [2-15, B-47](#)

PLOGI [8-2](#)

port

configuring [B-117](#)  
 information [12-4](#)  
 modes [6-3, B-117](#)  
 speeds [B-117](#)

Port Login (PLOGI) [8-2](#)

Port world wide name

*See pWWNs*

power supply status [5-3, B-58](#)  
 preferred domain IDs [13-4](#)  
 principal switches

assigning domain ID [13-4](#)  
 configuring [13-5](#)  
 selecting [13-1](#)

processes, displaying [B-86](#)  
 process logs [16-2](#)  
 protocol information [12-3](#)

pWWNs  
 configuring zones [7-4](#)  
 zone membership [7-2](#)

---

## R

R\_A\_TOV time [6-5](#)

RADIUS

AAA solutions [1-3, 9-1](#)  
 configuring [9-3, B-48](#)  
 displaying configuration [B-87](#)  
 key [9-1, 9-3](#)  
 radius-server host command [B-48](#)  
 reconfigure fabric  
 frames [13-3](#)  
 reason code [6-5](#)  
 reconvergence time, FSPF [11-2](#)

*Send documentation comments to mdsfeedback-doc@cisco.com.*

reload command **B-50**  
 remake file system **4-5**  
 remote logging server **B-44**  
 reserved words, user accounts **9-6**  
 reset reason **B-97**  
 resource allocation **15-1**  
 role-based  
   access **1-3**  
   authorization **9-5**  
 roles **2-6, 9-2**  
 rsa key pairs, generating **9-9**  
 running configuration, displaying **B-88**  
 run-script command **B-51**

---

## S

scripts  
   running **2-19, B-51**  
   setting delay time **2-20, B-111**  
 secret **9-3**  
 Secure Shell Protocol  
   *See* SSH  
 security  
   access **1-3**  
   control  
     local **9-2, 9-4**  
     remote **9-2**  
   management **1-3**  
 server  
   NTP **B-46**  
   RADIUS **9-3, B-48**  
   remote logging **B-44**  
   SNMP **B-112**  
   SSH **B-93**  
   Telnet **B-102, B-119**  
 setup command **3-8, B-53**  
 setup options **3-4**  
 severity levels, logging **14-3**  
 SFP transmitter types **6-10**

shared secret **9-3**  
 show accounting log command **B-55**  
 show accounting logsizze command **B-56**  
 show clock command **B-57**  
 show environment command **B-58**  
 show fcalias command **B-59**  
 show fcdomain command **B-60**  
 show fcns database command **B-61**  
 show fcs database command **B-64**  
 show fctimer command **B-65**  
 show fdmi database command **B-66**  
 show flogi database command **B-68**  
 show fsfp command **B-69**  
 show hardware command **B-74**  
 show interface command **B-75**  
 show ip access-list command **B-80**  
 show ip route command **B-81**  
 show logging command **B-82**  
 show module command **B-85**  
 show processes command **B-86**  
 show radius-server command **B-87**  
 show running-config command **B-88**  
 show snmp command **B-90**  
 show sprom mgmt-module command **B-92**  
 show ssh server command **B-93**  
 show startup-config command **B-94**  
 show switchname command **B-96**  
 show system command **B-97**  
 show tech-support command **B-98**  
 show telnet server command **B-102**  
 show terminal command **B-103**  
 show user account command **B-104**  
 show users command **B-105**  
 show version command **B-106**  
 show zone command **B-107**  
 show zoneset command **B-109**  
 shutdown command **B-110**  
 Simple Network Management Protocol  
   *See* SNMP

*Send documentation comments to mdsfeedback-doc@cisco.com.*

- sleep command [B-111](#)
- SNMP
  - communities [10-2](#)
  - contact information [10-4](#)
  - displaying information [10-4, B-90](#)
  - notifications [10-3, B-113](#)
  - read-write access [10-2](#)
  - security features [9-2](#)
  - server configuration [B-112](#)
  - versions [10-1](#)
  - snmp-server command [B-112](#)
  - snmp-server host command [B-113](#)
  - software
    - features [1-2](#)
    - images, space requirement [4-2](#)
    - upgrade
      - disruptive [4-4, B-31](#)
      - mechanisms [4-3](#)
      - requirements [4-1](#)
    - upgrade methods [4-3](#)
    - version, displaying [B-106](#)
  - SPROM, displaying contents [B-92](#)
  - SSH
    - CLI connection [9-2](#)
    - default service [9-9](#)
    - description [1-3](#)
    - key [9-9, B-114](#)
    - protocol status [9-10](#)
    - server
      - enable [B-115](#)
      - status [B-93](#)
    - ssh key command [B-114](#)
    - ssh server enable command [B-115](#)
  - startup configuration
    - clearing [B-123](#)
    - displaying [B-94](#)
  - static domain IDs [13-4](#)
  - storage devices
    - access control [7-1](#)
- permanent [2-16](#)
- temporary [2-16](#)
- subnet mask
  - configuring mgmt0 interface [3-13](#)
  - initial configuration [3-6](#)
- switches
  - access security [1-3](#)
  - configuration [2-14, 2-15](#)
  - display configuration [2-12](#)
  - hardware [5-2](#)
- names
  - assigning [3-10, B-116](#)
  - displaying [B-96](#)
- power supply status [5-3](#)
- priority, configuring [13-5](#)
- reliability service [1-2](#)
- resetting [B-50](#)
- security, default settings [9-14](#)
- serial number [5-2, B-85](#)
- SNMP information [10-2](#)
- temperature [5-3](#)
- uptime [B-85, B-97](#)
- verifying status [3-10](#)
- switchname command [B-116](#)
- switchport command [B-117](#)
- syslog messages
  - See* system messages
- system
  - information, displaying [B-97](#)
  - messages
    - accessing [14-1](#)
    - configuring [14-3](#)
    - default settings [14-7](#)
    - description [1-3](#)
    - displaying configuration [14-5](#)
    - logging server [14-1, 14-3](#)
  - processes
    - displaying [16-1](#)
    - status [16-3](#)

*Send documentation comments to mdsfeedback-doc@cisco.com.*

---

T

TCP ports, ACLs **12-4**  
 technical support **B-98**  
 Telnet  
   CLI connection **9-2**  
   configuration, displaying **B-102**  
   default service **9-9**  
   server connections  
     description **3-16**  
     disabling **3-16, B-119**  
     enabling **B-119**  
 telnet server enable command **B-119**  
 temperature, displaying **B-58**  
 terminal  
   configuring attributes **B-120**  
   displaying settings **2-16, B-103**  
   length **2-16**  
   timeout **2-16**  
 terminal command **B-120**  
 time  
   configuring **3-11, B-9, B-11**  
   displaying **B-57**  
 zones  
   configuring **3-11, B-9**  
   displaying **B-57**  
 timeout values **15-1**  
 timer  
   configuration **15-2, B-24**  
   default values **15-5**  
   displaying values **15-2, B-65**  
 TOS information **12-5**  
 TOV ranges **15-1**  
 traffic management services **12-1**  
 transmitter types **6-10**  
 troubleshooting  
   collecting output **15-2, B-98**  
   error messages **14-1**

---

U

UDP ports, ACLs **12-4**  
 upgrade  
   methods **4-3**  
   requirements **4-1**  
 uptime **B-97**  
 user  
   accounts  
     creating **3-6, 9-6, B-121**  
     displaying **2-15, 9-7, B-104**  
     updating **9-6**  
   authentication **1-3, 9-2**  
   logged in, displaying **B-105**  
   profile **9-6**  
   security management **1-3**  
   username command **B-121**

---



---

V

version, displaying **B-106**  
 volatile: file system  
   description **2-16**  
   switch reboots **2-17**

---



---

W

write erase command **B-123**

---



---

Z

zone default-zone command **B-124**  
 zone name command **B-125**  
 zone rename command **B-127**  
 zones  
   access control **7-6**  
   assigning members **7-4**  
   configuring default **B-124**

*Send documentation comments to mdsfeedback-doc@cisco.com.*

creating [7-5](#), [B-125](#)  
database [7-11](#), [B-8](#)  
default  
    policy [7-2](#)  
    settings [7-14](#)  
description [1-2](#)  
displaying information [7-12 to 7-13](#), [B-107](#)  
enforcement [7-9](#)  
examples [7-3](#)  
logging facility [14-2](#)  
merge failure [6-5](#)  
renaming [7-12](#), [B-127](#)  
*See also* default zones  
zoneset command [B-128](#)  
zone sets  
    accesses between devices [1-2](#)  
    activating [7-9](#)  
    active [7-7](#)  
    configuring [7-6](#), [B-128](#)  
    creating [7-6](#)  
    displaying information [B-109](#)  
    distributing [7-10](#)  
    renaming [7-12](#)  
    *See active zone sets*  
    *See full zone sets*  
zoning features [7-2](#)