



Q Commands

This chapter describes the Cisco Nexus 1000V commands that begin with the letter Q.

qos statistics

To enable the recording of QoS statistics, use the **qos statistics** command. To disable the recording of QoS statistics, use the **no** form of this command.

qos statistics

no qos statistics

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Defaults	QoS statistics are not recorded.
-----------------	----------------------------------

Command Modes	Global Configuration (config)
----------------------	-------------------------------

Supported User Roles	network-admin
-----------------------------	---------------

Command History	Release	Modification
	4.0(4)SV1(1)	This command was introduced.

Examples	This example shows how to enable the recording of QoS statistics:
-----------------	---

```
n1000v# configure terminal
n1000v(config)# qos statistics
n1000v(config)#
```

Send document comments to nexus1k-docfeedback@cisco.com.

Related Commands

Command	Description
show qos	Displays QoS informaton.