

Send comments to nexus5k-docfeedback@cisco.com



I Commands

This chapter describes the Cisco NX-OS Layer 3 interfaces commands that begin with I.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

ip address

To set a primary or secondary IP address for an interface, use the **ip address** command. To remove an IP address or disable IP processing, use the **no** form of this command.

ip address *ip-address mask* [**secondary**]

no ip address *ip-address mask* [**secondary**]

Syntax Description

<i>ip-address</i>	IPv4 address in the format <i>A.B.C.D</i> or <i>A.B.C.D/length</i> .
<i>mask</i>	Mask for the associated IP subnet.
secondary	(Optional) Specifies that the configured address is a secondary IP address. If this keyword is omitted, the configured address is the primary IP address.

Command Default

No IP address is defined for the interface.

Command Modes

Interface configuration mode
Subinterface configuration mode

Command History

Release	Modification
5.0(3)N1(1)	This command was introduced.

Usage Guidelines



Note

Before you use this command, make sure that you use the **no switchport** command on the interface to use the Layer 3 features.

An interface can have one primary IP address and one secondary IP address.

You can disable IP processing on a particular interface by removing its IP address with the **no ip address** command.

The optional **secondary** keyword allows you to specify a secondary IP address. Secondary addresses are treated like primary addresses, except the system never generates datagrams other than routing updates with secondary source addresses. IP broadcasts and Address Resolution Protocol (ARP) requests are handled, as are interface routes in the IP routing table.



Note

When you are routing using the Open Shortest Path First (OSPF) algorithm, ensure that the secondary address of an interface fall into the same OSPF area as the primary addresses.

Examples

This example shows how to configure the IP address 192.168.0.27 as the primary address and 192.168.0.5 as the secondary address for Ethernet interface 1/5:

Send comments to nexus5k-docfeedback@cisco.com

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# ip address 192.168.0.27 255.255.255.0
switch(config-if )# ip address 192.168.0.5 255.255.255.0 secondary
switch(config-if)#
```

Related Commands

Command	Description
copy running-config startup-config	Saves the configuration change to the startup configuration file.
no switchport	Enables an interface for Layer 3 configuration.
show ip interface	Displays interfaces configured for IPv4.

Send comments to nexus5k-docfeedback@cisco.com

ip arp

To configure a static Address Resolution Protocol (ARP) entry, use the **ip arp** command. To remove a static ARP entry, use the **no** form of this command.

ip arp *ip-address mac-address*

no ip arp *ip-address*

Syntax Description	<i>ip-address</i>	IPv4 address, in <i>A.B.C.D</i> format.
	<i>mac-address</i>	MAC address in one of the following formats: - E.E.E - EE-EE-EE-EE-EE-EE - EE:EE:EE:EE:EE:EE - EEEE.EEEE.EEEE

Command Default	None
------------------------	------

Command Modes	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	Use this command on Layer 3 interfaces and Layer 3 subinterfaces.
-------------------------	---

Examples This example shows how to configure a static ARP entry on interface Ethernet 1/2:

```
switch(config)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# ip arp 192.0.2.1 0150.5a03.efab
switch(config-if)#
```

This example shows how to configure a static ARP entry on a subinterface:

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# interface ethernet 1/1.1
switch(config-subif)# ip arp 192.0.2.1 0150.5a03.efab
switch(config-subif)#
```

Related Commands	Command	Description
	show ip arp	Displays ARP entries.

Send comments to nexus5k-docfeedback@cisco.com

ip arp gratuitous

To enable gratuitous Address Resolution Protocol (ARP), use the **ip arp gratuitous** command. To disable gratuitous ARP, use the **no** form of this command.

ip arp gratuitous {request | update}

no ip arp gratuitous {request | update}

Syntax Description

request	Enables sending gratuitous ARP requests when a duplicate address is detected.
update	Enables ARP cache updates for gratuitous ARP.

Command Default

Enabled

Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

Examples

This example shows how to disable gratuitous ARP request on interface Ethernet 2/1:

```
switch(config)# interface ethernet 1/2
switch(config-if)# no switchport
switch(config-if)# ip arp gratuitous
switch(config-if)#
```

Related Commands

Command	Description
ip arp	Configures a static ARP entry.
show ip arp	Displays ARP configuration information.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

ip arp timeout

To configure an Address Resolution Protocol (ARP) timeout, use the **ip arp timeout** command. To revert to the default value, use the **no** form of this command.

ip arp timeout *timeout-value*

no ip arp timeout

Syntax Description	<i>timeout-value</i>	Time (in seconds) that an entry remains in the ARP cache. Valid values are from 60 to 28800, and the default is 1500.
---------------------------	----------------------	---

Command Default	1500 seconds
------------------------	--------------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.0(2)N1(1)	This command was introduced.

Examples This example shows how to configure the ARP timeout value to 120 seconds:

```
switch(config)# ip arp timeout 120
switch(config)#
```

This example shows how to revert to the default ARP timeout value of 1500 seconds:

```
switch(config)# no ip arp timeout
switch(config)#
```

Related Commands	Command	Description
	show running-config arp all	Displays the ARP configuration, including the default configurations.

Send comments to nexus5k-docfeedback@cisco.com

ip directed-broadcast

To enable the translation of a directed broadcast to physical broadcasts, use the **ip directed-broadcast** command. To disable this function, use the **no** form of this command.

ip directed-broadcast

no ip directed-broadcast

Syntax Description

This command has no arguments or keywords.

Command Default

Disabled; all IP directed broadcasts are dropped.

Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

Usage Guidelines

An IP directed broadcast is an IP packet whose destination address is a valid broadcast address for some IP subnet but which originates from a node that is not itself part of that destination subnet.

A device that is not directly connected to its destination subnet forwards an IP directed broadcast in the same way it would forward unicast IP packets destined to a host on that subnet. When a directed broadcast packet reaches a device that is directly connected to its destination subnet, that packet is broadcast on the destination subnet. The destination address in the IP header of the packet is rewritten to the configured IP broadcast address for the subnet, and the packet is sent as a link-layer broadcast.

If directed broadcast is enabled for an interface, incoming IP packets whose addresses identify them as directed broadcasts intended for the subnet to which that interface is attached are broadcast on that subnet.

If the **no ip directed-broadcast** command has been configured for an interface, directed broadcasts destined for the subnet to which that interface is attached are dropped, rather than being broadcast.



Note

Because directed broadcasts, and particularly Internet Control Message Protocol (ICMP) directed broadcasts, have been abused by malicious persons, we recommend that you disable the **ip directed-broadcast** command on any interface where directed broadcasts are not needed. We also recommend that you use access lists to limit the number of broadcast packets.

Examples

This example shows how to enable forwarding of IP directed broadcasts on Ethernet interface 2/1:

```
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip directed-broadcast
switch(config-if)#
```

Send comments to nexus5k-docfeedback@cisco.com

Related Commands

Command	Description
show ip interface	Displays IP information for an interface.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

interface ethernet (Layer 3)

To configure a Layer 3 Ethernet IEEE 802.3 routed interface, use the **interface ethernet** command.

interface ethernet [*chassis_ID*] *slot/port* [*.subintf-port-no*]

Syntax Description	<i>chassis_ID</i>	(Optional) Specifies the Fabric Extender chassis ID. The chassis ID is from 100 to 199. Note This argument is not optional when addressing the host interfaces of a Cisco Nexus 2000 Series Fabric Extender.
	<i>slot</i>	Slot from 1 to 3. The following list defines the slots available: - Slot 1 includes all the fixed ports. A Fabric Extender only has one slot. - Slot 2 includes the ports on the upper expansion module (if populated). - Slot 3 includes the ports on the lower expansion module (if populated).
	<i>port</i>	Port number within a particular slot. The port number is from 1 to 128.
	.	(Optional) Specifies the subinterface separator.
	<i>subintf-port-no</i>	(Optional) Port number for the subinterface. The range is from 1 to 48.

Command Default	None
-----------------	------

Command Modes	Global configuration mode Interface configuration mode
---------------	---

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	You must use the no switchport command in the interface configuration mode to configure the interface as a Layer 3 routed interface. When you configure the interface as a Layer 3 interface, all Layer 2 specific configurations on this interface are deleted. Use the switchport command to convert a Layer 3 interface into a Layer 2 interface. When you configure the interface as a Layer 2 interface, all Layer 3 specific configurations on this interface are deleted.
------------------	--

Examples	This example shows how to enter configuration mode for a Layer 3 Ethernet interface 1/5: <pre>switch(config)# interface ethernet 1/5 switch(config-if)# no switchport switch(config-if)# ip address 10.1.1.1/24 switch(config-if)#</pre>
----------	---

This example shows how to enter configuration mode for a host interface on a Fabric Extender:

```
switch(config)# interface ethernet 101/1/1
```

Send comments to nexus5k-docfeedback@cisco.com

```
switch(config-if)# no switchport
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)#
```

This example shows how to configure a Layer 3 subinterface for Ethernet interface 1/5 in the global configuration mode:

```
switch(config)# interface ethernet 1/5.2
switch(config-if)# no switchport
switch(config-subif)# ip address 10.1.1.1/24
switch(config-subif)#
```

This example shows how to configure a Layer 3 subinterface in interface configuration mode:

```
switch(config)# interface ethernet 1/5
switch(config-if)# interface ethernet 1/5.1
switch(config-if)# no switchport
switch(config-subif)# ip address 10.1.1.1/24
switch(config-subif)#
```

This example shows how to convert a Layer 3 interface to a Layer 2 interface:

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# ip address 10.1.1.1/24
switch(config-if)# switchport
switch(config-if)#
```

Related Commands

Command	Description
bandwidth	Sets the bandwidth parameters for an interface.
delay	Configures the interface throughput delay value.
encapsulation	Sets the encapsulation type for an interface.
ip address	Sets a primary or secondary IP address for an interface.
inherit	Assigns a port profile to an interface.
interface vethernet	Configures a virtual Ethernet interface.
no switchport	Configures an interface as a Layer 3 interface.
service-policy	Configures a service policy for an interface.
show fex	Displays all configured Fabric Extender chassis connected to the switch.
show interface ethernet	Displays various parameters of an Ethernet IEEE 802.3 interface.

Send comments to nexus5k-docfeedback@cisco.com

ip local-proxy-arp

To enable the local proxy Address Resolution Protocol (ARP) feature, use the **ip local-proxy-arp** command. To disable this feature, use the **no** form of this command.

ip local-proxy-arp

no ip local-proxy-arp

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	Disabled
------------------------	----------

Command Modes	Interface configuration mode Subinterface configuration mode
----------------------	---

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	Before the local proxy ARP feature can be used, you must enable the IP proxy ARP feature by using the ip proxy-arp command. The IP proxy ARP feature is disabled by default.
-------------------------	---



Note

This command is not applicable to Layer 3 loopback interfaces.
--

Examples	This example shows how to enable the local proxy ARP:
-----------------	---

```
switch(config)# interface ethernet 1/5
switch(config-if)# no switchport
switch(config-if)# ip arp local-proxy-arp
switch(config-if)#
```

Related Commands	Command	Description
	copy running-config startup-config	Saves the configuration to the startup configuration file.
	ip proxy-arp	Enables proxy ARP on an interface.
	show ip arp	Displays ARP configuration information.

Send comments to nexus5k-docfeedback@cisco.com

interface loopback

To create a loopback interface and enter interface configuration mode, use the **interface loopback** command. To remove a loopback interface, use the **no** form of this command.

interface loopback *number*

no interface loopback *number*

Syntax Description	<i>number</i>	Interface number; valid values are from 0 to 1023.
---------------------------	---------------	--

Command Default	None
------------------------	------

Command Modes	Global configuration mode
----------------------	---------------------------

Command History	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Usage Guidelines	Use the interface loopback command to create or modify loopback interfaces.
	From the loopback interface configuration mode, the following parameters are available: • description—Provides a description of the purpose of the interface. • ip—Configures IP features, such as the IP address for the interface, Address Resolution Protocol (ARP) attributes, load balancing, Unicast Reverse Path Forwarding (RPF) or IP Source Guard. • logging—Configure logging of events. • shutdown—Shut down traffic on the interface.
	This command does not require a license.

Examples	This example shows how to create a loopback interface: <pre>switch(config)# interface loopback 50 switch(config-if)# ip address 10.1.1.1/24 switch(config-if)#</pre>
-----------------	---

Related Commands	Command	Description
	show interface loopback	Displays information about the traffic on the specified loopback interface.

Send comments to nexus5k-docfeedback@cisco.com

interface port-channel

To create an EtherChannel interface and enter interface configuration mode, use the **interface port-channel** command. To remove an EtherChannel interface, use the **no** form of this command.

interface port-channel *channel-number* [*.subintf-channel-no*]

no interface port-channel *channel-number* [*.subintf-channel-no*]

Syntax Description	<i>channel-number</i>	Channel number that is assigned to this EtherChannel logical interface. The range is from 1 to 4096.
	.	(Optional) Specifies the subinterface separator. Note Applies to Layer 3 interfaces.
	<i>subintf-channel-no</i>	(Optional) Port number of the EtherChannel subinterface. The range is from 1 to 4093. Note Applies to Layer 3 interfaces.

Command Default	None
-----------------	------

Command Modes	Global configuration mode Interface configuration mode
---------------	---

Command History	Release	Modification
	4.0(0)N1(1a)	This command was introduced.
	5.0(3)N1(1)	Support for Layer 3 interfaces and subinterfaces was added.

Usage Guidelines	A port can belong to only one channel group.
	When you use the interface port-channel command for Layer 2 interfaces, follow these guidelines:
	• If you are using CDP, you must configure it only on the physical interface and not on the EtherChannel interface. • If you do not assign a static MAC address on the EtherChannel interface, a MAC address is automatically assigned. If you assign a static MAC address and then later remove it, the MAC address is automatically assigned. • The MAC address of the EtherChannel is the address of the first operational port added to the channel group. If this first-added port is removed from the channel, the MAC address comes from the next operational port added, if there is one.
You must use the no switchport command in the interface configuration mode to configure the EtherChannel interface as a Layer 3 interface. When you configure the interface as a Layer 3 interface, all Layer 2 specific configurations on this interface are deleted.	

Send comments to nexus5k-docfeedback@cisco.com

Use the **switchport** command to convert a Layer 3 EtherChannel interface into a Layer 2 interface. When you configure the interface as a Layer 2 interface, all Layer 3 specific configurations on this interface are deleted.

You can configure one or more subinterfaces on a port channel made from routed interfaces.

Examples

This example shows how to create an EtherChannel group interface with channel-group number 50:

```
switch(config)# interface port-channel 50
switch(config-if)#
```

This example shows how to create a Layer 3 EtherChannel group interface with channel-group number 10:

```
switch(config)# interface port-channel 10
switch(config-if)# no switchport
switch(config-if)# ip address 192.0.2.1/24
switch(config-if)#
```

This example shows how to configure a Layer 3 EtherChannel subinterface with channel-group number 1 in interface configuration mode:

```
switch(config)# interface port-channel 10
switch(config-if)# no switchport
switch(config-if)# interface port-channel 10.1
switch(config-subif)# ip address 192.0.2.2/24
switch(config-subif)#
```

This example shows how to configure a Layer 3 EtherChannel subinterface with channel-group number 20.1 in global configuration mode:

```
switch(config)# interface port-channel 20.1
switch(config-subif)# ip address 192.0.2.3/24
switch(config-subif)#
```

Related Commands

Command	Description
encapsulation	(Layer 3 interfaces) Sets the encapsulation type for an interface.
ip address	(Layer 3 interfaces) Sets a primary or secondary IP address for an interface.
no switchport	(Layer 3 interfaces) Configures an interface as a Layer 3 interface.
show interface	Displays configuration information about interfaces.
show lacp	Displays LACP information.
show port-channel summary	Displays information on the EtherChannels.
vtp (interface)	Enables VLAN Trunking Protocol (VTP) on an interface.

Send comments to nexus5k-docfeedback@cisco.com

ip port-unreachable

To enable the generation of Internet Control Message Protocol (ICMP) port unreachable messages, use the **ip port-unreachable** command. To disable this function, use the **no** form of this command.

ip port-unreachable

no ip port-unreachable

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	Enabled
------------------------	---------

Command Modes	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples	This example shows how to enable the generation of ICMP port unreachable messages, as appropriate, on an interface:
-----------------	---

```
switch# configure terminal
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip port-unreachable
```

Related Commands	Command	Description
	ip unreachable	Sends ICMP unreachable messages.

Send comments to nexus5k-docfeedback@cisco.com

ip proxy-arp

To enable proxy Address Resolution Protocol (ARP) on an interface, use the **ip proxy-arp** command. To disable proxy ARP on the interface, use the **no** form of this command.

ip proxy-arp

no ip proxy-arp

Syntax Description

This command has no arguments or keywords.

Command Default

Disabled

Command Modes

Release	Modification
5.0(3)N1(1)	This command was introduced.

Examples

This example shows how to enable proxy ARP:

```
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip proxy-arp
switch(config-if)#
```

Related Commands

Command	Description
copy running-config startup-config	Saves the configuration to the startup configuration file.
show ip arp	Displays ARP configuration information.

Send comments to nexus5k-docfeedback@cisco.com

ip tcp path-mtu-discovery

To enable path maximum transmission unit (MTU) discovery on an IPv4 interface, use the **ip tcp path-mtu discovery** command. To disable this feature, use the **no** form of this command.

ip tcp path-mtu discovery

no ip tcp path-mtu discovery

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	Disabled
------------------------	----------

Command Modes	
----------------------	--

Release	Modification
5.0(3)N1(1)	This command was introduced.

Examples	This example shows how to enable path MTU discovery for IPv4:
-----------------	---

```
switch# configure terminal
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip tcp path-mtu-discovery
switch(config-if)#
```

Related Commands	<table><tr><th>Command</th><th>Description</th></tr><tr><td>show ip arp</td><td>Displays ARP configuration information.</td></tr></table>	Command	Description	show ip arp	Displays ARP configuration information.
Command	Description				
show ip arp	Displays ARP configuration information.				

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

ip tcp synwait-time

To set a period of time the Cisco NX-OS software waits while attempting to establish a TCP connection before it times out, use the **ip tcp synwait-time** command. To restore the default time, use the **no** form of this command.

ip tcp synwait-time *seconds*

no ip tcp synwait-time

Syntax Description	<i>seconds</i>	Time, in seconds, the software waits while attempting to establish a TCP connection. It can be an integer from 5 to 300 seconds.
Command Default	5 seconds	
Command Modes	Global configuration mode	
Command History	Release	Modification
	5.1(3)N1(1)	This command was introduced.
Usage Guidelines	This command does not require a license.	
Examples	This example shows how to configure the switch software to continue attempting to establish a TCP connection for 10 seconds: <pre>switch# configure terminal switch(config)# ip tcp synwait-time 10 Setting syn time to 10 seconds switch(config)#</pre> This example shows how to disable TCP synchronization on interfaces: <pre>switch# configure terminal switch(config)# no ip tcp synwait-time switch(config)#</pre>	
Related Commands	Command	Description
	show running-config	Displays the running system configuration information.

Send comments to nexus5k-docfeedback@cisco.com

ip unreachable

To enable the generation of Internet Control Message Protocol (ICMP) unreachable messages, use the **ip unreachable** command. To disable this function, use the **no** form of this command.

ip unreachable

no ip unreachable

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Default	Enabled
------------------------	---------

Command Modes	Release	Modification
	5.0(3)N1(1)	This command was introduced.

Examples	This example shows how to enable the generation of ICMP unreachable messages on an interface:
-----------------	---

```
switch# configure terminal
switch(config)# interface ethernet 2/1
switch(config-if)# no switchport
switch(config-if)# ip unreachable
```

Related Commands	Command	Description
	ip port-unreachable	Sends ICMP port unreachable messages.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

ipv6 nd

To configure IPv6 neighbor discovery (ND), use the **ipv6 nd** command. To remove the IPv6 ND configuration, use the **no** form of this command.

```
ipv6 nd {hop-limit hop-limit | managed-config-flag | mtu | ns-interval ns-interval |
other-config-flag | prefix {A:B::C:D/LEN | default {0-4294967295 | infinite {infinite
[no-autoconfig | no-onlink | off-link]}} | no-advertise}} | ra-interval ra-interval | ra-lifetime
ra-lifetime | reachable-time reachable-time | redirects | retrans-timer retrans-timer |
suppress-ra [mtu]}
```

```
no ipv6 nd {hop-limit hop-limit | managed-config-flag | mtu mtu-size | ns-interval ns-interval |
other-config-flag | prefix {A:B::C:D/LEN | default {0-4294967295 | infinite {infinite
[no-autoconfig | no-onlink | off-link]}} | no-advertise}} | ra-interval ra-interval | ra-lifetime
ra-lifetime | reachable-time reachable-time | redirects | retrans-timer retrans-timer |
suppress-ra [mtu]}
```

Syntax Description

hop-limit	Specifies the hop limit in the IPv6 header.
<i>hop-limit</i>	Hop limit. The range is from 0 to 255.
managed-config-flag	Informs hosts to use stateful address autoconfiguration to obtain address information.
mtu	Specifies the MTU size.
<i>mtu-size</i>	MTU size. The range is from 1280 to 65535.
ns-interval	Specifies the retransmission interval between sending the neighbor-solicitation messages.
<i>ns-interval</i>	Interval in milliseconds. The range is from 1000 to 3600000.
other-config-flag	Informs hosts to use stateful autoconfiguration to obtain non-address related information.
prefix	Specifies the IPv6 prefix to advertise in the router-advertisement message.
A:B::C:D/LEN	Specifies the IPv6 address prefix.
default	Specifies the prefix default parameters.
0-4294967295	Valid value for the life time.
infinite	Specifies the indefinite lifetime.
no-autoconfig	(Optional) Specifies no to use the prefix for autoconfiguration.
no-onlink	(Optional) Specifies not use the prefix for the onlink determination.
off-link	Indicates the prefix is offlink.
no-advertise	Specifies not to advertise the prefix.
ra-interval	Specifies the interval between sending the router-advertisement message.
<i>ra-interval</i>	Router-advertisement message interval. The range is from 4 to 1800.
ra-lifetime	Specifies the router lifetime of a default router.
<i>ra-lifetime</i>	Router-advertisement message lifetime. The range is from 4 to 1800. The value for the default router cannot be 0.
reachable-time	Specifies the advertised time when a node considers a neighbor is up after receiving a reachability confirmation.
<i>reachable-time</i>	Reachable time. The range is from 0 to 3600000.

Send comments to nexus5k-docfeedback@cisco.com

redirects	Enables sending ICMPv6 Redirect messages.
retrans-timer	Specifies the advertised time between NS messages.
<i>retrans-timer</i>	Time between messages. The range is from 0 to 4294967295.
suppress-ra	Disables sending router-advertisement messages.

Defaults

hop-limit-64
mtu-1500
ns-interval-1000
ra-interval-600
reachable-time-0
retrans-timer-0

Command Modes

Interface configuration mode

Command History

Release	Modification
5.2(1)U3(1)	This command was introduced.

Usage Guidelines

This command does not require a license.

Examples

This example shows how to configure IPv6 neighbor discovery:

```
switch# configure terminal  
switch(config)# interface ethernet 1/5  
switch(config-if)# ipv6 nd  
switch(config-if)# ipv6 nd reachable time 30
```

This example shows how to remove IPv6 neighbor discovery:

```
switch(config-if)# no ipv6 nd reachable time 30  
switch(config-if)#
```

Related Commands

Command	Description
show ipv6 nd interface	Displays neighbor discovery interface information.

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com

Send comments to nexus5k-docfeedback@cisco.com