

Send comments to nexus5k-docfeedback@cisco.com



V Commands

This chapter describes the Cisco NX-OS Virtual Router Redundancy Protocol (VRRP) commands that begin with V.

[Send comments to nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

vrrp

To create a Virtual Router Redundancy Protocol (VRRP) group on a particular Ethernet interface and assign a number to the VRRP group and enter VRRP configuration mode, use the **vrrp** command. To remove a VRRP group, use the **no** form of this command.

vrrp *number*

no vrrp *number*

Syntax Description	<i>number</i>	VRRP group number, which you can configure for a Gigabit Ethernet port, including the main interfaces and subinterfaces. The range is from 1 to 255.
Command Default	None	
Command Modes	Interface configuration mode	
Command History	Release	Modified
	5.0(3)N1(1)	This command was introduced.
Usage Guidelines	You can configure VRRP only if its state is disabled. Make sure that you configure at least one IP address before you attempt to enable a virtual router.	
Examples	This example shows how to create a VRRP group: <pre>switch# configure terminal switch(config)# interface ethernet 2/1 switch(config-if)# no switchport switch(config-if)# vrrp 7 switch(config-if-vrrp)#</pre> This example shows how to create a VRRP group and configure an IPv4 address for the group: <pre>switch# configure terminal switch(config)# interface ethernet 2/1 switch(config-if)# no switchport switch(config-if)# vrrp 7 switch(config-if-vrrp)# address 10.0.0.10 switch(config-if-vrrp)# no shutdown switch(config-if-vrrp)#</pre>	
Related Commands	Command	Description
	clear vrrp	Clears all the software counters for the specified virtual router.
	feature vrrp	Enables VRRP.

Send comments to nexus5k-docfeedback@cisco.com

Command	Description
address (VRRP)	Adds a primary or secondary IP address to a virtual router.
show vrrp	Displays VRRP configuration information.

Send comments to nexus5k-docfeedback@cisco.com