



## CHAPTER 2

# Using VM-FEX

---

This chapter describes how to use the Cisco Virtual Machine Fabric Extender (VM-FEX).

This chapter includes the following sections:

- [Information About VM-FEX, page 2-1](#)
- [Hardware and Software Requirements, page 2-7](#)
- [Dynamic Fixed vEthernet Interface Configuration, page 2-8](#)
- [Static Fixed vEthernet Interface Configuration, page 2-9](#)
- [Fixed vEthernet Interface Failback and Failover with a vPC System, page 2-10](#)
- [Fixed Static vEthernet Interface Failback and Failover with a vPC System, page 2-10](#)
- [VM-FEX Configuration Scenario, page 2-11](#)
- [Dynamic Floating vEthernet Interfaces Configuration Scenario, page 2-22](#)
- [VM-to-VM-FEX Connection Scenario, page 2-41](#)
- [VM-FEX Connectivity Verification Scenario, page 2-48](#)
- [VM-FEX Connectivity Verification Scenario, page 2-48](#)
- [Sample Configuration, page 2-52](#)

## Information About VM-FEX

The Cisco Virtual Machine Fabric Extender (VM-FEX) works with a Cisco virtual interface card (VIC) adapter to replace software-based switching on the server with external hardware-based switching. VM-FEX introduces many new components and concepts. It is important to understand these components and concepts in order to successfully deploy VM-FEX in your network.

## VN-Link

A virtual network link (VN-Link) is a virtual network interface card (vNIC) that connects to a virtual Ethernet (vEthernet) interface or virtual host bus adapter (VHBA) that connects to a virtual Fibre Channel (vFC) interface using a Fibre Channel over Ethernet (FCoE) tunnel.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## Static Interfaces

A static interface is an interface with parameters that are configured manually by you as the administrator. A static interface can be a vEthernet or Fibre Channel interface.

For statically created fixed and floating vEthernet interfaces, you as the device administrator can associate the configuration to the vEthernet interface before bringing the interface up. Follow these rules to resolve conflicts:

- Any configuration specified under the vEthernet interface overrides the configuration in the port profile.
- If a vEthernet interface is preconfigured with a port profile and the NIV adapter or vEthernet module signals a different port profile, the port profile specified in the protocol message takes precedence.
- vEthernet configuration or port profile configurations can be specified in a sync profile if configuration synchronization between two Cisco Nexus 5000 Series devices is enabled.

## Static Virtual Adapters

A Static Virtual Adapter is a virtual network interface card (vNIC) or a virtual host bus adapter (vHBA).

## Dynamic Interfaces or Dynamic vNICs

A dynamic interface or dynamic vNIC is a vEthernet interface that gets configured automatically when the adapter and device communicate. The dynamic vNIC inherits the parameters of the virtual network interface card (vNIC) port group on the virtual machine (VM).

A dynamic virtual adapter can be a virtual NIC but not a Virtual HBA. A dynamic virtual interface can be a vEthernet interface. Dynamic interfaces support hardware-based failovers in the, Unified Computing System (UCS), UCS VIC card.

Because dynamic fixed and floating vEthernet interfaces are created dynamically on the device, you cannot have a configuration that is associated with it. As a result, the device can only associate a configuration to this type of vEthernet using the specified port profile in either the VIF\_CREATE or Virtual Ethernet Module (VEM) attach message.

## Floating Virtual Interfaces

In a Cisco network interface virtualization (NIV) environment with a virtual computing, networking, server, and storage architecture, a VM migrates from one physical server to the other with the virtual network link and vEthernet interface on the physical device. A floating virtual interface is a virtual interface that migrates with its profile characteristics and parameters with the VM and virtual network.

For floating (static or dynamic) vEthernet interfaces, configuration changes (including shut or no shut) are allowed at anytime regardless of the attached (hypervisor requested for a vNIC) state except for the binding configuration, which cannot be changed while a vEthernet interface is attached. The binding configuration can be changed only if a vEthernet interfaced is not attached. To see the attachment state of a vEthernet interface, use the **show interface veth** command.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## Fixed vEthernet Interfaces

A fixed vEthernet interface is a virtual interface that does not support migration across physical interfaces.

You can change the configuration of a fixed vEthernet interface (static or dynamic), including using the shut or no shut commands or the create or delete commands anytime. The vEthernet number to channel number binding is persistent unless you change it.

## Dynamic Floating vEthernet Interfaces

The vEthernet interfaces are dynamically created when new VMs are brought up on the hypervisor. A dynamic floating vEthernet interface can move from one VEM to another as VMs are migrated using vMotion. Additionally, the statistics and policies of a dynamic vEthernet interfaces are retained when a VM moves from one host to another.

The following process shows how VMs and their associated vEthernet interfaces are brought up:

1. You create a port profile on the device, and it gets pushed to VMware vCenter (vCenter).
2. vCenter assigns a port group ID or the port profile and responds with the VMware port group ID.
3. When a server administrator brings up a VM on the hypervisor, you as the administrator chooses the port group for the VM and tells the hypervisor to bring up the VM.
4. If the port group that was picked is a port group that belongs to the Cisco Nexus 5000 Series Distributed Virtual Switch (DVS), VEM, or NIV adapter, the hypervisors are notified of the pending attach of the VM with the DV port id and the port group id.
5. One of the following actions occur:
  - a. If the port group belongs to a VEM, the VEM sends a VM attach pending notification to the virtual supervisor module (VSM) that runs on the Cisco Nexus 5000 Series device. Otherwise, a new vEthernet is created for the DV port id.
  - b. If the port group belongs to a NIV adapter, the NIV adapter detects the pending attach of the VM using pass-through switching (PTS) and sends a VIF create message to the device with the VM's DV port id and port group id number in the VMware provisioning type-length-value (TLV). The adapter also configures the dynamic vNIC that inherits the parameters from the port profile.
6. The device creates the appropriate vEthernet interface and also expands the port group id for the VM into a port profile and applies it to the vEthernet interface.
7. One of the following actions occur:
  - a. For a VEM, the device control plane brings up the vEthernet interface like any regular Ethernet interface and the data plane programming is done on the VEM through the Message and Transaction Service (MTS) messages.
  - b. For an NIV adapter, as the device brings up the vEthernet interface, a virtual network tag (VNTag) is allocated to the vEthernet interface and both the device forwarding path and adapter forwarding path are set up for the VNTag using the virtual interface card (VIC). The vEthernet interface parameters (for example, the default VLAN, default class of service (CoS), and so on) are sent to the adapter using the VIC. The vEthernet interface is declared up, and a VIC message is sent to the adapter instructing it to mark the vNIC to as up (operational).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## Static Floating vEthernet Interfaces

You can create and configure floating vEthernet interfaces.

You can use the following command to select a vEthernet interface number that has been given a distributed virtual port and distributed virtual switch (DVS):

```
int veth10
  vmware dvport <dvport-number> dvswitch uuid <uuid>
```

You can use the following command to select a vEthernet interface number for a MAC address of a VM:

```
int veth11
  vsi mac <mac-address>
```

The creation model is the same between static and dynamic floating vEthernet interfaces. When a VEM or NIV adapter signals the device to create vEthernet interface, the device first attempts to match for a configured static vEthernet interface. If a match is found, the specific vEthernet interface number is used. If there is a configuration specified for the static vEthernet interface, this configuration overrides the same configuration specified, in the port profile.

## Fixed vEthernet Interface Provisioning Model

A fixed vEthernet interface is not associated with VMs. Fixed vEthernet interfaces can be created and exposed to host operating systems (OSs) as regular NICs. The host OS can use these vEthernet interfaces and normal Ethernet interfaces as boot devices. If the server is VM-enabled, these fixed vEthernet interfaces present themselves as physical adapters because vCenter cannot migrate this type of vEthernet interface using vMotion.

The desired provisioning model for a fixed vEthernet interface is the dynamic model. In this provisioning model, there is no configuration on the device that represents the vEthernet interface. This model depends on the port profile information that is provided to the device through the VIC protocol.

The device advertises the list of port profile names that are configured on the device using the VIC control channel (VIF\_SET of 0). The NIV adapter allows a way for you as the server administrator to choose from a list of port profiles to be attached to each fixed vEthernet interface.

This process describes how to bring up a fixed vEthernet interface:

1. The NIV adapter sends a VIF\_CREATE message with the channel number and optional port profile name.
2. The device looks for a match from its list of static fixed vEthernet interface configurations and does one of the following:
  - a. If there is a matching channel number, that vEthernet interface number is brought up.
  - b. If there is no static fixed vEthernet interface with a matching channel number, a dynamic fixed vEthernet interface is created instead. A dynamic fixed vEthernet interface does not have any user configuration or port profile associated with it.
3. If a port profile name is in the VIF\_CREATE message, and the fixed vEthernet interface is not already configured with a port profile in the device configuration, the port profile parameters within the VIF\_CREATE message are configured for the vEthernet interface.

## ***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

4. In the static fixed model, you as the administrator of the device must map the vEthernet interface that is being configured on the device to the channel number of the vNIC that it represents. Because this task requires that the device administrator gets the channel information from the server or adapter administrator and is prone to errors, the static configuration is considered to be less desirable.
5. For each static, fixed vNIC provisioned in an adapter, a corresponding vEthernet interface must be created and bound to an Ethernet interface and channel number where the Ethernet interface is the physical interface number that the adapter is connected to and channel number is the vNIC instance number provisioned in the adapter.

This example shows vEthernet interface 10 being created and bound to Ethernet interface 1/10, channel 4:

```
int veth10
bind interface ethernet 1/10 channel 4
inherit port profile xxx
```

A unique channel number given to each physical interface is required. You can remove the binding by using the `no bind interface ethernet` command, even after the vEthernet interface is attached to the vNIC in the host (that is, even after the device receives the **vif-create** command). This behavior is different from creating a floating vEthernet interface. With fixed vEthernet interfaces, the adapter internally maps the channel number to the OS-visible NIC interfaces and displays the mapping information in the adapter tool.

In a FEX Active-to-Active topology, there are at least two VIFs for each vEthernet interface and multiple `bind interface` commands are allowed under a vEthernet interface. For example, if an adapter has two uplinks and each uplink is connected to FEX port 100/1/10 and 100/1/11, then both bound interfaces must be configured as static fixed vEthernet interfaces.

```
int veth10
bind interface ethernet 100/1/10 channel 4
bind interface ethernet 101/1/11 channel 4
```

## **Static Fixed vEthernet Interface Configuration**

In the Cisco Integrated Management Controller (CIMC), the port profile is not specified for the vNIC, and on the device, the static fixed vEthernet interface is manually configured in the running configuration.

```
interface veth 1
bind int e 100/1/1 channel 1
no shut
```

## **Dynamic Fixed vEthernet Interface Configuration**

An alternative to creating a static, fixed vEthernet interface is to configure the device with the `dynamic_vnic_profile` port profile and configure a bound physical interface in the VNTag mode. The device pushes the `dynamic_vnic_profile` port profile to the Unified Computing System (UCS) VIC adapter.

You must go to CIMC and add or edit the fixed vNIC properties by changing the port profile to `dynamic_vnic_profile`. You can either manually type the string “`dynamic_vnic_profile`” or use the drop-down menu, because the device has pushed all port profiles to the adapter.

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

Then, you must reboot the server to make the changes take effect with the early firmware release. As a result, the dynamic fixed vEthernet interfaces are entered automatically in the device's running configuration.

```
interface veth 1
inherit port-profile xyz
bind int e 100/1/1 channel 1
```

## NIV Host Discovery

Before NIV vEthernet interfaces can be created, the physical interface connected to the host must be configured with VNTag mode, and Data Center Bridging Exchange (DCBX) communication between the switchport and the host uplink must be converged with VNTag mode.

```
int e1/1 or e100/1/1
switchport mode vntag
```



### Note

Because the access or trunk keyword is a mandatory parameter, there is no way to force only VNTag encapsulation on an interface at all times.



### Note

VEM interface vEthernet does not need this configuration because frames from the VEM do not include a VNTag.

The host that runs softPTS can operate in classical Ethernet mode before transitioning to VNTag mode. The transition to VNTag mode is made when the host starts to include the NIV capability (that is, TLV) in its DCBX advertisement. Until then, the host runs softPTS operates in the classical Ethernet mode. While it operates in the classical Ethernet mode, the host has full connectivity to the network through the physical interface connected the device that is configured with VNTag mode. Because the port can be configured in access or trunk mode, you can use the following commands to configure the switchport behavior when the port is configured in VNTag mode:

```
switchport trunk allowed vlan [add|all|except|none|remove] <vlan-list>
switchport trunk native vlan <vlan>
switchport access vlan <vlan>
```

You can use **switchport trunk allowed vlan** and **switchport trunk native vlan** commands only when the port is configured to be a VNTag trunk device port that is operating in the classical Ethernet mode. The command configures the allowed VLAN list for the switchport and default VLAN for the trunk port.

You can use **switchport access vlan** only when the port is configured as a VNTag access device port that is operating in the classical Ethernet mode. This command allows you to configures the access VLAN for the device port.

## Port Profile Inheritance

Because dynamic fixed and floating vEthernet interfaces are created dynamically on the device, there cannot be a configuration associated with it. As a result, the device can only configure this type of vEthernet interface using the port profile specified in either the VIF\_CREATE or VEM attach message.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

For statically created fixed and floating vEthernet interfaces, it is possible for you as the device administrator, to associate the configuration with the vEthernet interface before it is brought up. These rules are necessary to resolve conflicts:

- Any configuration specified under the vEthernet interface overrides the configuration in the port profile.
- If a vEthernet interface is preconfigured with a port profile, and the NIV adapter or VEM signals a different port profile, the port profile specified in the protocol message takes precedence.

vEthernet interface configurations or port profile configurations can be specified in a synchronization profile if configuration synchronization between two Cisco Nexus 5000 Series devices is enabled.

## Distributed Virtual Switches

The DVS or virtual distributed switch (VDS) spans multiple VMware vSphere (vSphere) hosts and aggregating the network management of the virtual switching environment into a centralized management interface. Prior to DVS, each server needed to have a device configured and if VMware vMotion (vMotion) was desired, the configuration of these devices needed to be manually verified as consistent across the entire cluster. With DVS, a single device is created that spans all of the servers in the cluster. The port groups only need to be configured once, and they are automatically applied on all servers in the cluster.

The VEM for ESX systems always contains both the Local Switching module and the PTS module. The PTS module covers both the Soft-PTS and Hard-PTS mode of functions that can flexibly enable both VEM and NIV functionalities. This software package is also commonly known as VIB, where VIB is the format used by VMware.

## Hardware and Software Requirements

Table 1 explains the VM-FEX hardware and software requirements.

**Table 2-1 VM-FEX Hardware and Software Requirements**

Component	Hardware and Software Combination 1	Hardware and Software Combination 2	Hardware and Software Combination 3
Server	Cisco C250-M2	OS =Wind2008 r2 sp1	ESX v4.1u1
CIMC	1.4(0.21)		
BIOS	1.4.1		
Cisco UCS P81E	VNIC drivers	cxxx-scu-drivers-w2k8r2x64-1.3.1.1	
Cisco Nexus 5548 device	5.1(3)N1(1)		Cisco NX-OS 5.. (0.223)
CNA VIC adapter firmware version	1.6 (0.72)		

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

FC storage array	—		
VCenter server/client	Version 4.1	Enterprise plus License	

## Dynamic Fixed vEthernet Interface Configuration

The two possible configuration models for fixed vEthernet interfaces are static and dynamic. The preferred configuration model on the device is the dynamic fixed vEthernet interface because of the ease of configuration and the minimal interaction required between the device and the server administrator to set up the vEthernet configuration.

First, the device administrator configures several port profiles on the device. Each port profile defines a set of device port configurations that are applied to a vEthernet interface. The configuration is based on the various roles that a host could have in the network and is a template from which a server administrator can choose the configuration that is needed for the server port.

When a VIC session is established between the adapter and the device, as part of the protocol handshake, the device passes a list of port profiles that are relevant to the host. You can display this list of port profiles using a BIOS or adapter tool and choose a specific port profile from the list for a vNIC that is presented on the PCI bus. After choosing the port profile, the port profile ID is sent back to the device through the VIC protocol as part of this VIF bringup. The device creates a dynamic vEthernet interface during this VIF bringup and applies the port profile that it receives from the adapter.

The dynamic fixed vEthernet interfaces are entered automatically in the device running-configuration.

```
interface veth 1
inherit port-profile xyz
bind int e 100/1/1 channel 1
```

When the vEthernet handshake is complete and the interface is brought up, all the interface configuration that was part of the port profile is applied to the interface and the interface becomes operational.


If the physical link between the server and the device flaps or there is a disruption in the VIC session between the device and the server, the port profile list on the server is cleared so that there is no stale information that is retained on the host. When the VIC session is reestablished, a new port profile list is sent to the server.

Figure 2-1 shows a dynamic vEthernet configuration on a device.



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-1 Dynamic vEthernet Configured on a Device**

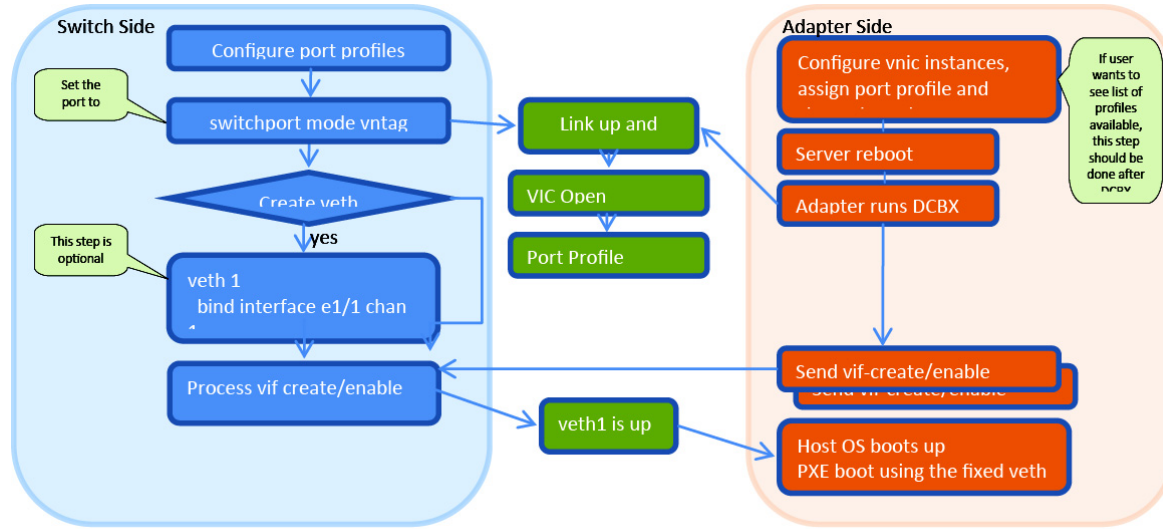

## Static Fixed vEthernet Interface Configuration

In CIMC, the port profile is not specified for the VNIC. On the device, the static fixed vEthernet is manually entered in the running configuration such as:

```
interface vEthernet 1
bind int e 1/18 channel 1
no shut
```



### Note

The UCS VIC static VNIC failover and failback is invisible to the host OS when performed in the hardware on the UCS VIC. That is, the OS sees the VNIC as up and running during a failover or failback.

Some packets might get lost due to the time needed for the reconvergence of the return traffic to take place.

The Cisco Nexus 5548 Series device sends the gratuitous ARP reply for the static MAC and IGMP join messages of the active vEthernet interface that has failed over or failed back for the reconvergence to take place. This action enables the return traffic path immediately in the direction from the network to the host.

In the FEX straight-through topology, the active Cisco Nexus 5000 Series device synchronizes continuously all unicast MAC addresses learned on the active vEthernet interface to the Cisco Nexus 5000 Series device with the standby vEthernet interface. The destination for these unicast MAC addresses point to them Multichassis EtherChannel Trunk (MCT) on the standby Cisco Nexus 5000 Series device. Unicast MAC addresses are synchronized using Cisco Fabric Services over Ethernet (CFSoS) as a transport. IGMP groups are not synchronized.

A future Cisco NX-OS version sends for all MAC dynamic addresses in addition to the static one earned behind the failed over/failed back vEthernet port and for all IGMP join messages collected for the active vEthernet interface, the IGMP join requests, and the Gratuitous ARP reply to the external network.

*Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

## Fixed vEthernet Interface Failback and Failover with a vPC System

The fixed vEthernet interface failback and failover with a vPC system process is as follows:

1. The adapter is brought up.
2. If this interface is a fixed vEthernet interface, the NIV adapter also creates one vEthernet interface on the active Cisco Nexus 5000 Series device and one vEthernet interface on the standby Cisco Nexus 5000 Series device.
3. The NIV adapter uses the same channel number in both VIF\_CREATE messages to the two Cisco Nexus 5000 Series devices. I
4. For static fixed vEthernet interfaces, you create the vEthernet interface on the two Cisco Nexus 5000 Series device with the same vEthernet interface number and channel number.
5. The adapter reaches the state to signal the VIF\_ACTIVATE message on one of the uplinks, making one of the vEthernet interfaces active while the other one stays in the standby state.
6. The NIV adapter detects that a failover is needed either by a link down event or when a DCBX keep alive message times out.

As a result of any of these events occurring, the NIV adapter activates the standby link to become the new forwarding path for the VIF. The NIV adapter sends the VIF\_ACTIVATE message to the standby Cisco Nexus 5000 Series device.

7. When the standby Cisco Nexus 5000 Series device receives the VIF\_ACTIVATE message, it does the following:
  - a. Adjusts all unicast MAC address destinations to points to the VIF, instead of the MCT.
  - b. Initiates an IGMP general query to the adapter. The IGMP joins from the host OS updates all the membership for the entire network path.
  - c. Sends gratuitous ARP replies for all the unicast MAC addresses for this VIF to adjust the entire network path to the standby side.
  - d. All other configuration-based features, such as a PVLAN or an ACL, are already pre programmed into the hardware for this VIF so no adjustment is necessary during the failover.
8. If the failed path comes back online, the devices do not take any failback action. The devices take action only if the NIV adapter sends the VIF\_ACTIVATE message on the new link. As a result, the same process occurs again.

## Fixed Static vEthernet Interface Failback and Failover with a vPC System

The process for a fixed static vEthernet interface fails back or fails over to a vPC system is as follows:

1. The adapter is brought up. If this interface is a fixed vEthernet interface, the NIV adapter also creates one vEthernet on the active Cisco Nexus 5000 Series device and one vEthernet on the standby Cisco Nexus 5000 Series device. The NIV adapter uses the same channel number in both VIF\_CREATE messages to the two Cisco Nexus 5000 Series devices. For static fixed vEthernet interface, you must create the vEthernet interface on the two Cisco Nexus 5000 Series devices with the same vEthernet number and channel number.

## ***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

2. The adapter reaches the state to signal the VIF\_ACTIVATE message on one of the uplinks, making one of the vEthernet interface active while the other one stays in standby state.
3. The NIV adapter detects failover is needed either by a link down event or DCBX keep-alive times out. Let's enumerate all possible failures in the Cisco Nexus 5000 Series device and FEX fabric. As a result of any of the event occurring, the NIV adapter activates the standby link to become the new forwarding path for the VIF.
4. The NIV adapter sends the VIF\_ACTIVATE message to the standby Cisco Nexus 5000 Series device. When the standby Cisco Nexus 5000 Series device receives the VIF\_ACTIVATE message, it does the following:
  - a. Adjusts all unicast MAC address destinations to point to the VIF, instead of the MCT.
  - b. Initiates an IGMP general query to the adapter. The IGMP joins from the host OS updates all the membership for the entire network path.
  - c. Sends gratuitous ARP replies for all the unicast MAC addresses for this VIF to adjust the entire network path to the standby side.
  - d. All other configuration-based features such as a PVLAN or an ACL are already pre programmed into the hardware for this VIF so no adjustment is necessary during the failover.
5. If the failed path comes back online, the devices do not take any failback action. The devices take action only if the NIV adapter sends the VIF\_ACTIVATE message on the new link. As a result, the same process occurs again.

## **VM-FEX Configuration Scenario**

This scenario takes you through the steps to configure VM-FEX in a sample network.

The following are the high-level steps for configuring VM-FEX:

1. Bring up the server with the VEM-PTS bits installed.
2. Activate the two static vNICs on the MT card.
3. Configure the device with a static vEthernet port and bind it to the physical port.
4. Activate the two static vNICs on the Cisco UCS P81E Virtual Interface Card.
5. Define the port profile for dynamic vNICs on the Cisco UCS P81E Virtual Interface Card.
6. Reboot the server.
7. Verify that the two vEthernet interfaces are active and connected to the two static vNICs.
8. Verify that the dynamic vEthernet interfaces are active and connected to the dynamic vNIC.
9. Enable a vPC on the system.
10. Register the vPC system with the vCenter as a virtual distributed switch (VDS).
11. Create the VM-FEX data center and assign it to the vds-nx5k VDS folder.

The port profile should propagate to the vds-nx5k VDS as a vmware port group.
12. Add the host to the vds-nx5k VDS and map the two static vNICs to it.
13. Activate the VM on the ESX host and map it to the port group.
14. Notice the dynamic vNIC has been activated, assigned to the VM in PTS and connected using the VN-Link to the vEthernet port on the Cisco Nexus 5000 Series device vPC.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## Static VNIC Configuration

The static VNIC configuration is as follows:




### Note

Perform the following steps on both the ESX Host 1 and ESX Host 2.

- Step 1** Connect to the CIMC controller of the ESX Host 1 and ESX Host 2.
- Step 2** From the left navigation pane, choose **Server > Inventory**.
- Step 3** From the Network Adapters menu, choose the UCS VIC adapter card and verify that NIV mode is enabled on the adapter as shown in [Figure 2-2](#).

**Figure 2-2 Verifying the NIV Mode**

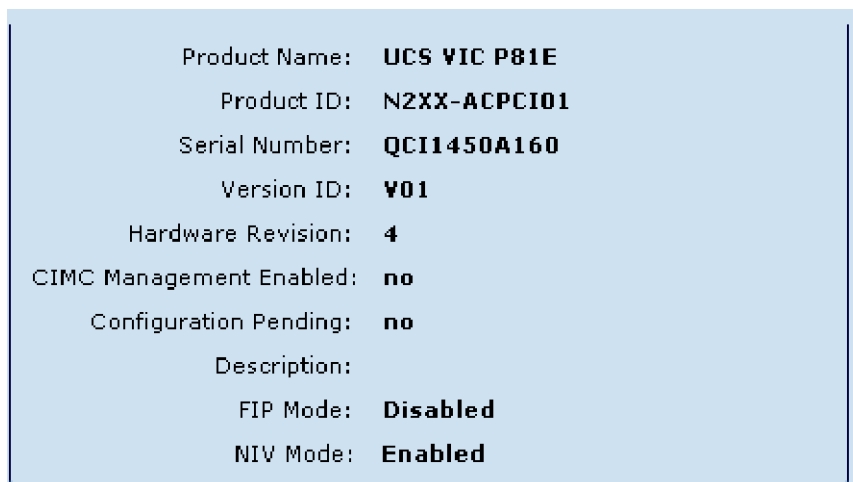


### Note

- The Cisco UCS P81E VIC can be enabled in FEX mode or CNA mode.
- The Cisco UCS P81E VIC in FEX mode supports hardware-based failover provided by the CIMC or active-standby VN-Link from the VNIC to the vEthernet port on the Cisco Nexus 5548 device.
- VNIC is primarily connected to the vEthernet port on the Cisco Nexus 5548 device and has a standby VN-Link connected to the standby interface on the Cisco Nexus 5548 device.
- The Cisco UCS P81E VIC in CNA mode supports Active/Active mode.

- Step 4** From the Adapter Card Menu, choose the VNICs tab and click the **Add** button to add two static VNICs (A-FEXs) on each server's Ethernet0 and Ethernet1 VNIC.
- Step 5** Define each VNIC's properties in order to activate two static VNICs on ESX Host 1. These static VNICs are needed by the VMware VDS (VDS) for the VNIC proxy path as shown in [Figure 2-3](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-3 VNIC's Properties**

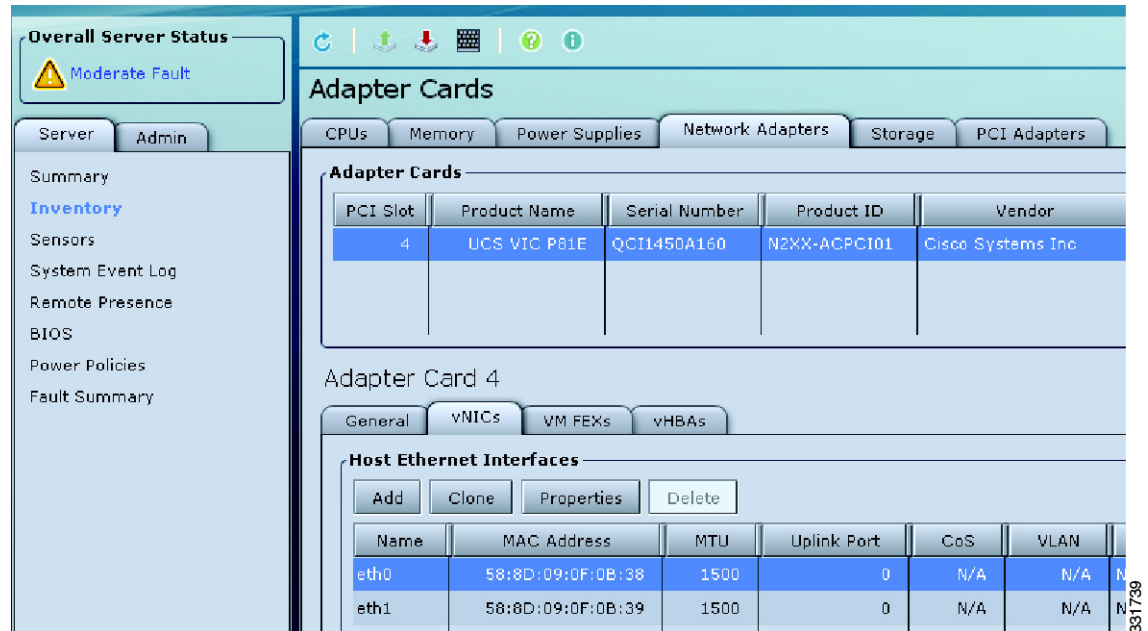

**Step 6** Enter the following parameters for the two Static VNICs on the UCS VIC for ESX Host 1:

- ESX Host 1
- Name : stateth 0
- Uplink Port : 0
- MAC Address : already associated
- Channel Num : 10
- Port Profile : not associated
- Enable Uplink Failover (Enable to)
- Failback Timeout: 5
- Name : stateth 1
- Uplink Port : 0
- MAC Address : already associated
- Channel Number : 11
- Port Profile : not associated
- Enable Uplink Failover (Enabled)
- Failback Timeout : 5
- Leave other values set to default

The parameters for the static VNICs on the UCS VIC for ESX Host 1 are shown in [Figure 2-4](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-4 VNICS on the UCS VIC for ESX Host 1**

The screenshot shows the 'vNIC Properties' dialog box with the 'General' tab selected. The configuration details are as follows:

- Name:** stateth0
- MTU:** 1500 (Range: 1500 - 9000)
- Uplink Port:** 0
- MAC Address:** ☒ AUTO ☒ 58:8D:09:0F:0B:3C
- Class of Service:** N/A
- Trust Host CoS:** ☐
- PCI Order:** ☒ ANY ☐ (Range: 0 - 17)
- Default VLAN:** (Range: 1 - 4094) N/A
- VLAN Mode:** N/A
- Rate Limit:** (Range: 1 - 10000 Mbps) N/A
- Enable PXE Boot:** ☐
- Channel Number:** 10 (Range: 1 - 1000)

At the bottom of the dialog are three buttons: 'Save Changes', 'Reset Values', and 'Cancel'. A vertical scrollbar is visible on the right side of the dialog.

The vNIC properties for **stateht1** is shown in [Figure 2-5](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-5 VNICs on the UCS VIC for ESX Host 2**

The screenshot shows the 'vNIC Properties' dialog box with the 'General' tab selected. The configuration for the vNIC 'stateht1' is as follows:

- Name: **stateht1**
- MTU:  (1500 - 9000)
- Uplink Port:
- MAC Address: ☒ AUTO ☐
- Class of Service: **N/A**
- Trust Host CoS: ☐
- PCI Order: ☒ ANY ☐  (0 - 17)
- Default VLAN: (1 - 4094) **N/A**
- VLAN Mode: **N/A**
- Rate Limit: (1 - 10000 Mbps) **N/A**
- Enable PXE Boot: ☐
- Channel Number:  (1 - 1000)

At the bottom of the dialog are three buttons: 'Save Changes', 'Reset Values', and 'Cancel'. A vertical scrollbar is visible on the right side of the dialog.

**Step 7** Enter the following parameters for the two static VNICs on the UCS VIC for ESX Host 2:

- ESX Host 2
- Name : stateth 0
- Uplink Port : 0
- MAC Address : already associated
- Channel Number: 10
- Port Profile : not associated
- Enable Uplink Failover (Enabled)
- Failback Timeout : 5
- Name : stateth 1
- Uplink Port : 0
- MAC Address : already associated
- Channel Num : 11
- Port Profile : not associated

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

- Enable Uplink Failover (Enable to)
- Leave other values set to default.

The parameters for the static VNICs on the UCS VIC for ESX Host 1 are shown in [Figure 2-6](#).

**Figure 2-6** vNIC Properties for ESX Host 2

**vNIC Properties**

**General**

Name: **stateth0**

MTU:  (1500 - 9000)

Uplink Port:

MAC Address: ☒ AUTO ☒

Class of Service: **N/A**

Trust Host CoS: ☐

PCI Order: ☒ ANY ☐  (0 - 17)

Default VLAN: (1 - 4094) **N/A**

VLAN Mode: **N/A**

Rate Limit: (1 - 10000 Mbps) **N/A**

Enable PXE Boot: ☐

Channel Number:  (1 - 1000)

331742

Adding vNIC for **stateht1** is shown in [Figure 2-7](#).



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-7 Adding vNIC**

**Add vNIC**

**General**

Name:

MTU:  (1500 - 9000)

Uplink Port:

MAC Address: ☒ AUTO ☐

Class of Service:

Trust Host CoS: ☐

PCI Order: ☒ ANY ☐  (0 - 17)

Default VLAN: (1 - 4094)

VLAN Mode: **TRUNK**

Rate Limit: (1 - 10000 Mbps) **OFF**

Enable PXE Boot: ☐

Channel Number:  (1 - 1000)

331743

**Step 8** From the Server tab, choose the **Summary** folder.

**Step 9** Reboot the server by choosing the **Power Cycle Server** option in the right panel.




**Note**

A server reboot is needed with the early version of the Cisco UCS P81E VIC firmware in order to activate the changes on the Cisco UCS P81E VIC that are related to the static vNIC configuration.

Figure 2-8 shows the screen after the reboot.

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Figure 2-8 Cisco Integrated Management Controller**

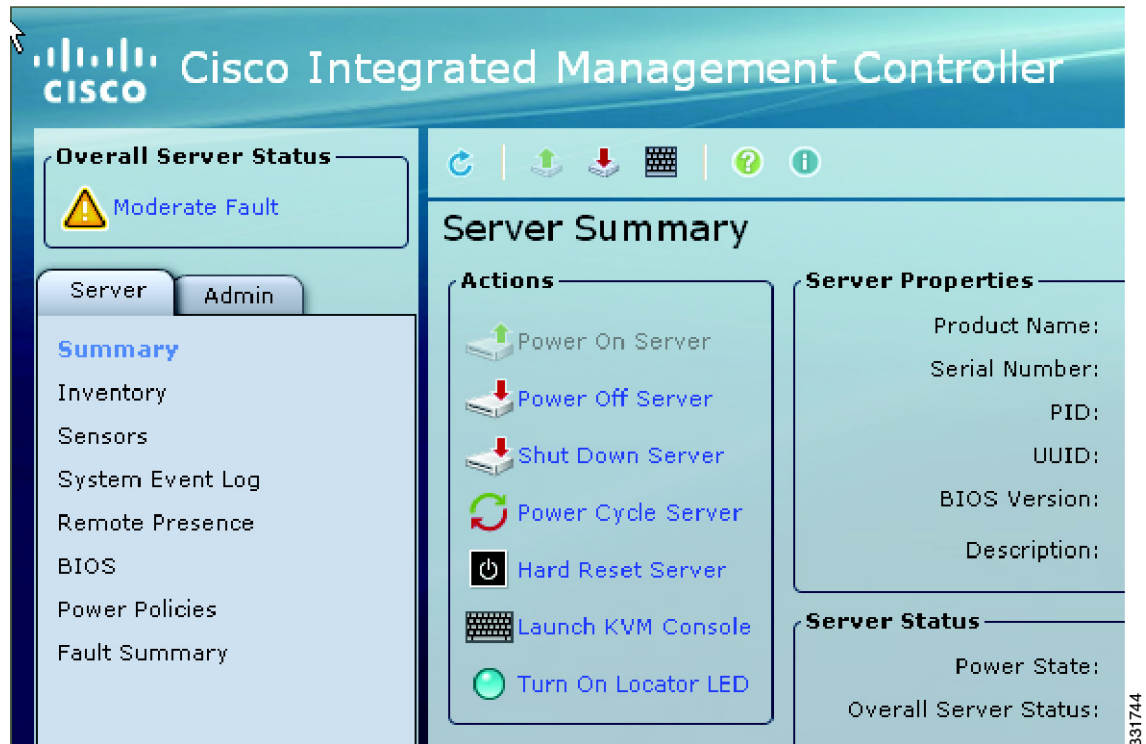

**Step 10** Connect to the Cisco Nexus 5548-1 device and Cisco Nexus 5548-2 Series device and configure them for a static VNIC (A-FEX) connection as follows:

a. On both devices, make sure that the following features are enabled by entering the following commands:

- **install feature-set virtualization**
- **feature-set virtualization**
- **feature fex**
- **feature vmfex**
- **feature lldp**
- **feature vpc**
- **vethernet auto-create**
- **feature fcoe**
- **copy run start**
- **reload**

b. On both devices, enable the physical interfaces connected to both ESX servers:

```
interface Ethernet1/17
switchport mode vntag
shut
interface Ethernet1/18
switchport mode vntag
shut
```

c. On both devices, enable the virtual interfaces needed to connect to the two static VNICs enabled on the Cisco UCS VIC.

## *Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)*

On the Cisco Nexus 5548-1 device enter these commands:

```
pod1-5548-1(config)# interface vethernet1
pod1-5548-1(config-if)# bind interface eth 1/17 channel 10
pod1-5548-1(config-if)# no shut
pod1-5548-1(config-if)# interface vethernet 3
pod1-5548-1(config-if)# bind interface eth 1/17 channel 11
pod1-5548-1(config-if)# no shut

pod1-5548-1(config-if)# interface vethernet 2
pod1-5548-1(config-if)# bind interface eth 1/18 channel 10
pod1-5548-1(config-if)# no shut
pod1-5548-1(config-if)# interface vethernet 4
pod1-5548-1(config-if)# bind interface eth 1/18 channel 11
pod1-5548-1(config-if)# no shut
```

On the Cisco Nexus 5548-2 device enter these commands:

```
pod1-5548-2(config)# interface vethernet 1
pod1-5548-2(config-if)# bind interface eth 1/17 channel 10
pod1-5548-2(config-if)# no shut
pod1-5548-2(config-if)# interface vethernet 3
pod1-5548-2(config-if)# bind interface eth 1/17 channel 11
pod1-5548-2(config-if)# no shut

pod1-5548-2(config-if)# interface vethernet 2
pod1-5548-2(config-if)# bind interface eth 1/18 channel 10
pod1-5548-2(config-if)# no shut
pod1-5548-2(config-if)# interface vethernet 4
pod1-5548-2(config-if)# bind interface eth 1/18 channel 11
pod1-5548-2(config-if)# no shut
```

- d. On both devices, enable the interface connected to both ESX servers.

```
interface Ethernet1/17
no shutdown
interface Ethernet1/18
no shutdown
```

- e. Verify that the two static VNICs are connected with VN-Link to each static fixed vEthernet interface on the Cisco NX5548 device on both ESX hosts using the following verification commands.

On the Cisco Nexus 5548-1 device enter these commands:

```
pod1-5548-1# show interface vethernet 1
Vethernet1 is up
Bound Interface is Ethernet1/17
Hardware is Virtual, address is 0005.73fc.24a0
Port mode is access
Speed is auto-speed
Duplex mode is auto
300 seconds input rate 0 bits/sec, 0 packets/sec
300 seconds output rate 0 bits/sec, 0 packets/sec
Rx
0 unicast packets 0 multicast packets 0 broadcast packets
0 input packets 0 bytes
0 input packet drops
Tx
0 unicast packets 0 multicast packets 0 broadcast packets
0 output packets 0 bytes
0 flood packets
0 output packet drops

POD1-5548-1# show interface vethernet 1 detail
vif_index: 20
```

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

```
-----
veth is bound to interface Ethernet1/17 (0x1a010000)
priority: 0
vntag: 16
status: active
channel id: 10
registered mac info:
  vlan 0 - mac 00:00:00:00:00:00
  vlan 0 - mac 58:8d:09:0f:0b:3c
  vlan 0 - mac ff:ff:ff:ff:ff:ff
```

On the Cisco Nexus 5548-2 device enter these commands:

```
POD1-5548-2# show interface vethernet 1 detail
vif_index: 20
-----
veth is bound to interface Ethernet1/17 (0x1a010000)
priority: 0
vntag: 16
status: standby
channel id: 10
registered mac info:
  vlan 0 - mac 00:00:00:00:00:00
  vlan 0 - mac 58:8d:09:0f:0b:3c
  vlan 0 - mac ff:ff:ff:ff:ff:ff
```

```
POD1-5548-1# show mac address
```

Legend:

\* - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC  
age - seconds since last seen, + - primary entry using vPC Peer-Link

VLAN	MAC Address	Type	age	Secure	NTFY	Ports
* 1	588d.090f.0970	static	0	F	F	Veth2
* 1	588d.090f.0971	static	0	F	F	Veth4
* 1	588d.090f.0b3c	static	0	F	F	Veth1
* 1	588d.090f.0b3d	static	0	F	F	Veth3
* 4040	0005.73fc.1fbc	static	0	F	F	Router



**Note** Both vEthernet 1 interface active and standby are up on both Cisco Nexus 5548 devices, but the static MAC address has been learned only by the active vEthernet.

- f. Shut down the Ethernet 1/17-18 interfaces and verify that the fixed vEthernet interfaces are in the failover state. The vEthernet 1 interface standby takes over the active vEthernet 1 role and its static MAC address moves with it:

```
POD1-5548-1(config-if-range)# interface ethernet 1/17-18
POD1-5548-1(config-if-range)# no shut
```

```
POD1-5548-2# show interface vethernet 1 detail
vif_index: 20
-----
veth is bound to interface Ethernet1/17 (0x1a010000)
priority: 0
vntag: 16
status: active
channel id: 10
registered mac info:
  vlan 0 - mac 00:00:00:00:00:00
  vlan 0 - mac 58:8d:09:0f:0b:3c
  vlan 0 - mac ff:ff:ff:ff:ff:ff
```

```
POD1-5548-2# show mac address
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

Legend:

\* - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC  
age - seconds since last seen, + - primary entry using vPC Peer-Link

VLAN	MAC Address	Type	age	Secure	NTFY	Ports
* 1	588d.090f.0970	static	0	F	F	Veth2
* 1	588d.090f.0971	static	0	F	F	Veth4
* 1	588d.090f.0b3c	static	0	F	F	Veth1
* 1	588d.090f.0b3d	static	0	F	F	Veth3

POD1-5548-1(config-if-range)# **show interface veth 1 detail**

veth is not bound  
priority: n/a  
vlan: n/a  
vntag: n/a  
registered mac info:

POD1-5548-1(config-if-range)# **show mac address**

Legend:

\* - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC  
age - seconds since last seen, + - primary entry using vPC Peer-Link

VLAN	MAC Address	Type	age	Secure	NTFY	Ports
* 4040	0005.73fc.1fbc	static	0	F	F	Router

POD1-5548-1(config-if-range)#

- g. Activate the physical Ethernet 1/17-18 interfaces on the Cisco Nexus 5548-1 device and verify that the failback of static fixed vEthernet interfaces is performed and that the active role and static MAC address moves back to the Cisco Nexus 5548-1 device:

POD1-5548-1# **show interface vethernet 1 detail**

vif\_index: 20

-----  
veth is bound to interface Ethernet1/17 (0x1a010000)  
priority: 0  
vntag: 16  
status: active  
channel id: 10  
registered mac info:  
  vlan 0 - mac 00:00:00:00:00:00  
  vlan 0 - mac 58:8d:09:0f:0b:3c  
  vlan 0 - mac ff:ff:ff:ff:ff:ff

POD1-5548-1# **show mac address**

Legend:

\* - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC  
age - seconds since last seen, + - primary entry using vPC Peer-Link

VLAN	MAC Address	Type	age	Secure	NTFY	Ports
* 4040	0005.73fc.1fbc	static	0	F	F	Router
* 1	588d.090f.0970	static	0	F	F	Veth2
* 1	588d.090f.0971	static	0	F	F	Veth4
* 1	588d.090f.0b3c	static	0	F	F	Veth1
* 1	588d.090f.0b3d	static	0	F	F	Veth3

POD1-5548-1#

POD1-5548-2# **show interface vethernet 1 detail**

vif\_index: 20

-----  
veth is bound to interface Ethernet1/17 (0x1a010000)  
priority: 0  
vntag: 16

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
status: standby
channel id: 10
registered mac info:
  vlan 0 - mac 00:00:00:00:00:00
  vlan 0 - mac 58:8d:09:0f:0b:3c
  vlan 0 - mac ff:ff:ff:ff:ff:ff

POD1-5548-2# show mac address
POD1-5548-2#
```


## Dynamic Floating vEthernet Interfaces Configuration Scenario

The Dynamic Floating vEthernet Interfaces Configuration Scenario is as follows:

- Step 1** Enable 20 dynamic VNICs on each server's Cisco UCS VIC card.
- Step 2** From the navigation pane in CIMC, choose **Server Menu > Inventory** folder.
- Step 3** From the right window choose the **General** tab for the Cisco UCS VIC and click the **Modify Adapter Properties** to enable 20 Dynamic VNIC interfaces on both ESX hosts in NIV mode.
- Step 4** Click **Save Changes**.
- Step 5** Reboot the servers for the changes to take effect.

Modifying Adapter Properties is shown in [Figure 2-9](#).

**Figure 2-9** *Modifying Adapter Properties*

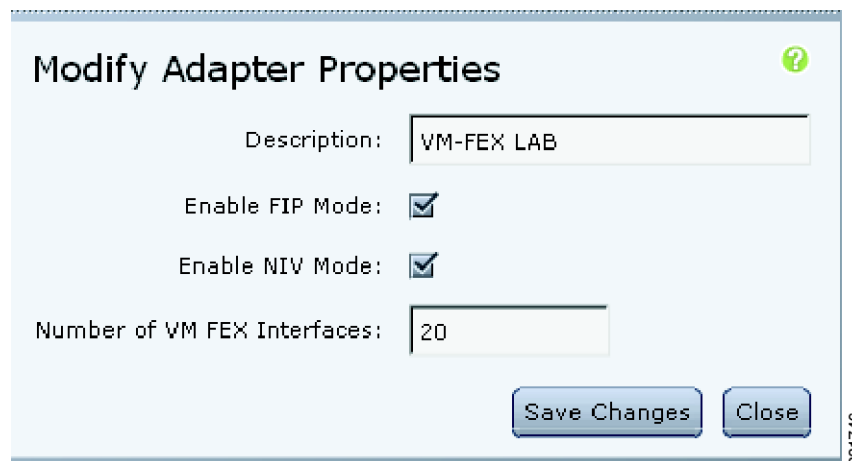

- Step 6** On both Cisco Nexus 5548 Series devices, configure the port profile for the dynamic VNICs that connect to the automatically created dynamic vEthernet interfaces on the Cisco Nexus 5548 device. This port profile appears as a port group on the VDS.

The dynamic vEthernet interfaces should be entered into the running configuration and connected to the dynamic vNICs automatically when the VM connects to the dynamic port group in PTS mode as shown in [Figure 2-10](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-10 Virtual FEXs**

Adapter Card 4

General vNICs VM FEXs vHBAs

**Virtual FEXs**

Properties

Name	MTU	CoS	VLAN	VLAN Mode	Uplink Failover
pts0	1500	N/A	N/A	N/A	Enabled
pts1	1500	N/A	N/A	N/A	Enabled
pts2	1500	N/A	N/A	N/A	Enabled
pts3	1500	N/A	N/A	N/A	Enabled
pts4	1500	N/A	N/A	N/A	Enabled
pts5	1500	N/A	N/A	N/A	Enabled
pts6	1500	N/A	N/A	N/A	Enabled
pts7	1500	N/A	N/A	N/A	Enabled
pts8	1500	N/A	N/A	N/A	Enabled
pts9	1500	N/A	N/A	N/A	Enabled

331747

**Step 7** On both Cisco Nexus 5548 devices, configure the port profile that is exported to the vCenter VDS as port group VLAN 61.

**Step 8** Enable VLAN 61.

```
port-profile type vethernet VLAN61
switchport mode access
switchport access vlan 61
dvs-name all
port-binding dynamic
state enabled
vlan 61
```

The **dvs-name all** command defines the dvs device in vCenter that this port profile is exported to as a port group as shown in [Figure 2-11](#). Using the all option, the port group is exported to all DVSes in the data center.

These keywords are the vEthernet port binding types:

- The **dynamic** keyword specifies that the port is connected when a VM is powered on and disconnected when it is powered off. The maximum port limits are enforced.
- The **ephemeral** keyword specifies that the port is created when a VM is powered on and destroyed when it is powered off. The maximum port limits are not enforced.
- The **static** keyword specifies that the port is always connected. The maximum port limits are enforced.


**Step 9** Connect to the vCenter server using the vSphere client.

**Step 10** In the vSphere client, choose **Home > Inventory > Hosts and Clusters**.

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

- Step 11** Right click the vSphere server to create a new datacenter name, for example, DCy (where y is the number of your pod).
- Step 12** Ignore the certificate warning.

**Figure 2-11 vSphere Client**

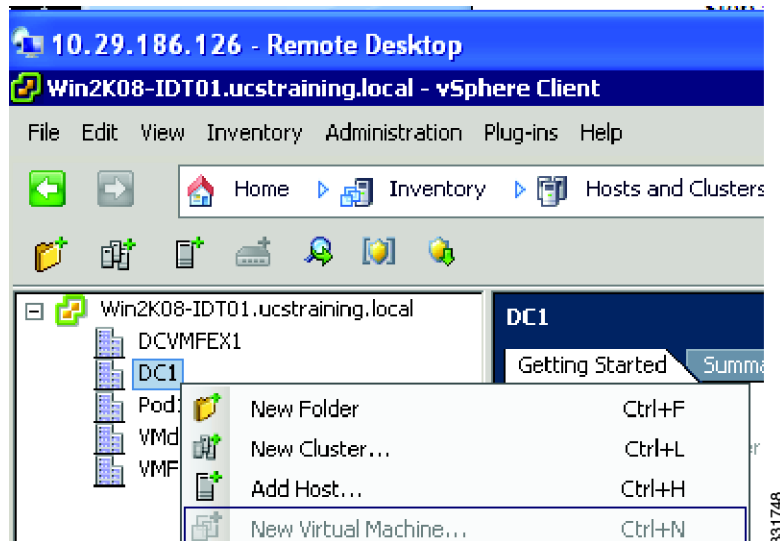

- Step 13** Connect the vCenter vSphere server to the vPC system. The following configuration order establishes the SVS connection between the vCenter server and the vPC system as shown in [Figure 2-12](#).

**Figure 2-12 SVS connection between the vCenter server and the vPC system**

### Establish Reliable Connection between the VPC System and VCenter Server

- 0 - register both extension.xml files onto vcenter plug-ins
- 1 - vpc config first
- 2 - svs configuration
- 3 - sync happens automatically
- 4 - "connect" command from both the primary and the secondary
- 5 - only vpc primary will connect



#### Note

A Cisco Nexus 5000 Series device or pair of Cisco Nexus 5000 Series devices in vPC mode can support one DVS cluster.


Each DVS is created with an extension key and a certificate. In the case where two Cisco Nexus 5000 Series devices are configured in a vPC topology, the primary vPC device pushes the DVS and extension key pair to a particular datacenter that is supported on a vCenter and port profiles. Both primary and secondary devices independently poll the vCenter to perform garbage collection by retrieving the list of DV port IDs in use. Any vEthernet interface that maps to an unused DV port ID is deleted. The vCenter never initiates communication to the devices.



## ***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

- Step 14** Register the Cisco Nexus 5548 device plug-in with the vSphere server as follows:
- Download and save the Cisco\_Nexus\_5000 Series.xml extension file from both Cisco Nexus 5548 devices.
  - Download the plug-in by entering the IP address of the Cisco Nexus 5548 web server in your browser as shown in Figure 2-13.


**Figure 2-13**      **Index of Downloads**

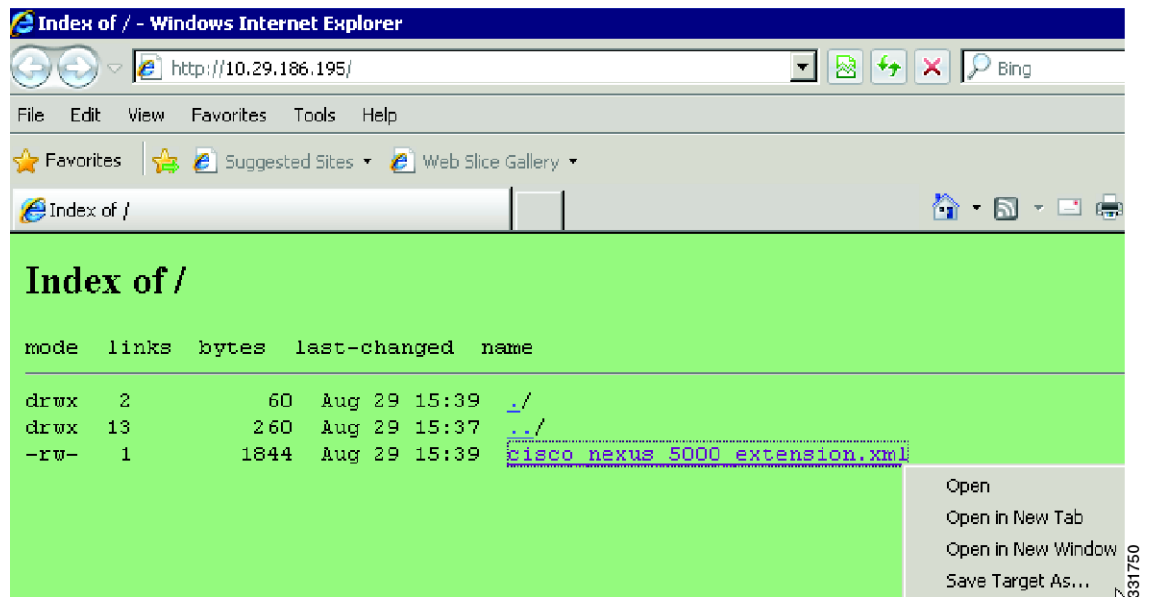

- Step 15** Register both Cisco\_nexus\_5000\_extension.xml files with the vSphere server:
- From the Plug-In Menu of the vCenter server, choose the **Manage Plug-ins** option and right-click in the empty space above the available plug-in-in to create a new plug-in.
  - Ignore the certificate warning.

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**


**Figure 2-14 Plug-in Manager**

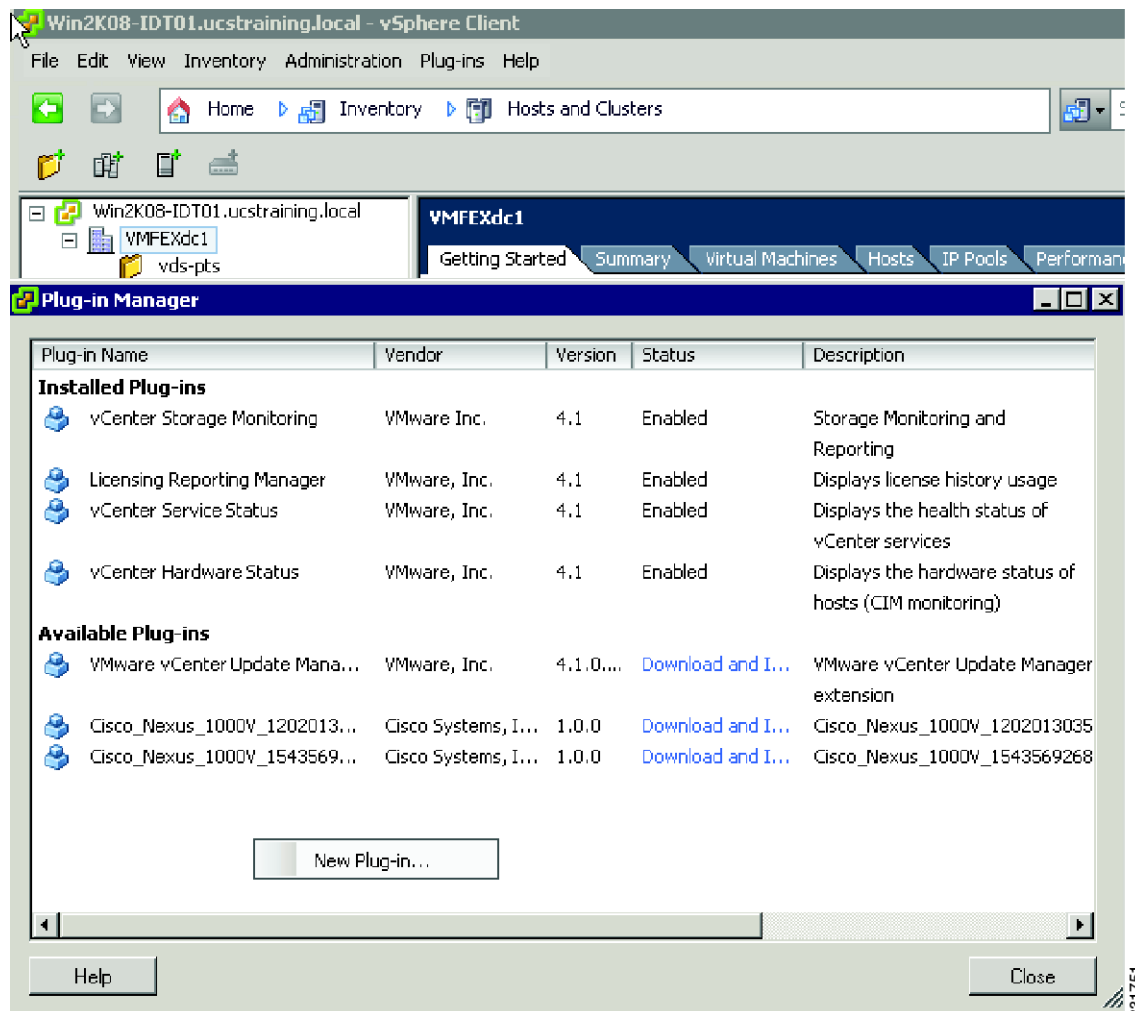

- c. Browse for the new plug-in and click the **Register plug-in** button as shown in Figure 2-14.

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Figure 2-15 Register plug-in**

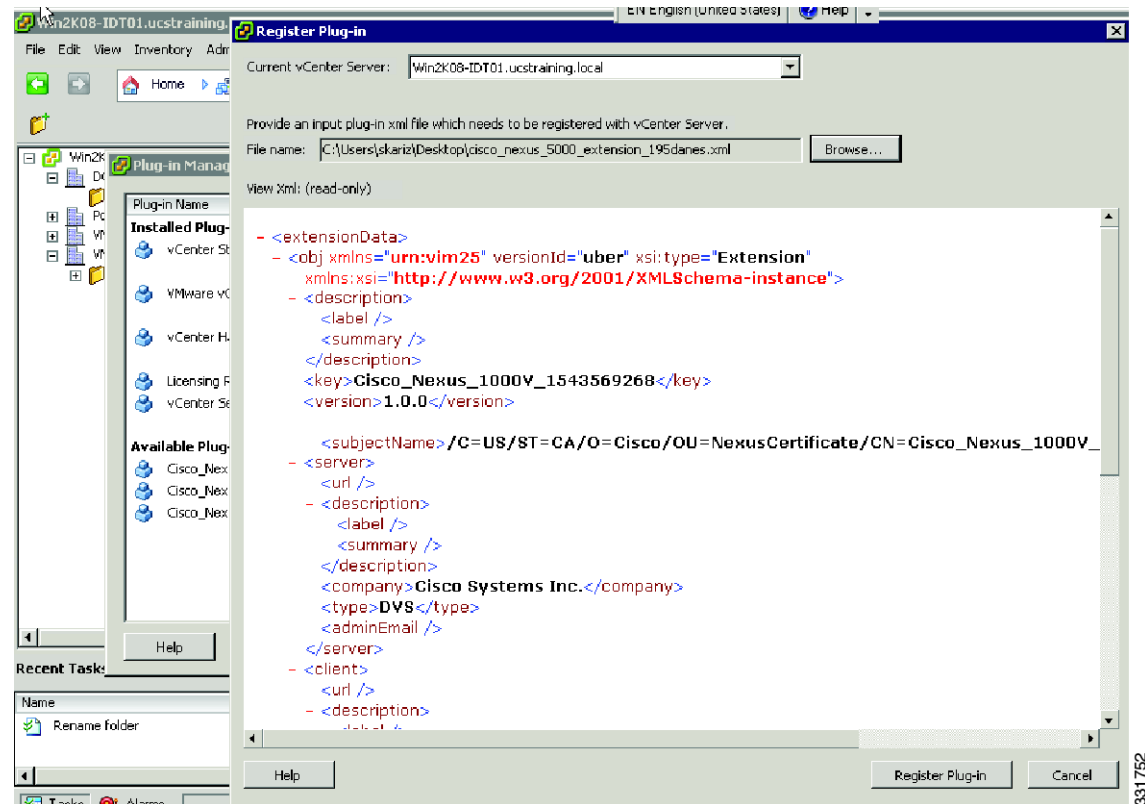

- d. Ignore the security certificate warning and wait for the report about the plug-in being successfully installed as shown in [Figure 2-15](#). As a result, the plug-in is listed under the Available Plug-ins.











**Note** If the process returns an error, your plug-in might have already been imported under the available plug-ins.

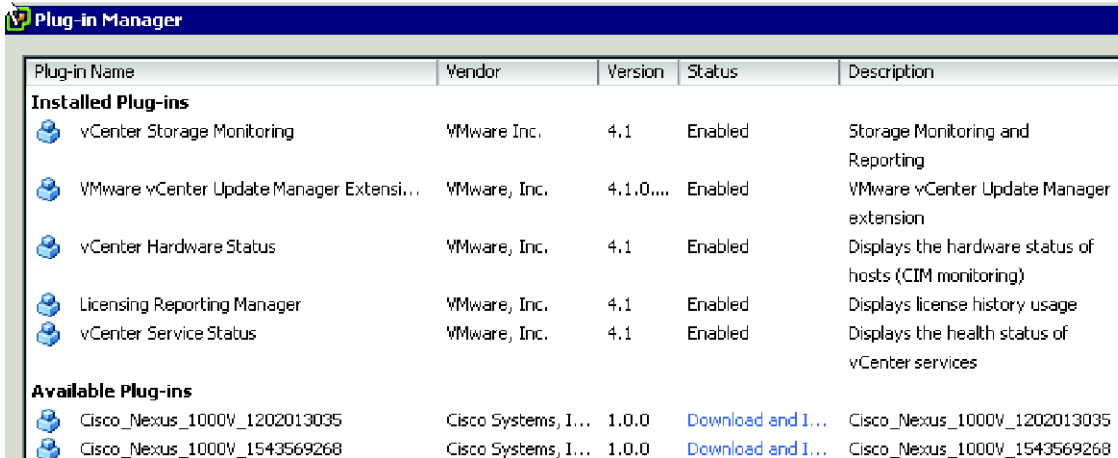- e. Verify in vCenter that the plug-in has been successfully installed for both Cisco Nexus 5548 devices as shown in [Figure 2-16](#).

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Figure 2-16 Status of Plug-ins**



Plug-in Name	Vendor	Version	Status	Description
<b>Installed Plug-ins</b>				
 vCenter Storage Monitoring	VMware Inc.	4.1	Enabled	Storage Monitoring and Reporting
 VMware vCenter Update Manager Extensi...	VMware, Inc.	4.1.0...	Enabled	VMware vCenter Update Manager extension
 vCenter Hardware Status	VMware, Inc.	4.1	Enabled	Displays the hardware status of hosts (CIM monitoring)
 Licensing Reporting Manager	VMware, Inc.	4.1	Enabled	Displays license history usage
 vCenter Service Status	VMware, Inc.	4.1	Enabled	Displays the health status of vCenter services
<b>Available Plug-ins</b>				
 Cisco_Nexus_1000V_1202013035	Cisco Systems, I...	1.0.0	<a href="#">Download and i...</a>	Cisco_Nexus_1000V_1202013035
 Cisco_Nexus_1000V_1543569268	Cisco Systems, I...	1.0.0	<a href="#">Download and i...</a>	Cisco_Nexus_1000V_1543569268

**Step 16** On the Cisco Nexus 5548-1 and Cisco Nexus 5548-2 Series devices, enable the vPC domain and LACP feature.

On the Cisco Nexus 5548-2 Series device enter the following commands:

```
pod1-5548-2(config)# feature vpc
pod1-5548-2(config)# feature lacp

pod1-5548-2(config)# vpc domain 1
pod1-5548-2(config-vpc-domain)# role priority 100 /no priority the other switch
pod1-5548-2(config-vpc-domain)# peer-keepalive destination 10.29.186.195 vrf management

pod1-5548-2(config)# int eth 1/27-30
pod1-5548-1(config-if-range)# channel-group 10
pod1-5548-1(config-if-range)# exit

pod1-5548-2(config)# int po10
pod1-5548-2(config-if)# vpc peer-link
pod1-5548-2(config-if)# spanning-tree port type network
pod 1-5548-2(config-if)# // permit all vlans but but not FCOE
VLAN 200!
pod 1-5548-2(config-if)# sw trunk allowed vlan 1-199, 201-3967, 4048-4093
pod1-5548-2(config-if)# no shut
```

On the Cisco Nexus 5548-1 Series device:

```
pod1-5548-1(config)# feature vpc
pod1-5548-1(config)# feature lacp

pod1-5548-1(config)# vpc domain 1
pod1-5548-1(config-vpc-domain)# role priority 90
pod1-5548-1(config-vpc-domain)# peer-keepalive destination 10.29.186.196 vrf management

pod1-5548-1(config)# int eth 1/27-30
pod1-5548-1(config-if-range)# channel-group 10
pod1-5548-1(config-if-range)# exit

pod1-5548-1(config)# int po10
pod1-5548-1(config-if)# vpc peer-link
pod1-5548-1(config-if)# spanning-tree port type network // permit all vlans but but not
FCOE VLAN 200!
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
pod1-5548-1(config-if)# sw trunk allowed vlan 1-199, 201-3967, 4048-4093 //no fcoe vlan
pod1-5548-1(config-if)#no shut
```

**Step 17** Verify which vPC member is the primary and which is the secondary vPC member.

```
pod1-5548-2# show vpc
```

Legend:

(\*) - local vPC is down, forwarding via vPC peer-link

```
vPC domain id          : 1
Peer status            : peer adjacency formed ok
vPC keep-alive status  : peer is alive
Configuration consistency status: success
Per-vlan consistency status : success
vPC role               : secondary
Number of vPCs configured : 0
Peer Gateway           : Disabled
Dual-active excluded VLANs : -
Graceful Consistency Check : Enabled
```

vPC Peer-link status

```
-----
id   Port   Status Active vlans
--   -
1    Po10   up      1,61
-----
```

```
POD1-5548-1# show vpc
```

Legend:

(\*) - local vPC is down, forwarding via vPC peer-link

```
vPC domain id          : 1
Peer status            : peer adjacency formed ok
vPC keep-alive status  : peer is alive
Configuration consistency status: success
Per-vlan consistency status : success
vPC role               : primary
Number of vPCs configured : 0
Peer Gateway           : Disabled
Dual-active excluded VLANs : -
Graceful Consistency Check : Enabled
vPC Peer-link status
-----
```

```
id   Port   Status Active vlans
--   -
1    Po10   up      1,61
-----
```

```
OD1-5548-2(config-if)# show vpc role
```

```
vPC Role status
-----
vPC role               : secondary
Dual Active Detection Status : 0
vPC system-mac         : 00:23:04:ee:be:01
vPC system-priority     : 32667
vPC local system-mac    : 00:05:73:fc:24:fc
vPC local role-priority : 110
-----
-----
```

```
POD1-5548-1# show vpc role
```

vPC Role status

```
-----
```

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

```

vPC role                        : primary
Dual Active Detection Status    : 0
vPC system-mac                 : 00:23:04:ee:be:01
vPC system-priority            : 32667
vPC local system-mac           : 00:05:73:fc:1f:bc
vPC local role-priority        : 90
POD1-5548-1#

```

**Step 18** Configure the SVS connection on the primary and secondary vPC members.



**Note** The secondary SVS member communicates with the primary SVS member to synchronize the extension key.

```

pod1-5548-1(config)# svs connection 2VC
pod1-5548-1(config-svs-conn)# protocol vmware-vim
pod1-5548-1(config-svs-conn)# vmware dvs datacenter-name DC1
pod1-5548-1(config-svs-conn)# dvs-name Pod1PTS
pod1-5548-1(config-svs-conn)# remote ip address 10.29.186.125 port 80 vrf management
pod1-5548-1(config-svs-conn)# install certificate default
pod1-5548-1(config-svs-conn)# extension-key: Cisco_Nexus_1000V_1543569268 // only on
the primary vpc member

```



**Note** Find the name of the extension-key Cisco\_Nexus\_1000V\_1543569268 in the vCenter server under the installed plug-ins for the respective Cisco Nexus 5548 Series device. Use the install certificate default command to generate an extension key that you can import into the vCenter server as shown in [Figure 2-17](#).

**Figure 2-17 Available Plug-ins**

Available Plug-ins				
	Cisco_Nexus_1000V_1202013035	Cisco Systems, Inc.	1.0.0	<a href="#">Download and Install</a> Cisco_Nexus_1000V_1202013035
	Cisco_Nexus_1000V_1543569268	Cisco Systems, Inc.	1.0.0	<a href="#">Download and Install</a> Cisco_Nexus_1000V_1543569268



**Note** The configuration process is more consistent if the plug-in is imported after the install certificate command is issued on the device.

**Step 19** Connect the primary vPC member to the vSphere center.

```


pod1-5548-1(config)# svs connection 2VC
pod1-5548-1(config-svs-conn)# connect
Note: Command execution in progress..please wait
pod1-5548-1(config-svs-conn)#

```

One of the results of the connect action is that the dvs-pts folder is created under your datacenter as shown in [Figure 2-18](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-18 vSphere - DCVMFEX1**

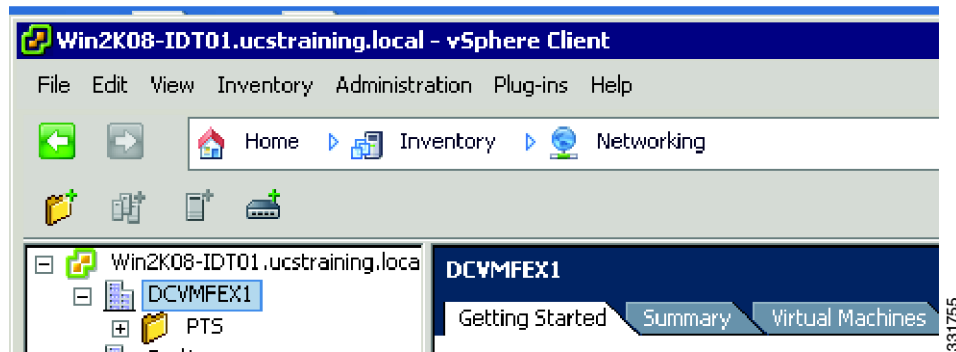

**Step 20** Manually configure the secondary vPC member and connect it to the vCenter.



**Note**

The secondary vPC member does not connect even if the connect command is successful.

```
pod1-5548-2(config)# svs connection 2VC
pod1-5548-2(config-svs-conn)# protocol vmware-vim
pod1-5548-2(config-svs-conn)# vmware dvs datacenter-name DC1
pod1-5548-2(config-svs-conn)# dvs-name Pod1PTS
pod1-5548-2(config-svs-conn)# remote ip address 10.29.186.125 port 80 vrf management
pod1-5548-2(config-svs-conn)# install certificate default
pod1-5548-2(config-svs-conn)#
```



**Note**

The extension key is not configured manually. Instead, it is synchronized by the vPC.

The extension key is synchronized by the primary vPC member to the secondary vPC member. You can verify that the extension key is the same on both peers by using the **show svs connection** command. If the two Cisco Nexus 5548 devices were not vPC peers, the extension key would be different for each device, and each device would have to establish its own connection to the vCenter.

**Step 21** Verify that the SVS connection between the vCenter and the vPC system is activated properly and that the new VDS device, Pod1PTS, and the port profile are imported to the vCenter as the port group of the new VDS device.

```
POD1-5548-1(config)# show svs connection

connection 2VC:
  ip address: 10.29.186.125
  remote port: 80
  vrf: amang
  protocol: vmware-vim https
  certificate: default
  datacenter name: DC1
  extension key: Cisco_Nexus_1000V_1543569268
  dvs name: Pod1PTS
  DVS uuid: 44 f1 04 50 47 cc 42 d6-ba ea 53 f9 f9 32 4b fb // This is pushed by
VCenter to switch
  config status: Enabled
  operational status: Connected // Only
Primary connects to VCenter
  sync status: in progress
  version: VMware vCenter Server 4.1.0 build-258902

Peer Info:
```

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**


```

-----
connection 2VC:
  ip address: 10.29.186.125
  remote port: 80
  vrf: management
  protocol: vmware-vim https
  extension key: Cisco_Nexus_1000V_1543569268 //This extension key is result of sync
  certificate: default //status of the VPC primary to second.
    certificate match: TRUE
  datacenter name: DC1
  dvs name: Pod1PTS
  DVS uuid: -
  config status: Disabled
  operational status: Disconnected

```

- Step 22** After the SVS connection is activated, verify that the vPC system pushed the port profile VLAN61 and two other port profiles (that are not used) to the VDS. These port profiles become the VDS port groups under the DC1 datacenter. Also, verify that Po1PTS VDS was created by the vPC system in vCenter as shown in [Figure 2-19](#).

**Figure 2-19 vPC system in vCenter**

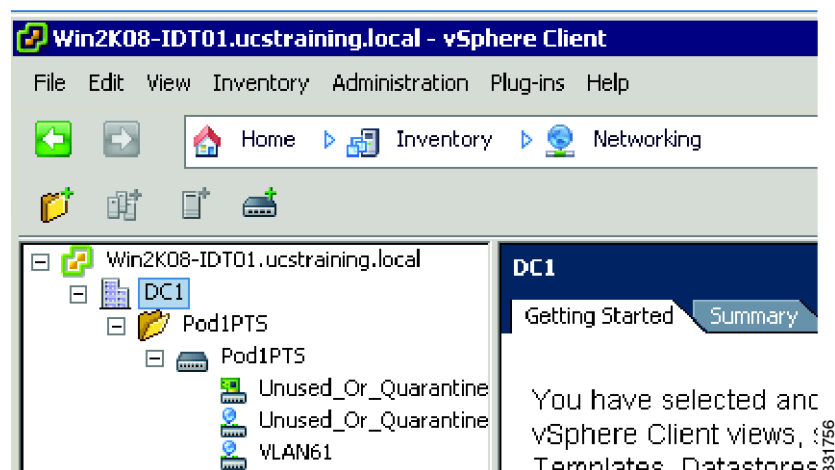

POD1-5548-2# **show svcs connection**

```

connection 2VC:
  ip address: 10.29.186.125
  remote port: 80
  vrf: management
  protocol: vmware-vim https
  certificate: default
  datacenter name: DC1
  extension key: Cisco_Nexus_1000V_1543569268 // Received from the VPC Primary
  dvs name: pod1PTS
  DVS uuid: -
  config status: Enabled
  operational status: Disconnected
  sync status: -
  version: -

```

Peer Info:

```

-----
connection 2VC:

```



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
ip address: 10.29.186.125
remote port: 80
vrf: amang
protocol: vmware-vim https
extension key: Cisco_Nexus_1000V_1543569268
certificate: default
  certificate match: TRUE
datacenter name: DC1
dvs name: Pod1PTS
DVS uuid: 44 f1 04 50 47 cc 42 d6-ba ea 53 f9 f9 32 4b fb //Received from VCenter
config status: Enabled
operational status: Connected
```

- Step 23** Verify that the VEM has been installed in PTS mode on both ESX hosts successfully. See the *VM-FEX/A-FEX Hardware/Software Installation Procedure* in case the VEM has not been installed correctly. (Currently the VDS device has no host or any VMNIC associated. It has only port groups available.)



**Caution**

Add the two ESX hosts to the DC1 datacenter in the vSphere server by choosing the **Home > Inventory > Hosts & Clusters** folder. Define the following characteristics for the two hosts:

**ESX Host1:**

```
10.29.186.197
Username= root
Password= Not4u2use!
Use the Enterprise License Plus entered
Select the shared datastore visible across the Qlogic VHBA and the datastore1 which is local.
```


**ESX Host 2:**

```
10.29.186.198
Username= root
Password= Not4u2use!
se the Enterprise License Plus entered.
Select the shared datastore visible across the Qlogic VHBA and the datastore1 which is local.
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


While adding the host, the wizard should show a screen for each host as shown in [Figure 2-20](#).

**Figure 2-20 Adding the Host Wizard Screen**

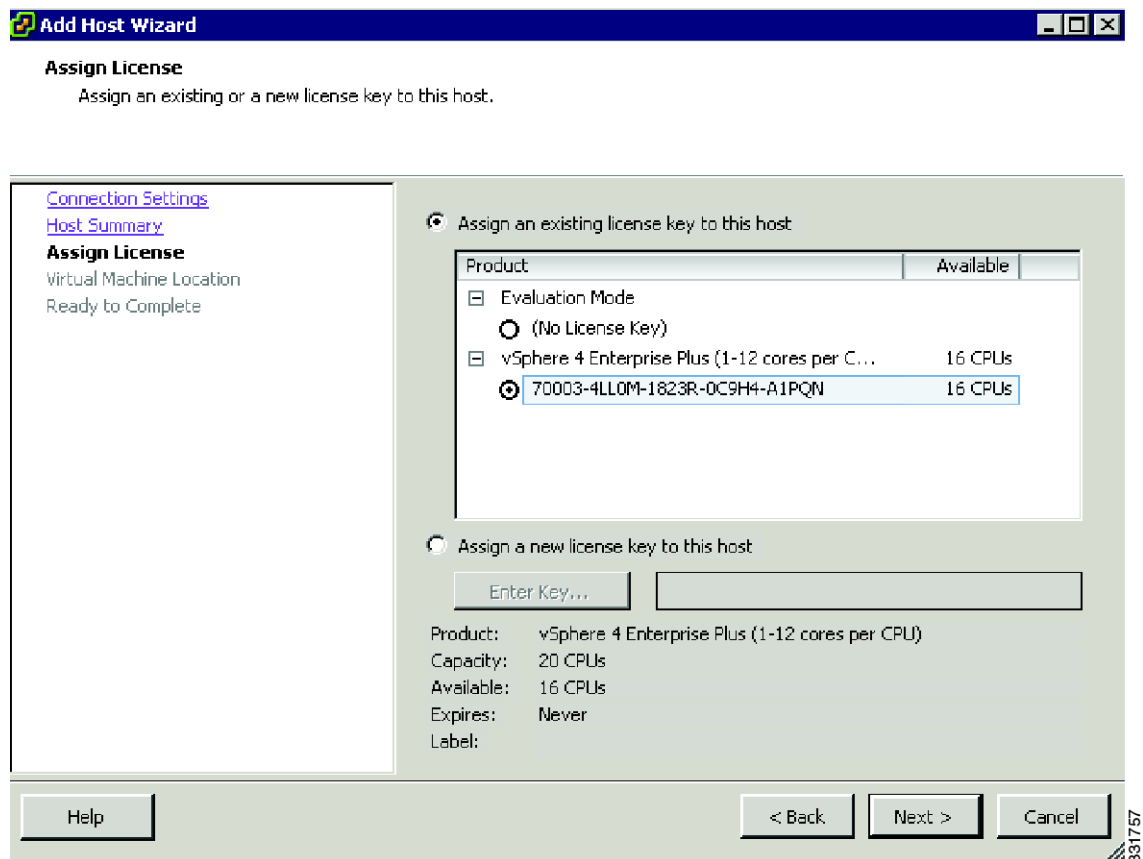

The summary before finishing the wizard is shown in [Figure 2-21](#).


**Figure 2-21 Reviewing the Summary**

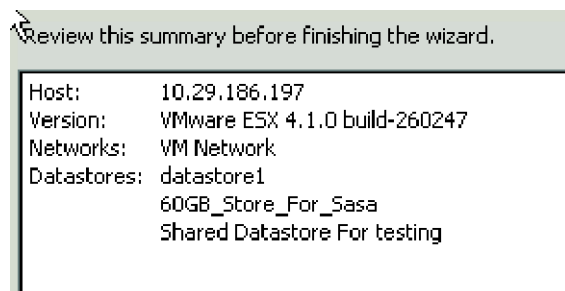

The New Virtual Machines on vSphere Client is shown in [Figure 2-22](#).


**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Figure 2-22 New Virtual Machines on vSphere Client**

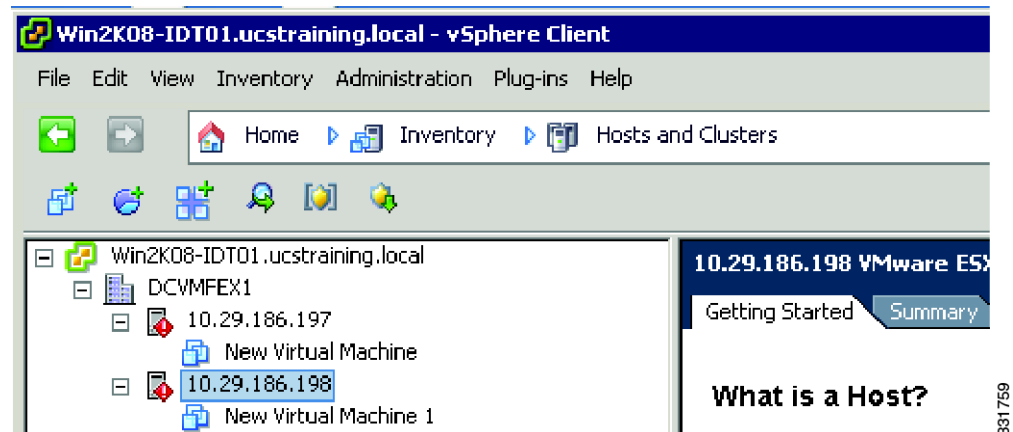

- Step 24** Add ESX host 1 and ESX host 2 to the PodYPTS VDS that was created. From the VSphere Server choose the **Home > Inventory > Networking** folder and right-click the data center DCy, where y is the number of your pod. See [Figure 2-23](#).

**Figure 2-23 Adding Hosts to the PodYPTS VDS**

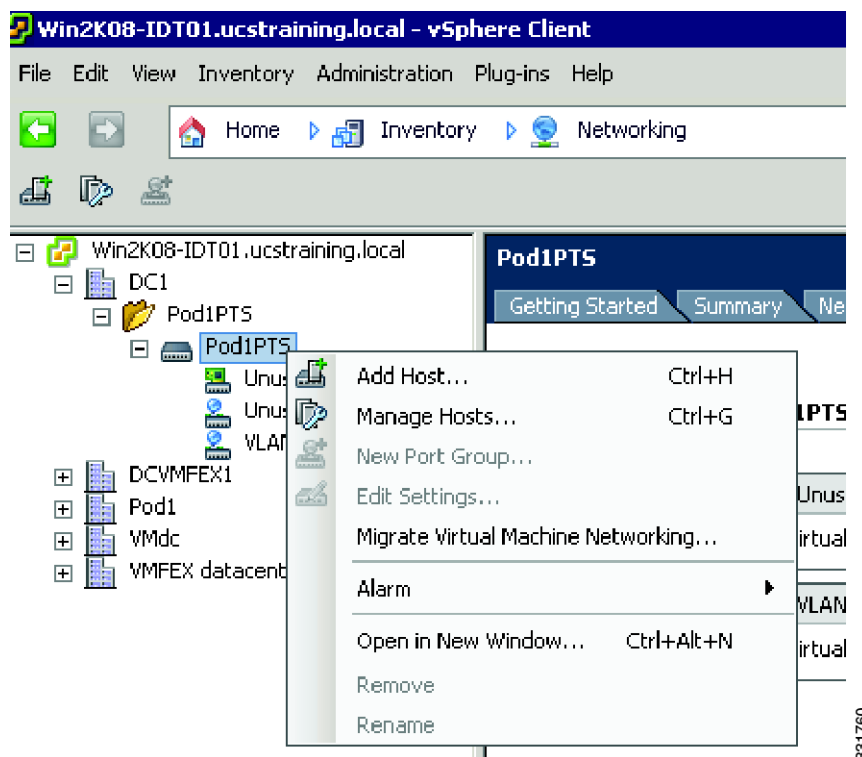

**Note**

If the ESX host cannot be added to the data center, verify that it is not managed by another vCenter server. Access the host remotely from the other vCenter server and try to add it to the correct vCenter server. Choose the vSphere Enterprise License Plus license.

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

- Step 25** From the vCenter server, choose **Home > Inventory > Networking** for your selected PODy PTS VDS under PODy, where y is your pod number
- Step 26** Add both hosts to the VDS and choose the two VMNICs (the static fixed VNICs needed by VMware for the VMware proxy path).
- Step 27** Choose the two VMNICs for each ESX host that is recognized by the staticeth 0 and staticeth 1 interfaces on the Cisco UCS VIC VNIC and that are connected to the vEthernet 1, vEthernet 2, vEthernet 3 and vEthernet 4 interfaces. See [Figure 2-24](#).

**Figure 2-24 Viewing details of each VMNIC**

Host/Physical adapters	In use by switch	Physical adapter details	OVUplink port group
<input checked="" type="checkbox"/> 10.29.186.197 <b>Select physical adapters</b>			
<input type="checkbox"/> vmnic0	vSwitch0	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic1	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input checked="" type="checkbox"/> vmnic16	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input checked="" type="checkbox"/> vmnic17	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic2	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic3	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic4	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic5	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input checked="" type="checkbox"/> 10.29.186.198 <b>Select physical adapters</b>			
<input type="checkbox"/> vmnic0	vSwitch0	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic1	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input checked="" type="checkbox"/> vmnic16	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input checked="" type="checkbox"/> vmnic17	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic2	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic3	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic4	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...
<input type="checkbox"/> vmnic5	--	<a href="#">View details...</a>	Unused_Or_Quarantine_U...

331761




**Note**

Use the **View Details** option of each VMNIC to help you choose the proper static VMNICs. In this particular case, VMNIC16 and VMNIC17 are assigned to each host because they are connected to vEthernet 1, vEthernet 2, vEthernet 3 and vEthernet 4 interfaces. See [Figure 2-25](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-25 Physical Adapter Details - vEthernet1**

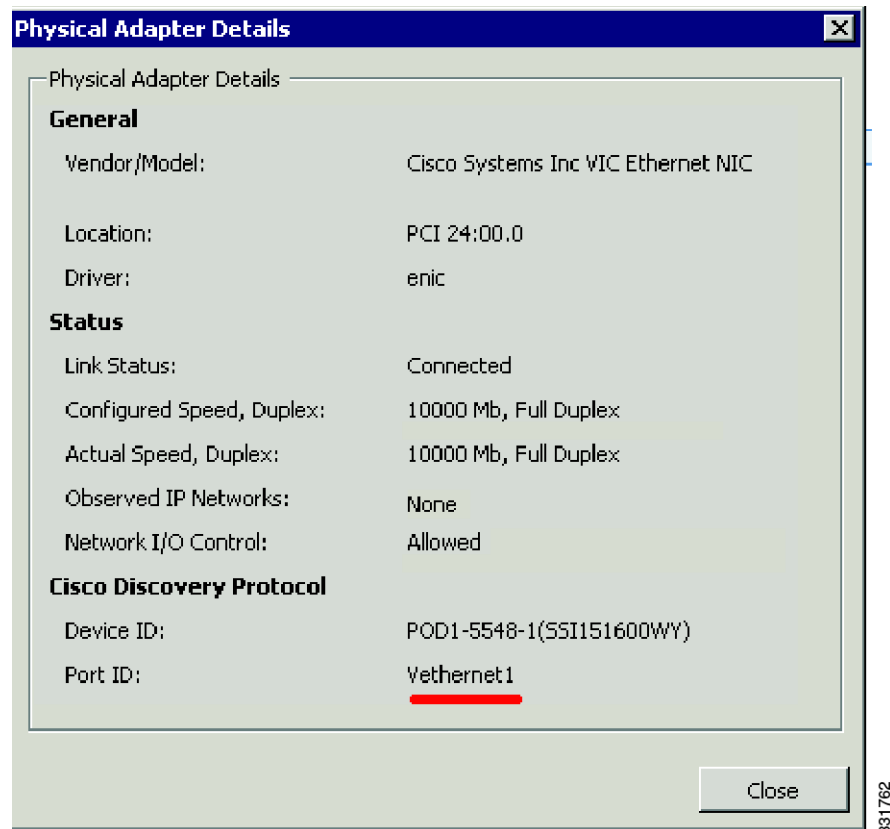

The Physical Adapter Details for the Port ID vEthernet3 is shown in [Figure 2-26](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-26 Physical Adapter Details - vEthernet3**

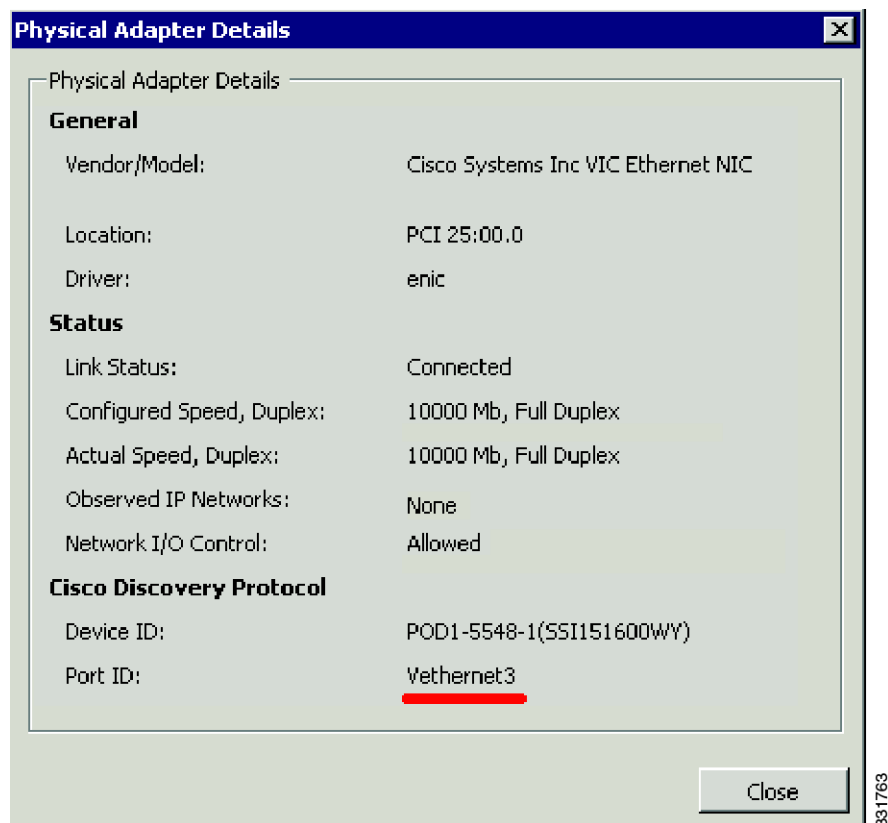

The Physical Adapter Details for the Port ID vEthernet2 is shown [Figure 2-27](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-27**      **Physical Adapter Details - vEthernet2**

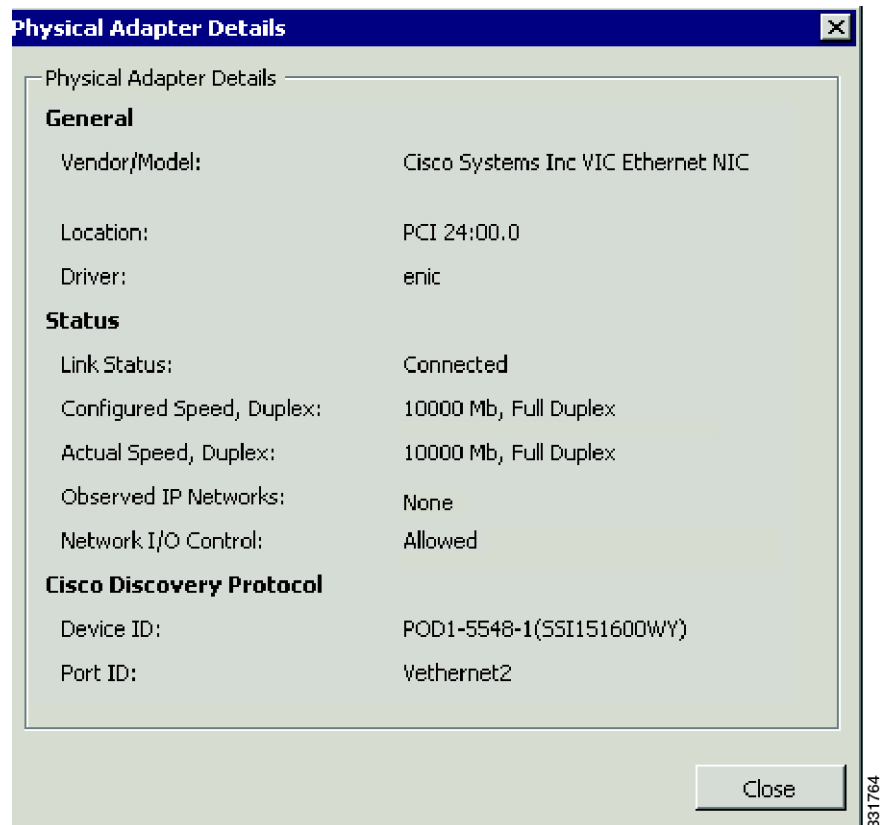

The Physical Adapter Details for the Port ID vEthernet4 is [Figure 2-28](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-28 Physical Adapter Details - vEthernet4**

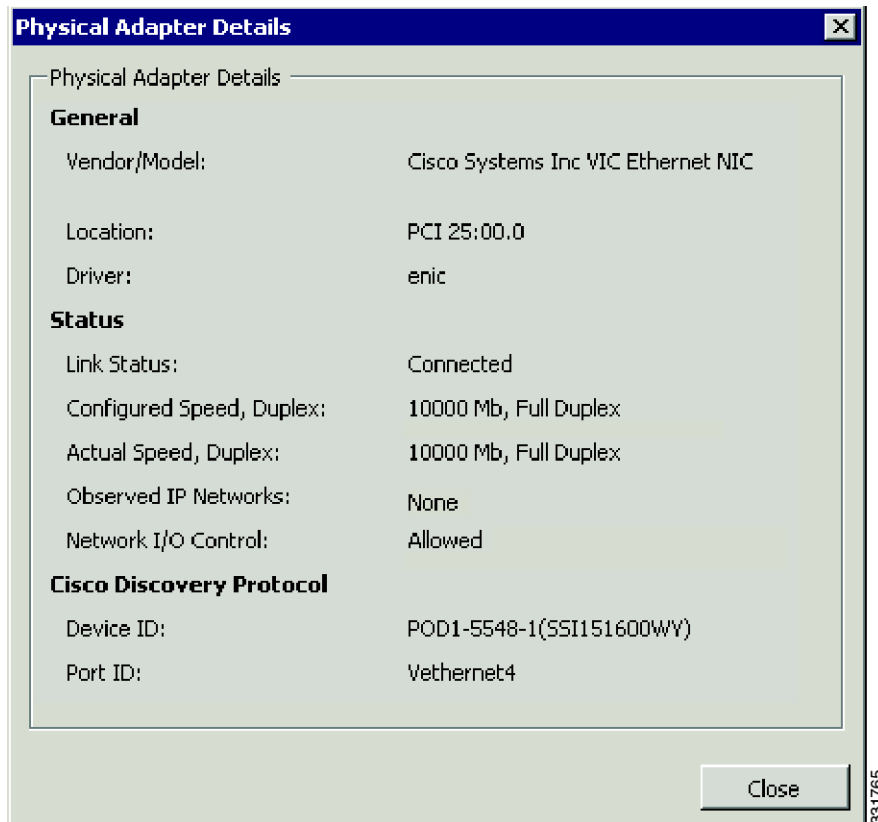

**Step 28** Finish the association of the VMNIC with the VEM in the PTS process by leaving the rest of the parameters with their default settings.

**Step 29** Choose **Next** until the process of adding the two hosts is finished.

The results of this process are as follows:


- A new VDS, named PTS, has been created.
- The new VDS is based on the two ESX hosts.
- The ESX hosts are each running a VEM in PTS mode.
- Each VEM is associated to the two static uplink VMNICs.
- The static uplink VMNICs are up and connected to the vEthernet 1, vEthernet 2, vEthernet 3 and vEthernet 4 interfaces.

All four VMNICs have to be up and running. Notice the red x next to VMNIC, which indicates that the VMNIC is not connected, and the two static VNICs that have been mapped to the VMNICs to the Pod1PTS VDS on each host as shown in [Figure 2-29](#).



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

**Figure 2-29 Pod1PTS VDS on each host**

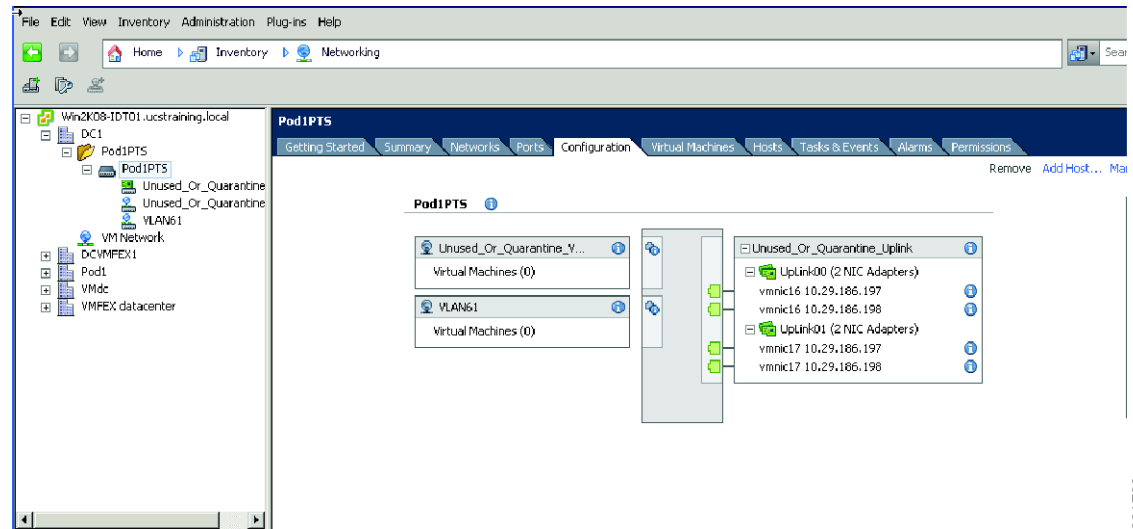

The adapter is first being brought up.

If this interface is a fixed vEthernet interface, the NIV adapter also creates one vEthernet interface on the active Cisco Nexus 5000 Series device and one vEthernet interface on the standby Cisco Nexus 5000 Series device. The NIV adapter uses the same channel number in both the VIF\_CREATE messages to the two Cisco Nexus 5000 Series devices. For static fixed vEthernet interface, you must create the vEthernet interface on the two Cisco Nexus 5000 Series devices with the same vEthernet interface number and channel number. For dynamically created fixed vEthernet interface, the two Cisco Nexus 5000 Series devices coordinate to ensure the same channel number on the two Cisco Nexus 5000 Series device are mapped to the same vEthernet interface number.

If this is a floating (static or dynamic) vEthernet interface, the NIV adapter creates one vEthernet interface on the active Cisco Nexus 5000 Series device and one vEthernet interface on the standby Cisco Nexus 5000 Series device. Each Cisco Nexus 5000 Series device runs its own VIC protocol session to the NIV adapter. The NIV adapter uses the same dvport-id in both VIF\_CREATE messages to the two Cisco Nexus 5000 Series devices. The two Cisco Nexus 5000 Series devices coordinate to ensure the same vEthernet number is allocated to the two vEthernet interfaces that are mapped to the same dvport\_id.

## VM-to-VM-FEX Connection Scenario


The VM-to-VM-FEX Connection Scenario is as follows:

- Step 1** Create the VM on the ESX host and connect it using VM-FEX (VNLink in the hardware with PTS) to the dynamic vEthernet port on the vPC system using hardware-based redundancy.
- Step 2** On ESX Host 1, create a new VM to be migrated from one host to the other host in order to show the floating vEthernet interface. The VM is connected in VM-FEX mode to the vPC system. VM storage needs to be available to both hosts. The storage is the VMFS-formatted Logical Unit Number (LUN) that resides on the FC Storage array and is available across the multihop Fiber Channel over Ethernet (FCoE) network (vfc 400 and vfc 500 interfaces on Qlogic adapter).

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Step 3** Right-click the host to add the new VM. See [Figure 2-30](#).

**Figure 2-30 Adding the new Virtual Machine**

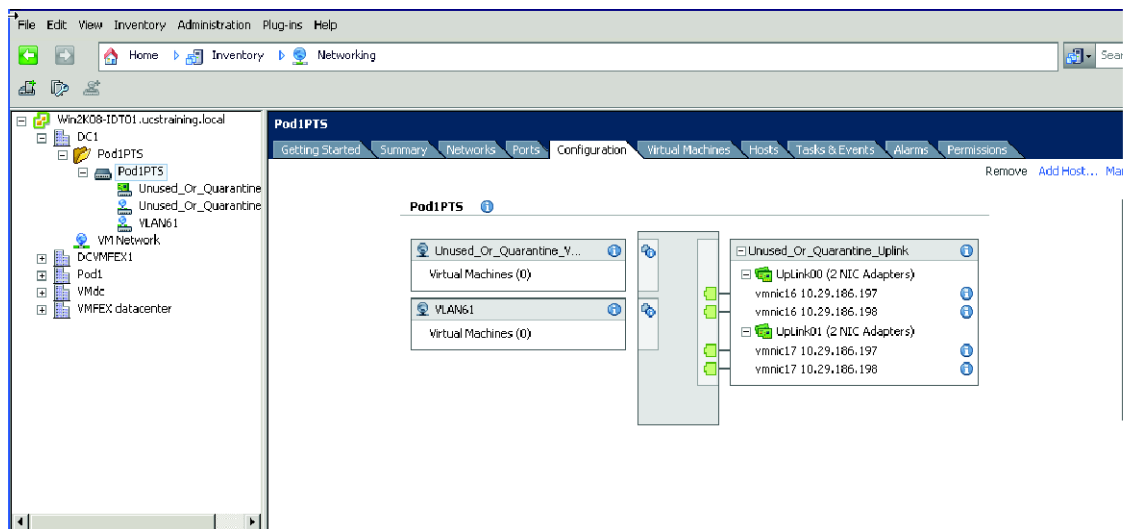


331767

**Step 4** Choose the Typical VM, associate the Name to the VM define your DCY (Y is the number of your pod) as the Inventory location and choose the 60GB\_shared\_datastore.

**Step 5** Choose the Linux OS Red Hat Enterprise Linux 4 (64-bit) and click **Next**. See [Figure 2-31](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-31**      **Creating a new Virtual Machine**

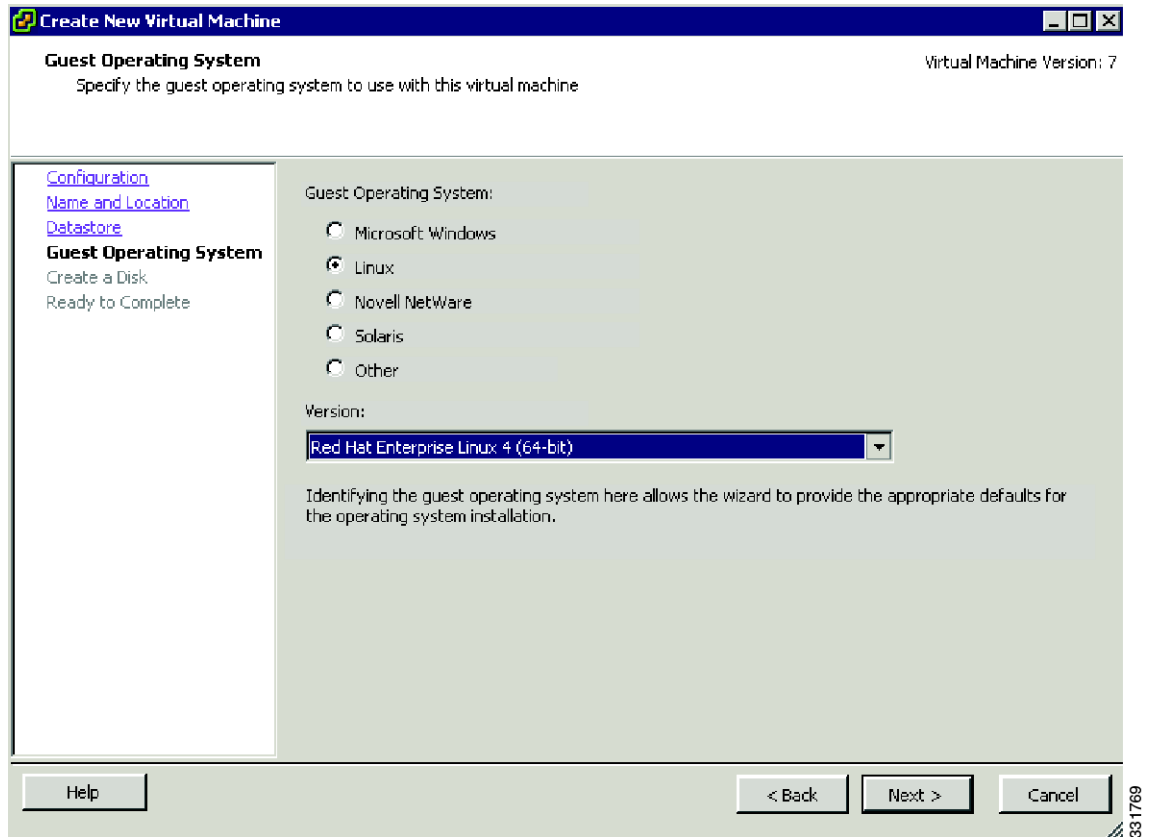

**Step 6**      Choose the 7-GB to 15GB virtual disk on the shared data store as shown in [Figure 2-32](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-32 Shared Datastore**

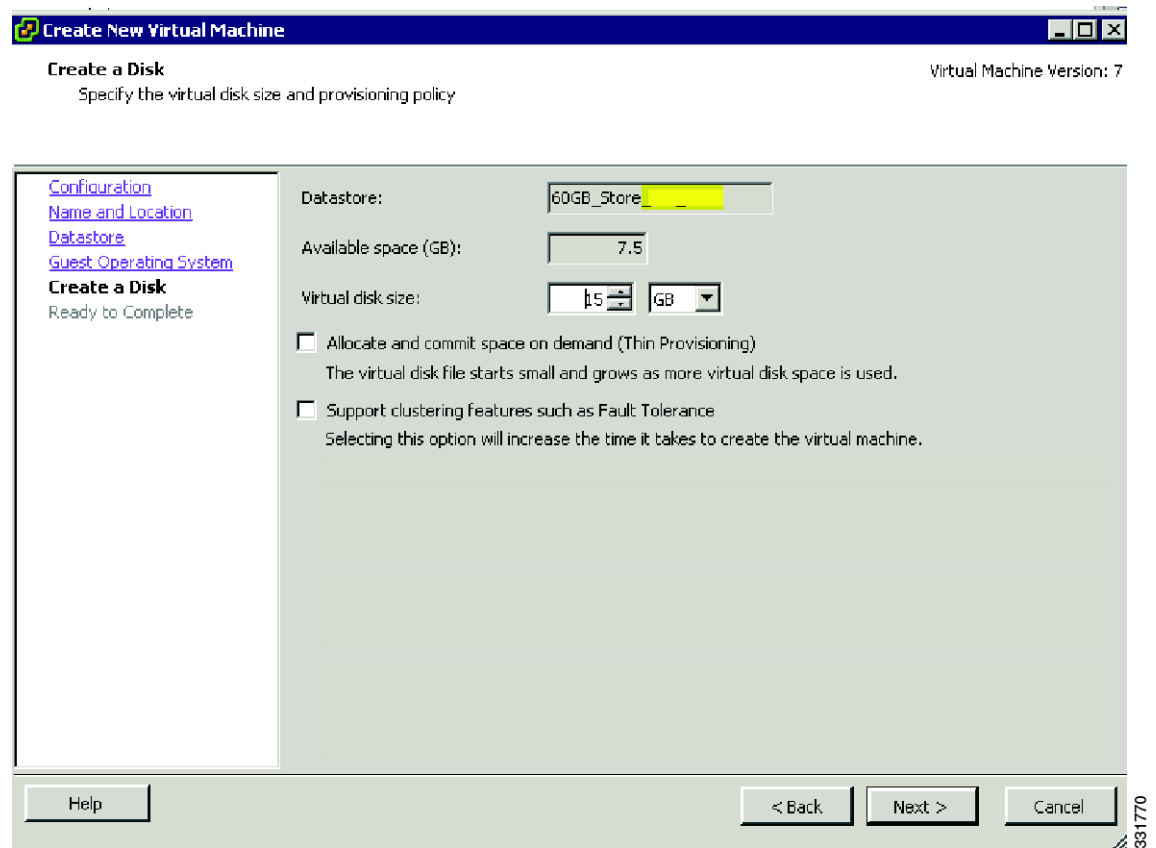

The Ready to Complete Screen is shown in [Figure 2-33](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-33 Ready to Complete Screen**

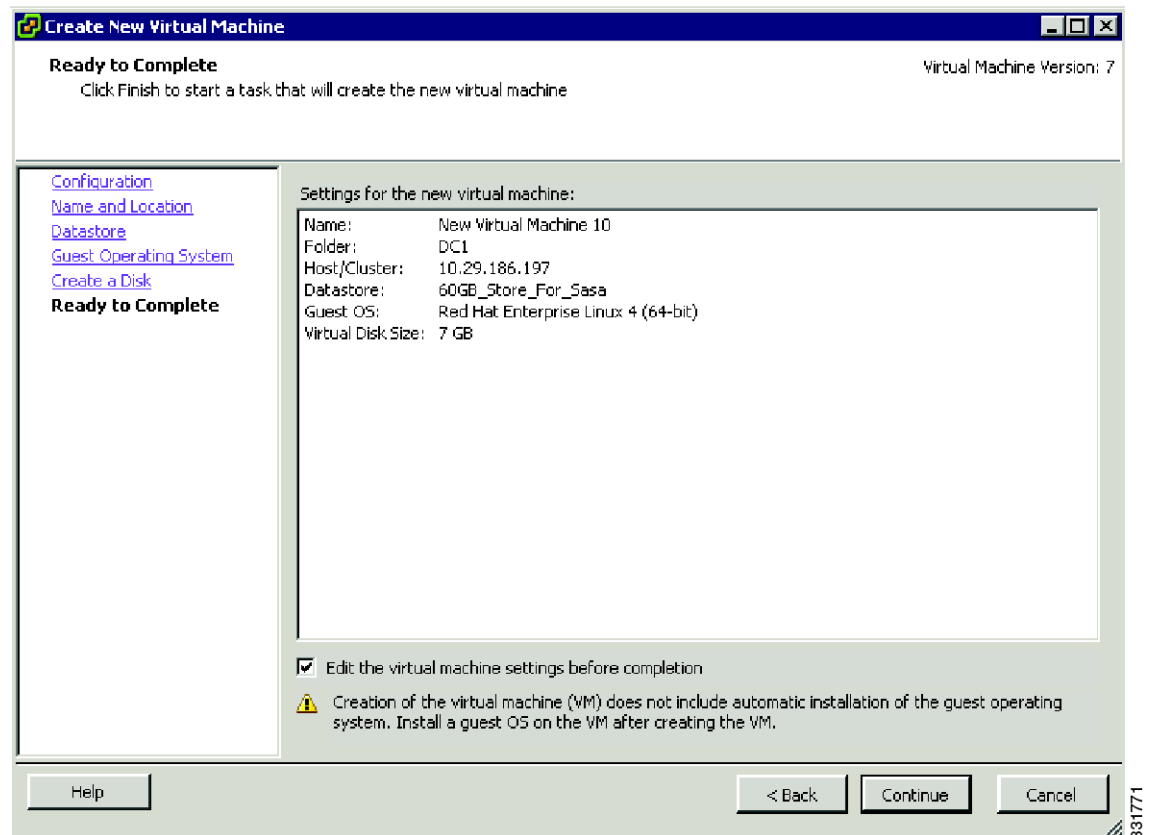

- Step 7** Choose **New Nic** to map the new VM VNIC to the VLAN61 port group that was created on the vPC system as shown in [Figure 2-34](#).

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***


**Figure 2-34 Virtual Machine Properties**

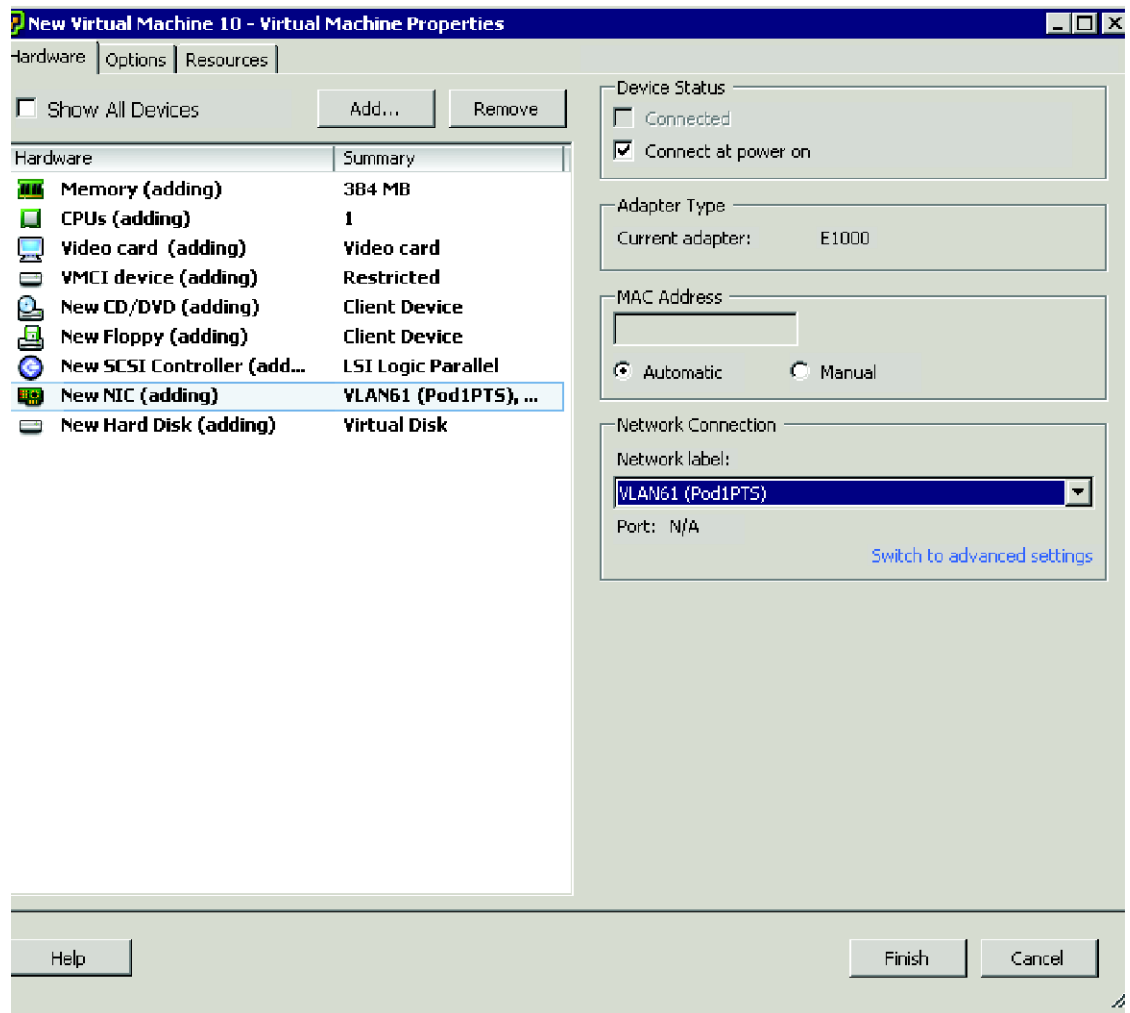

- Step 8** Choose **New CD/DVD** drive to map the RedHat ISO image from the shared storage as a new virtual CD/DVD drive as shown in [Figure 2-35](#).


**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Figure 2-35 Mapping the RedHat ISO image as a new virtual CD/DVD drive**

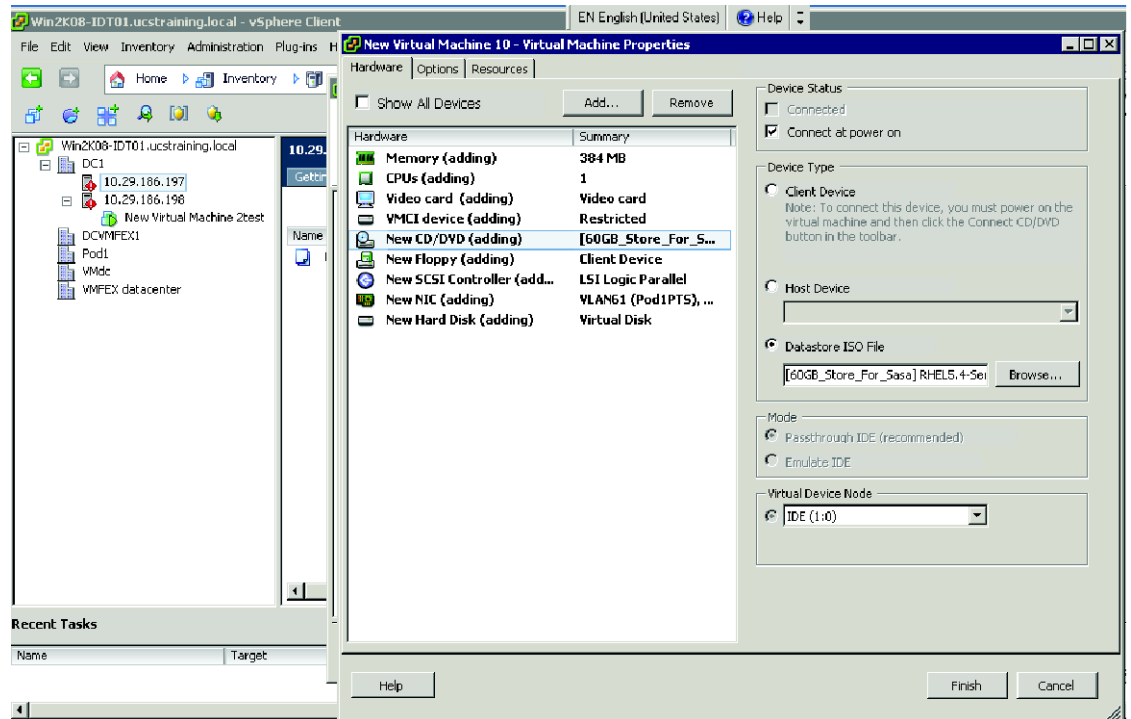

- Step 9** Right click **New Virtual Machine** and choose **Power> Power on** the VM and observe the loading of the RedHat OS.


**Figure 2-36 Powering on the Virtual Machine**

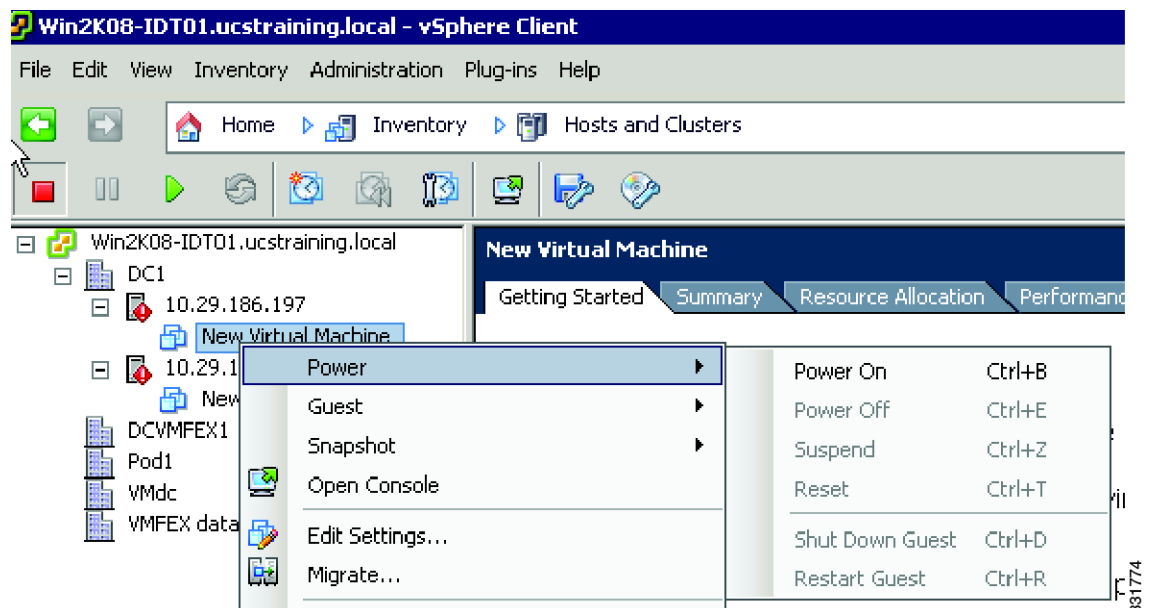

- Step 10** From the VM console, notice that the OS has loaded as shown in Figure 2-37.

**Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)**

**Figure 2-37 Red Hat Linux 5 Loaded Screen**

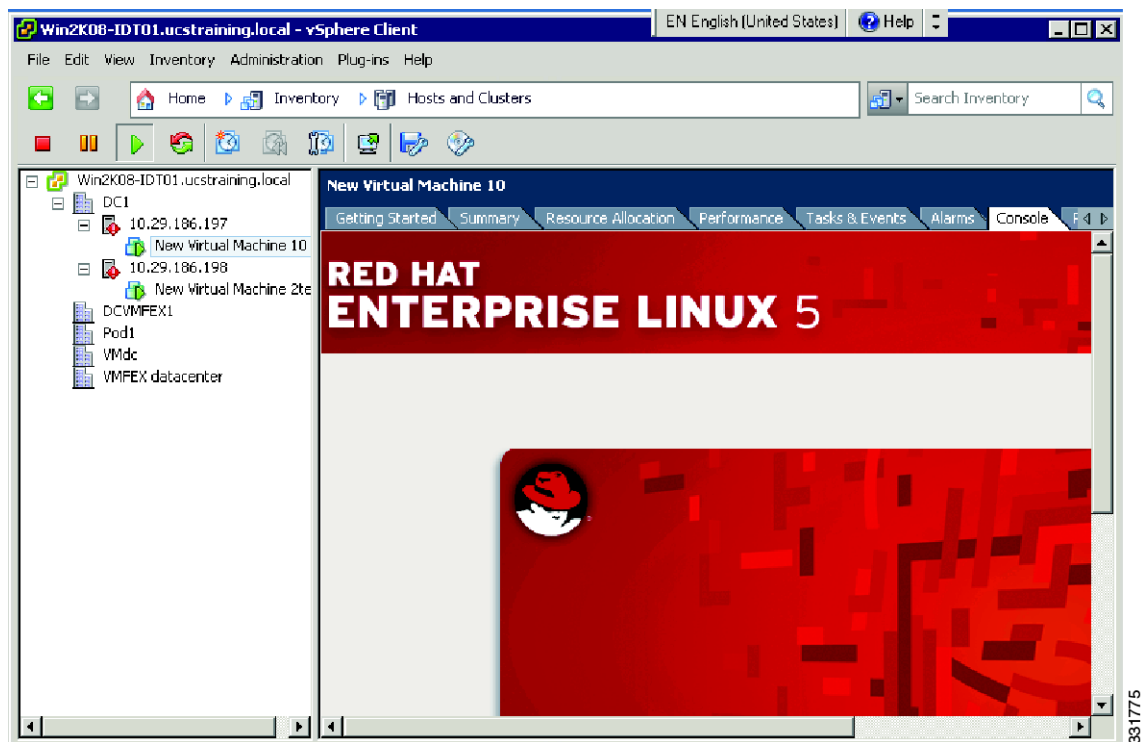

## VM-FEX Connectivity Verification Scenario

The VM-FEX Connectivity Verification Scenario is as follows:

- Step 1** Observe how the VM is mapped to the dynamic VNIC/VMNIC and connected across VM-FEX to the new automatically created dynamic vEthernet interface on the Cisco Nexus 5548 device.

The Cisco UCS VIC in NIV mode enables the dynamic VNIC when the VM is associated to port group VLAN61 and configures it with the parameters inherited from the port group. The Cisco UCS VIC sends a DCBX VIC message to the Cisco Nexus 5548 device vPC system. The vPC system enables a dynamic vEthernet interface in active/standby mode on the vPC members and connects the VNIC to the vPC system using a VN-Link in the hardware with PTS. The dynamic VNIC is one of the 20 provisioned dynamic VNICs on the UCS VIC with the in-hardware-based failover enabled.

```
POD1-5548-2# show running // this interface was not manually configured but automatically
that is why it is called dynamic
interface Vethernet5
inherit port-profile VLAN61
vsi mac 0050.5684.0000
```

...output omitted...

```
OD1-5548-1# show interface vethernet 5
Vethernet5 is up
  Bound Interface is Ethernet1/17
  Hardware is Virtual, address is 0023.04ee.be01
  Port mode is access
  Speed is auto-speed
```



## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

```

    Duplex mode is auto
  300 seconds input rate 0 bits/sec, 0 packets/sec
  300 seconds output rate 0 bits/sec, 0 packets/sec
Rx
  0 unicast packets  0 multicast packets  0 broadcast packets
  0 input packets  0 bytes
  0 input packet drops
Tx
  0 unicast packets  5 multicast packets  0 broadcast packets
  5 output packets  1420 bytes
  0 flood packets
  0 output packet drops

POD1-5548-1#

POD1-5548-1# show running // this interface was not manually configured but automatically
that is why it is called dynamic

interface Vethernet5
  inherit port-profile VLAN61
  vsi mac 0050.5684.0000

...output omitted...

POD1-5548-2# show interface vethernet 5
Vethernet5 is up
  Bound Interface is Ethernet1/17
  Hardware is Virtual, address is 0023.04ee.be01
  Port mode is access
  Speed is auto-speed
  Duplex mode is auto
  300 seconds input rate 0 bits/sec, 0 packets/sec
  300 seconds output rate 0 bits/sec, 0 packets/sec
Rx
  0 unicast packets  0 multicast packets  0 broadcast packets

POD1-5548-2# show interface veth 5 detail // veth 5 is standby on switch NX5548-2

vif_index: 25
-----
  veth is bound to interface Ethernet1/17 (0x1a010000) // veth 5 is mapped to phy. Interf.
eth 1/17
  priority: 0
  vntag: 6
  status: standby
  registered mac info:

POD1-5548-2#

```

**Step 2** Verify that the VM VNIC MAC address is the same as the MAC address of the dynamic VNIC connected to dynamic vEthernet port number 5.

```

POD1-5548-2# show mac address
Legend:
    * - primary entry, G - Gateway MAC, (R) - Routed MAC, O - Overlay MAC
    age - seconds since last seen, + - primary entry using vPC Peer-Link

```

VLAN	MAC Address	Type	age	Secure	NTFY	Ports
+ 61	0050.5684.0000	dynamic	0	F	F	Po10 // VM connects in VLAN 61
+ 1	588d.090f.0970	dynamic	0	F	F	Po10

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

```
+ 1      588d.090f.0971    dynamic  0          F      F    Po10
+ 1      588d.090f.0b3c    dynamic  0          F      F    Po10
+ 1      588d.090f.0b3d    dynamic  0          F      F    Po10
POD1-5548-2#
```

These interfaces are reported by vCenter Server and are available to the Pod1PTS VDS. Port 32 is in VLAN61 and is a dynamic VMNIC interface that is up and connected to the VM VNIC is shown in Figure 2-38.

**Figure 2-38**      *Dynamic VMNIC Interface*

Port ID	Name	Connectee	Runtime MAC address	Port group	State	VLAN ID
32	--	New Virtual Machine	--	VLAN61	Link Up	VLAN access : 0
64	Uplink00	10.29.186.198 - vmnic16	--	Unused_Or_Quarant...	Link Up	VLAN access : 0
65	Uplink01	10.29.186.198 - vmnic17	--	Unused_Or_Quarant...	Link Up	VLAN access : 0
96	Uplink00	10.29.186.197 - vmnic16	--	Unused_Or_Quarant...	Link Up	VLAN access : 0
97	Uplink01	10.29.186.197 - vmnic17	--	Unused_Or_Quarant...	Link Up	VLAN access : 0
0	--	--	--	Unused_Or_Quarant...	--	--
1	--	--	--	Unused_Or_Quarant...	--	--
10	--	--	--	Unused_Or_Quarant...	--	--
100	Uplink04	--	--	Unused_Or_Quarant...	--	--

You can list them using the ESX CIMC by opening a KVM session to the host. Alternatively, you can enter the following **ESX console** command to list the 20 dynamic VMNICs that are available to be activated once the VM connects to port group VLAN61:

```
ifconfig-a | more
```

## Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)

The names of dynamic VNICs in the output of the command are vm\_vmnice0 through vf\_vmnice19 is show in Figure 2-39.

**Figure 2-39** Names of Dynamic VNICs in the Output

```

vm_vmnice0 Link encap:Ethernet  HWaddr 00:00:00:00:00:00
UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
RX packets:18 errors:0 dropped:0 overruns:0 frame:0
TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:4968 (4.8 KiB)  TX bytes:0 (0.0 b)
Interrupt:255

vf_vmnice1 Link encap:Ethernet  HWaddr 00:00:00:00:00:00
UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
RX packets:0 errors:0 dropped:0 overruns:0 frame:0
TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:0 (0.0 b)  TX bytes:0 (0.0 b)
Interrupt:255

vm_vmnice0 Link encap:Ethernet  HWaddr 00:00:00:00:00:00
UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
RX packets:18 errors:0 dropped:0 overruns:0 frame:0
TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:4968 (4.8 KiB)  TX bytes:0 (0.0 b)
Interrupt:255

vf_vmnice1 Link encap:Ethernet  HWaddr 00:00:00:00:00:00
UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
RX packets:0 errors:0 dropped:0 overruns:0 frame:0
TX packets:0 errors:0 dropped:0 overruns:0 carrier:0
collisions:0 txqueuelen:1000
RX bytes:0 (0.0 b)  TX bytes:0 (0.0 b)
Interrupt:255

```

- Step 3** Power off the VM that is connected to the VLAN61 port group and observe how vEthernet 5 moves to a non existing state in the running configuration and the dynamic MAC address disappears from the MAC address table.

```
POD1-5548-2# show interface vethernet 5
```

The interface is no longer in the running configuration (even though port 32, the dynamic VNIC that was the VMNIC interface in the vCenter server in VLAN61, is also down.)

- Step 4** Power on the VM again.

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

## Configuration Summary

The VM is powered on and resides on the ESX Host 1 with all the information stored on the shared storage.

The VM was connected to the PODy (where y is the number of your POD) PTS VDS by associating it to port group VLAN61 that was created on the Cisco Nexus 5548 device. The VM has been connected to the vPC system automatically using a VN-Link in the hardware in PTS mode or in VM-FEX mode.

The VEM bits are used in PTS mode to connect the VM VNIC to the VMNIC interface.

In this case, the VMNIC interface is not a real VMNIC but a dynamic VNIC that is presented as an interface to the ESX OS. The dynamic VNIC is enabled when the Cisco UCS VIC creates and configures the VNIC parameters inherited from port group VLAN61.

## Sample Configuration

```
!Command: show running-config
!Time: Thu Sep  1 09:29:07 2011

version 5.1(3)N1(1)
feature fcoe

install feature-set virtualization
feature-set virtualization
hostname POD1-5548-1

feature telnet
cfs eth distribute
feature interface-vlan
feature lacp
feature vmfex
feature vpc
feature lldp
feature fex

username adminbackup password 5 ! role network-operator
username admin password 5 $1$W40UpSMJ$RP8cRyIJjLhVYlwls9lcq1 role network-admin
no password strength-check

banner motd #Nexus 5000 Switch
#

ip domain-lookup
class-map type qos class-fcoe
class-map type queuing class-fcoe
    match qos-group 1
class-map type queuing class-all-flood
    match qos-group 2
class-map type queuing class-ip-multicast
    match qos-group 2
class-map type network-qos class-fcoe
    match qos-group 1
class-map type network-qos class-all-flood
    match qos-group 2
class-map type network-qos class-ip-multicast
    match qos-group 2

system qos
    service-policy type qos input fcoe-default-in-policy
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```

service-policy type queuing input fcoe-default-in-policy
service-policy type queuing output fcoe-default-out-policy
service-policy type network-qos fcoe-default-nq-policy
policy-map type control-plane copp-system-policy
control-plane
service-policy input copp-system-policy
snmp-server user admin network-admin auth md5 0xb2ee7c583c00370672f6605f06113332
priv 0xb2ee7c583c00370672f6605f06113332 localizedkey
snmp-server enable traps entity fru

vrf context management
ip route 0.0.0.0/0 10.29.184.1
vlan 1,61
vlan 200
fcoe vsan 200
vethernet auto-create
vpc domain 1
role priority 90
peer-keepalive destination 10.29.186.196
port-profile type vethernet VLAN61
switchport access vlan 61
state enabled
port-profile type ethernet Unused_Or_Quarantine_Uplink
shutdown
description Port-group created for Nexus1000V internal usage. Do not use.
state enabled
port-profile type vethernet Unused_Or_Quarantine_Veth
shutdown
description Port-group created for Nexus1000V internal usage. Do not use.
state enabled
port-profile type vethernet statfloat
sw access vlan 1
state enabled
vsan database
vsan 200
fcdomain fcid database
vsan 200 wwn 20:00:58:8d:09:0f:09:6e fcid 0x730000 dynamic
vsan 200 wwn 21:00:00:c0:dd:15:21:7f fcid 0x730001 dynamic
vsan 200 wwn 21:00:00:c0:dd:12:14:03 fcid 0x730002 dynamic

interface Vlan1

interface Vlan61
no shutdown
ip address 10.10.10.1/24

interface port-channel10
switchport mode trunk
spanning-tree port type network
vpc peer-link

interface vfc300
bind interface Ethernet1/26
switchport mode E
switchport trunk allowed vsan 1
switchport trunk allowed vsan add 200
no shutdown

interface vfc100
bind interface Vethernet100

interface vfc400
bind interface Ethernet1/5

```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
no shutdown

interface vfc200
  bind interface Vethernet200

interface vfc500
  bind interface Ethernet1/6
  no shutdown
vsan database
  vsan 200 interface vfc300
  vsan 200 interface vfc100
  vsan 200 interface vfc400
  vsan 200 interface vfc200
  vsan 200 interface vfc500

interface Ethernet1/1

interface Ethernet1/2

interface Ethernet1/3

interface Ethernet1/4

interface Ethernet1/5
  switchport mode trunk

interface Ethernet1/6
  switchport mode trunk

interface Ethernet1/7

interface Ethernet1/8

interface Ethernet1/9

interface Ethernet1/10

interface Ethernet1/11

interface Ethernet1/12

interface Ethernet1/13

interface Ethernet1/14

interface Ethernet1/15

interface Ethernet1/16

interface Ethernet1/17
  switchport mode vntag

interface Ethernet1/18
  switchport mode vntag

interface Ethernet1/19

interface Ethernet1/20

interface Ethernet1/21

interface Ethernet1/22
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface Ethernet1/23

interface Ethernet1/24
  shutdown

interface Ethernet1/25

interface Ethernet1/26
  switchport mode trunk

interface Ethernet1/27
  switchport mode trunk
  spanning-tree port type network
  channel-group 10

interface Ethernet1/28
  switchport mode trunk
  spanning-tree port type network
  channel-group 10

interface Ethernet1/29
  switchport mode trunk
  spanning-tree port type network
  channel-group 10

interface Ethernet1/30
  switchport mode trunk
  spanning-tree port type network
  channel-group 10

interface Ethernet1/31

interface Ethernet1/32

interface mgmt0
  ip address 10.29.186.195/22

interface Vethernet1
  bind interface Ethernet1/17 channel 10

interface Vethernet2
  bind interface Ethernet1/18 channel 10

interface Vethernet3
  bind interface Ethernet1/17 channel 11

interface Vethernet4
  bind interface Ethernet1/18 channel 11

interface Vethernet5
  inherit port-profile VLAN61
  vsi mac 0050.5684.0004

interface Vethernet100
  shutdown
  switchport mode trunk
  bind interface Ethernet1/17 channel 3

interface Vethernet145
  inherit port-profile statfloat
  vsi mac 0050.5601.0144

interface Vethernet200
  shutdown
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```

switchport mode trunk
bind interface Ethernet1/18 channel 3

line console
line vty
boot kickstart bootflash:/n5000-uk9-kickstart.5.1.3.N1.0.223.gbin
boot system bootflash:/n5000-uk9.5.1.3.N1.0.223.gbin
svs connection 2VC
    protocol vmware-vim
    remote ip address 10.29.186.125 port 80 vrf managment
    vmware dvs uuid "8e c7 04 50 cb 46 d1 71-d1 98 68 74 a3 26 6d ff" datacenter-n
ame DC1
    connect
logging monitor 4
zone default-zone permit vsan 1
zone default-zone permit vsan 200

!Command: show running-config
!Time: Thu Sep  1 09:36:47 2011

version 5.1(3)N1(1)
feature fcoe

install feature-set virtualization
feature-set virtualization
hostname POD1-5548-2

feature telnet
cfs eth distribute
feature interface-vlan
feature lacp
feature vmfex
feature vpc
feature lldp
feature fex

username adminbackup password 5 ! role network-operator
username admin password 5 $1$2/VZLE3/$esbYsWazKUXTc/G3xDXd3/ role network-admin
no password strength-check

banner motd #Nexus 5000 Switch
#

ip domain-lookup
class-map type qos class-fcoe
class-map type queuing class-fcoe
    match qos-group 1
class-map type queuing class-all-flood
    match qos-group 2
class-map type queuing class-ip-multicast
    match qos-group 2
class-map type network-qos class-fcoe
    match qos-group 1
class-map type network-qos class-all-flood
    match qos-group 2
class-map type network-qos class-ip-multicast
    match qos-group 2

system qos
    service-policy type qos input fcoe-default-in-policy
    service-policy type queuing input fcoe-default-in-policy

```



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
service-policy type queuing output fcoe-default-out-policy
service-policy type network-qos fcoe-default-nq-policy
policy-map type control-plane copp-system-policy
control-plane
service-policy input copp-system-policy
snmp-server user admin network-admin auth md5 0x659dc61aafac579799b0801bb80a7435
priv 0x659dc61aafac579799b0801bb80a7435 localizedkey
snmp-server enable traps entity fru

vrf context management
ip route 0.0.0.0/0 10.29.184.1
vlan 1,61
vlan 200
fcoe vsan 200
vethernet auto-create
vpc domain 1
role priority 100
peer-keepalive destination 10.29.186.195
port-profile type vethernet VLAN61
switchport access vlan 61
state enabled
port-profile type ethernet Unused_Or_Quarantine_Uplink
shutdown
description Port-group created for Nexus1000V internal usage. Do not use.
state enabled
port-profile type vethernet Unused_Or_Quarantine_Veth
shutdown
description Port-group created for Nexus1000V internal usage. Do not use.
state enabled
port-profile type vethernet statfloat
switchport access vlan 1
state enabled
vlan 200
fcoe vsan 200
vethernet auto-create
vpc domain 1
role priority 100
peer-keepalive destination 10.29.186.195
vsan database
vsan 200
fcdomain fcid database
vsan 200 wwn 21:00:00:c0:dd:15:21:7d fcid 0x080000 dynamic
vsan 200 wwn 21:00:00:c0:dd:12:14:01 fcid 0x080001 dynamic
vsan 200 wwn 20:00:58:8d:09:0f:09:6f fcid 0x080002 dynamic

interface port-channel10
switchport mode trunk
spanning-tree port type network
vpc peer-link

interface vfc300
bind interface Ethernet1/26
switchport mode E
switchport trunk allowed vsan 1
switchport trunk allowed vsan add 200
no shutdown

interface vfc100
bind interface Vethernet100

interface vfc400
bind interface Ethernet1/5
no shutdown
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface vfc200
  bind interface Vethernet200

interface vfc500
  bind interface Ethernet1/6
  no shutdown
vsan database
  vsan 200 interface vfc100
  vsan 200 interface vfc400
  vsan 200 interface vfc200
  vsan 200 interface vfc500

interface Ethernet1/1

interface Ethernet1/2

interface Ethernet1/3

interface Ethernet1/4

interface Ethernet1/5
  switchport mode trunk

interface Ethernet1/6
  switchport mode trunk

interface Ethernet1/7

interface Ethernet1/8

interface Ethernet1/9

interface Ethernet1/10

interface Ethernet1/11

interface Ethernet1/12

interface Ethernet1/13

interface Ethernet1/14

interface Ethernet1/15

interface Ethernet1/16

interface Ethernet1/17
  switchport mode vntag

interface Ethernet1/18
  switchport mode vntag

interface Ethernet1/19
  shutdown

interface Ethernet1/20
  shutdown

interface Ethernet1/21
  shutdown

interface Ethernet1/22
  shutdown
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface Ethernet1/23
 shutdown

interface Ethernet1/24
 shutdown

interface Ethernet1/25
 shutdown

interface Ethernet1/26
 switchport mode trunk

interface Ethernet1/27
 switchport mode trunk
 channel-group 10

interface Ethernet1/28
 switchport mode trunk
 channel-group 10

interface Ethernet1/29
 switchport mode trunk
 channel-group 10

interface Ethernet1/30
 switchport mode trunk
 channel-group 10

interface Ethernet1/31

interface Ethernet1/32

interface Ethernet2/1

interface Ethernet2/2

interface Ethernet2/3

interface Ethernet2/4

interface Ethernet2/5

interface Ethernet2/6

interface Ethernet2/7

interface Ethernet2/8

interface mgmt0
 ip address 10.29.186.196/22

interface Vethernet1
 bind interface Ethernet1/17 channel 10

interface Vethernet2
 bind interface Ethernet1/18 channel 10

interface Vethernet3
 bind interface Ethernet1/17 channel 11

interface Vethernet4
 bind interface Ethernet1/18 channel 11

interface Vethernet5
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```

inherit port-profile VLAN61
vsi mac 0050.5684.0004

interface Vethernet100
shutdown
switchport mode trunk
bind interface Ethernet1/17 channel 4

interface Vethernet145
inherit port-profile statfloat
vsi mac 0050.5601.0144

interface Vethernet200
shutdown
switchport mode trunk
bind interface Ethernet1/18 channel 4
line console
line vty
boot kickstart bootflash:/n5000-uk9-kickstart.5.1.3.N1.0.223.gbin
boot system bootflash:/n5000-uk9.5.1.3.N1.0.223.gbin
svs connection 2VC
protocol vmware-vim
remote ip address 10.29.186.125 port 80 vrf management
zone default-zone permit vsan 1
zone default-zone permit vsan 200

pod1-5596-2# sh run

!Command: show running-config
!Time: Thu Sep  1 12:54:08 2011

version 5.1(3)N1(1)
feature fcoe

install feature-set virtualization
feature-set virtualization
switchname pod1-5596-2

feature telnet
feature lacp
feature vmfex
feature lldp
feature fex

username admin password 5 $1$sdMFwb78$3J2cgv7YbedIzxXlrm66H0 role network-admin
no password strength-check

banner motd #Nexus 5000 Switch
#

ip domain-lookup
class-map type qos class-fcoe
class-map type queuing class-fcoe
match qos-group 1
class-map type queuing class-all-flood
match qos-group 2
class-map type queuing class-ip-multicast
match qos-group 2
class-map type network-qos class-fcoe
match qos-group 1
class-map type network-qos class-all-flood
match qos-group 2

```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```

class-map type network-qos class-ip-multicast
  match qos-group 2
system qos
  service-policy type qos input fcoe-default-in-policy
  service-policy type network-qos fcoe-default-nq-policy
  service-policy type queuing input fcoe-default-in-policy
  service-policy type queuing output fcoe-default-out-policy
class-map type control-plane match-any copp-system-class-arp
  match protocol arp
class-map type control-plane match-any copp-system-class-bgp
  match protocol bgp
class-map type control-plane match-any copp-system-class-bridging
  match protocol bridging
class-map type control-plane match-any copp-system-class-cdp
  match protocol cdp
class-map type control-plane match-any copp-system-class-default
  match protocol default
class-map type control-plane match-any copp-system-class-dhcp
  match protocol dhcp
class-map type control-plane match-any copp-system-class-eigrp
  match protocol eigrp
class-map type control-plane match-any copp-system-class-exception
  match protocol exception
class-map type control-plane match-any copp-system-class-glean
  match protocol glean
class-map type control-plane match-any copp-system-class-hsrp-vrrp
  match protocol hsrp_vrrp
class-map type control-plane match-any copp-system-class-icmp-echo
  match protocol icmp_echo
class-map type control-plane match-any copp-system-class-igmp
  match protocol igmp
class-map type control-plane match-any copp-system-class-ip-frag
  match protocol ip_frag
class-map type control-plane match-any copp-system-class-isis-dce
  match protocol isis_dce
class-map type control-plane match-any copp-system-class-lacp
  match protocol lacp
class-map type control-plane match-any copp-system-class-lldp
  match protocol lldp_dcbx
class-map type control-plane match-any copp-system-class-mgmt
  match protocol mgmt
class-map type control-plane match-any copp-system-class-msdp
  match protocol msdp
class-map type control-plane match-any copp-system-class-multicast
  match protocol multicast
class-map type control-plane match-any copp-system-class-ospf
  match protocol ospf
class-map type control-plane match-any copp-system-class-pim
  match protocol pim
class-map type control-plane match-any copp-system-class-reg
  match protocol reg
class-map type control-plane match-any copp-system-class-rip
  match protocol rip
class-map type control-plane match-any copp-system-class-same-if
  match protocol same_if
class-map type control-plane match-any copp-system-class-ttl
  match protocol ttl
control-plane
  service-policy input copp-system-policy-default
slot 1
  port 39-48 type fc
snmp-server user admin network-admin auth md5 0x338f7b1376b2f1548acf1f8295c0e734
  priv 0x338f7b1376b2f1548acf1f8295c0e734 localizedkey
snmp-server enable traps entity fru

```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```

snmp-server community labpublic group network-operator

vrf context management
  ip route 0.0.0.0/0 10.29.184.1
vlan 1
vlan 200
  fcoe vsan 200
vsan database
  vsan 200
fcdomain fcid database
  vsan 1 wwn 26:02:00:01:55:35:0c:d3 fcid 0xc90000 dynamic
  vsan 1 wwn 21:00:00:c0:dd:15:21:7f fcid 0xc90001 dynamic
  vsan 1 wwn 21:00:00:c0:dd:12:14:01 fcid 0xc90002 dynamic
  vsan 1 wwn 21:00:00:c0:dd:15:21:7d fcid 0xc90003 dynamic
  vsan 200 wwn 26:02:00:01:55:35:0c:d3 fcid 0x340000 dynamic

interface vfc300
  bind interface Ethernet1/32
  switchport mode E
  switchport trunk allowed vsan 1
  switchport trunk allowed vsan add 200
  no shutdown
vsan database
  vsan 200 interface vfc300
  vsan 200 interface fc1/48

interface fc1/39

interface fc1/40
  no shutdown

interface fc1/41

interface fc1/42

interface fc1/43

interface fc1/44

interface fc1/45

interface fc1/46

interface fc1/47

interface fc1/48
  no shutdown

interface Ethernet1/1
  switchport trunk allowed vlan none
  spanning-tree port type edge trunk

interface Ethernet1/2
  switchport mode trunk
  switchport trunk allowed vlan 1,1000

interface Ethernet1/3

interface Ethernet1/4

interface Ethernet1/5

```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface Ethernet1/6

interface Ethernet1/7

interface Ethernet1/8

interface Ethernet1/9

interface Ethernet1/10

interface fcl/41

interface fcl/42

interface fcl/43

interface fcl/44

interface fcl/45

interface fcl/46

interface fcl/47

interface fcl/48
  no shutdown

interface Ethernet1/1
  switchport trunk allowed vlan none
  spanning-tree port type edge trunk

interface Ethernet1/2
  switchport mode trunk
  switchport trunk allowed vlan 1,1000

interface Ethernet1/3

interface Ethernet1/4

interface Ethernet1/5

interface Ethernet1/6

interface Ethernet1/7

interface Ethernet1/8

interface Ethernet1/9

interface Ethernet1/10

interface Ethernet1/11

interface Ethernet1/12

interface Ethernet1/13

interface Ethernet1/14

interface Ethernet1/15

interface Ethernet1/16

interface Ethernet1/17
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface Ethernet1/18

interface Ethernet1/19

interface Ethernet1/20

interface Ethernet1/21

interface Ethernet1/22

interface Ethernet1/23

interface Ethernet1/24

interface Ethernet1/25

interface Ethernet1/26
  shutdown

interface Ethernet1/27

interface Ethernet1/28

interface Ethernet1/29

interface Ethernet1/30

interface Ethernet1/31

interface Ethernet1/32
  switchport mode trunk

interface Ethernet1/33

interface Ethernet1/34

interface Ethernet1/35

interface Ethernet1/36

interface Ethernet1/37

interface Ethernet1/38

interface mgmt0
  ip address 10.29.186.193/22
line console
line vty
boot kickstart bootflash:/n5000-uk9-kickstart.5.1.3.N1.0.212.bin
boot system bootflash:/n5000-uk9.5.1.3.N1.0.212.bin
interface fc1/39
interface fc1/40
interface fc1/41
interface fc1/42
interface fc1/43
interface fc1/44
interface fc1/45
interface fc1/46
interface fc1/47
interface fc1/48
  switchport mode F
logging monitor 6
zone default-zone permit vsan 1
```



***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
zone default-zone permit vsan 200

!Command: show running-config
!Time: Thu Sep  1 09:42:50 2011

version 5.1(3)N1(1)
feature fcoe

install feature-set virtualization
feature-set virtualization
hostname pod1-5596-1

feature telnet
feature vmfex
feature lldp
feature fex

username admin password 5 $1$aFZpnyOJ$kKzqLw8Ftu2I.T8mS.w100 role network-admin
no password strength-check

banner motd #Nexus 5000 Switch
#

ip domain-lookup
class-map type qos class-fcoe
class-map type queuing class-fcoe
    match qos-group 1
class-map type queuing class-all-flood
    match qos-group 2
class-map type queuing class-ip-multicast
    match qos-group 2
class-map type network-qos class-fcoe
    match qos-group 1
class-map type network-qos class-all-flood
    match qos-group 2
class-map type network-qos class-ip-multicast
    match qos-group 2
system qos
    service-policy type qos input fcoe-default-in-policy
    service-policy type network-qos fcoe-default-nq-policy
    service-policy type queuing input fcoe-default-in-policy
    service-policy type queuing output fcoe-default-out-policy
class-map type control-plane match-any copp-system-class-arp
    match protocol arp
class-map type control-plane match-any copp-system-class-bgp
    match protocol bgp
class-map type control-plane match-any copp-system-class-bridging
    match protocol bridging

police cir 1024 kbps bc 4800000 bytes
class copp-system-class-icmp-echo
    police cir 640 kbps bc 3600000 bytes
class copp-system-class-ospf
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-reg
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-rip
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-unicast
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-multicast
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-ip-frag
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```

    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-same-if
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-ttl
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-default
    police cir 2048 kbps bc 6400000 bytes
policy-map type control-plane copp-system-policy-scaled-13
class copp-system-class-igmp
    police cir 1200 kbps bc 65535 bytes
class copp-system-class-pim
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-bridging
    police cir 20000 kbps bc 4800000 bytes
class copp-system-class-arp
    police cir 4000 kbps bc 3600000 bytes
class copp-system-class-dhcp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-mgmt
    police cir 12000 kbps bc 4800000 bytes
class copp-system-class-lacp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-lldp
    police cir 2048 kbps bc 4800000 bytes
class copp-system-class-udld
    police cir 2048 kbps bc 4800000 bytes
class copp-system-class-msdp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-vic
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-cdp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-bgp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-eigrp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-exception
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-glean
    police cir 4000 kbps bc 4800000 bytes
class copp-system-class-hsrp-vrrp
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-icmp-echo
    police cir 4000 kbps bc 3600000 bytes
class copp-system-class-ospf
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-reg
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-rip
    police cir 1024 kbps bc 4800000 bytes
class copp-system-class-unicast
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-multicast
    police cir 4000 kbps bc 3200000 bytes
class copp-system-class-ip-frag
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-same-if
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-ttl
    police cir 1024 kbps bc 3200000 bytes
class copp-system-class-default
    police cir 2048 kbps bc 6400000 bytes
control-plane
service-policy input copp-system-policy-default

```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
slot 1
  port 39-48 type fc
snmp-server user admin network-admin auth md5 0x512632220ce767d7bf7aed2f7af4b8e9
  priv 0x512632220ce767d7bf7aed2f7af4b8e9 localizedkey
snmp-server enable traps entity fru
snmp-server community labpublic group network-operator

vrf context management
  ip route 0.0.0.0/0 10.29.184.1
vlan 1
vlan 200
  fcoe vsan 200
port-profile type ethernet Unused_Or_Quarantine_Uplink
  shutdown
  description Port-group created for Nexus1000V internal usage. Do not use.
  state enabled
port-profile type vethernet Unused_Or_Quarantine_Veth
  shutdown
  description Port-group created for Nexus1000V internal usage. Do not use.
  state enabled

vsan database
  vsan 200
fcdomain fcid database
  vsan 1 wwn 26:01:00:01:55:35:0c:d3 fcid 0x9a0000 dynamic
  vsan 1 wwn 21:00:00:c0:dd:14:57:4d fcid 0x9a0001 dynamic
  vsan 1 wwn 21:00:00:c0:dd:12:14:03 fcid 0x9a0002 dynamic
  vsan 1 wwn 21:00:00:c0:dd:15:21:7f fcid 0x9a0003 dynamic
  vsan 200 wwn 26:01:00:01:55:35:0c:d3 fcid 0xe50000 dynamic

interface vfc300
  bind interface Ethernet1/32
  switchport mode E
  switchport trunk allowed vsan 1
  switchport trunk allowed vsan add 200
  no shutdown
vsan database
  vsan 200 interface vfc300
  vsan 200 interface fc1/48

interface fc1/39

interface fc1/40
  no shutdown

interface fc1/41

interface fc1/42

interface fc1/43

interface fc1/44

interface fc1/45

interface fc1/46

interface fc1/47

interface fc1/48
  no shutdown
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface Ethernet1/1
  switchport mode trunk
  switchport trunk allowed vlan 1,1000
  spanning-tree port type edge trunk

interface Ethernet1/2

interface Ethernet1/3

interface Ethernet1/4

interface Ethernet1/5

interface Ethernet1/6

interface Ethernet1/7

interface Ethernet1/8

interface Ethernet1/9

interface Ethernet1/10

interface Ethernet1/11

interface Ethernet1/12

interface Ethernet1/13

interface Ethernet1/14

interface Ethernet1/15

interface Ethernet1/16

interface Ethernet1/17

interface Ethernet1/18

interface Ethernet1/19

interface Ethernet1/20

interface Ethernet1/21

interface Ethernet1/22

interface Ethernet1/23

interface Ethernet1/24

interface Ethernet1/25

interface Ethernet1/26

interface Ethernet1/27

interface Ethernet1/28

interface Ethernet1/29

interface Ethernet1/30

interface Ethernet1/31
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***

```
interface Ethernet1/32
    switchport mode trunk

interface Ethernet1/33

interface Ethernet1/34

interface Ethernet1/35

interface Ethernet1/36

interface Ethernet1/37

interface Ethernet1/38

interface mgmt0
    ip address 10.29.186.194/22
line console
line vty
boot kickstart bootflash:/n5000-uk9-kickstart.5.1.3.N1.0.212.bin
boot system bootflash:/n5000-uk9.5.1.3.N1.0.212.bin
interface fc1/39
interface fc1/40
interface fc1/41
interface fc1/42
interface fc1/43
interface fc1/44
interface fc1/45
interface fc1/46
interface fc1/47
interface fc1/48
zone default-zone permit vsan 1
zone default-zone permit vsan 200
```

***Send comments to [nexus5k-docfeedback@cisco.com](mailto:nexus5k-docfeedback@cisco.com)***