



## V Commands

---

This chapter describes the Cisco NX-OS Border Gateway Protocol (BGP) commands that begin with V.

**Review Draft -- Cisco Confidential****vrf**

To enter a virtual routing and forwarding (VRF) configuration mode and configure submode commands, use the **vrf** command. To remove a VRF instance or disable the VRF configuration mode, use the **no** form of this command.

**vrf** *name* | **management**

**no vrf** *name* | **management**

**Syntax Description**

|                   |                                                                                                      |
|-------------------|------------------------------------------------------------------------------------------------------|
| <i>name</i>       | Name of the VRF. The <i>name</i> can be any case-sensitive, alphanumeric string up to 32 characters. |
| <b>management</b> | Specifies the management VRF.                                                                        |

**Command Default**

None

**Command Modes**

Address-family configuration mode  
Router configuration mode  
VRF configuration mode

**Command History**

| Release     | Modification                 |
|-------------|------------------------------|
| 6.0(2)N1(1) | This command was introduced. |

**Usage Guidelines**

The VRF does not become active until you create an identically named VRF in global configuration mode.

When you enter the VRF configuration mode, the following commands are available:

- **area**—(OSPF) Configures area properties.
- **address-family**—(BGP) Configures an address-family. See the **address-family (BGP)** command for additional information.
- **auto-cost**—(OSPF) Calculates OSPF cost according to bandwidth.
- **cluster-id** {*cluster-id* | *cluster-ip-addr*}—(BGP) Configures the Route Reflector Cluster-ID (router, vrf). Range: 1 to 4294967295. You can enter the cluster identification as a 32-bit quantity or as an IP address. To remove the cluster ID, use the **no** form of this command. Together, a route reflector and its clients form a cluster. When a single route reflector is deployed in a cluster, the cluster is identified by the router ID of the route reflector.

The **cluster-id** command is used to assign a cluster ID to a route reflector when the cluster has one or more route reflectors. Multiple route reflectors are deployed in a cluster to increase redundancy and avoid a single point of failure. When multiple route reflectors are configured in a cluster, the same cluster ID is assigned to all route reflectors, which allows all route reflectors in the cluster to recognize updates from peers in the same cluster and reduces the number of updates that need to be stored in BGP routing tables.

## Review Draft -- Cisco Confidential

**Note**

All route reflectors must maintain stable sessions between all peers in the cluster. If stable sessions cannot be maintained, you should use overlay route reflector clusters instead (route reflectors with different cluster IDs).

- **default-information**—(OSPF) Controls the distribution of the default route. See the **default-information originate (OSPF)** command for additional information.
- **default-metric**—(OSPF) Specifies the default metric for redistributed routes. See the **default-metric (OSPF)** command for additional information.
- **distance**—(OSPF) Defines the OSPF administrative distance. See the **distance (OSPF)** command for additional information.
- **exit**—(BGP) Exits from the current command mode.
- **log-adjacency-changes**—(OSPF) Logs changes in adjacency state.
- **log-neighbor-changes**—Enables logging of the BGP neighbor resets. To disable the logging of changes in BGP neighbor adjacencies, use the **no** form of this command. The **log-neighbor-changes** command enables logging of BGP neighbor status changes (up or down) and resets for troubleshooting network connectivity problems and measuring network stability. Unexpected neighbor resets might indicate high error rates or high packet loss in the network and should be investigated.

Using the **log-neighbor-changes** command to enable status change message logging does not cause a substantial performance impact, unlike, for example, enabling per BGP update debugging. If the UNIX syslog facility is enabled, messages are sent to the UNIX host running the syslog daemon so that the messages can be stored and archived. If the UNIX syslog facility is not enabled, the status change messages are retained in the internal buffer of the router, and are not stored to the disk. You can set the size of this buffer, which is dependent upon the available RAM, using the **logging buffered** command.

The neighbor status change messages are not tracked if the **bgp log-neighbor-changes** command is disabled, except for the reset reason, which is always available as output of the **show ip bgp neighbors** command.

The **eigrp log-neighbor-changes** command enables logging of Enhanced Interior Gateway Routing Protocol (EIGRP) neighbor adjacencies, but messages for BGP neighbors are logged only if they are specifically enabled with the **bgp log-neighbor-changes** command.

Use the **show logging command** to display the log for the BGP neighbor changes.

- **max-metric**—(OSPF) Maximizes the cost metric. See the **max-metric (OSPF)** command for additional information.
- **maximum-paths**—(OSPF) Sets the maximum number of parallel routes that OSPF can support. See the **maximum-paths (OSPF)** command for additional information.
- **neighbor**—Configures a BGP neighbor. See the **neighbor** command for additional information.
- **no**—Negates a command or set its defaults.
- **redistribute**—(OSPF) Redistributes information from another routing protocol. See the **redistribute (OSPF)** command for additional information.
- **rfc1583compatibility**—(OSPF) Configures RFSC 1583 compatibility for external path preferences. See the **rfc1583compatibility** command for additional information.
- **router-id ip-addr**—Specifies the IP address to use as the router-id.

## Review Draft -- Cisco Confidential

- **shutdown**—(OSPF) Shuts down the OSPF protocol instance. See the **shutdown (OSPF)** command for additional information.
- **summary-address**—(OSPF) Configures route summarization for redistribution. See the **summary-address (OSPF)** command for additional information.
- **timers bestpath-timeout**—Configures the best-path timeout in seconds. Range: 1 to 3600. Default: 300.

### Examples

This example shows how to enter VRF configuration mode in a BGP environment:

```
switch(config)# router bgp 100  
switch(config-router)# vrf management  
switch(config-router-vrf)#
```

This example shows how to enter VRF configuration mode in an OSPF environment:

```
switch(config)# vrf context RemoteOfficeVRF  
switch(config-vrf)# router ospf 201  
switch(config-router)# vrf RemoteOfficeVRF  
switch(config-router-vrf)#
```

### Related Commands

| Command            | Description                                 |
|--------------------|---------------------------------------------|
| <b>vrf context</b> | Creates a VRF.                              |
| <b>show vrf</b>    | Displays the VRF configuration information. |

**Review Draft -- Cisco Confidential**

## vrf context

To create a virtual routing and forwarding instance (VRF) and enter VRF configuration mode, use the **vrf context** command. To remove a VRF entry, use the **no** form of this command.

**vrf context** {*name* | **management**}

**no vrf context** {*name* | **management**}

| Syntax Description | <i>name</i>       | Name of the VRF. The <i>name</i> can be any case-sensitive, alphanumeric string up to 32 characters. |
|--------------------|-------------------|------------------------------------------------------------------------------------------------------|
|                    | <b>management</b> | Specifies the management VRF.                                                                        |

| Command Default | None |
|-----------------|------|
|-----------------|------|

| Command Modes | Global configuration mode |
|---------------|---------------------------|
|---------------|---------------------------|

| Command History | Release     | Modification                 |
|-----------------|-------------|------------------------------|
|                 | 6.0(2)N1(1) | This command was introduced. |

| Examples | <p>This example shows how to create a VRF context:</p> <pre>switch(config)# <b>vrf context RemoteOfficeVRF</b> switch(config-vrf)#</pre> |
|----------|------------------------------------------------------------------------------------------------------------------------------------------|
|----------|------------------------------------------------------------------------------------------------------------------------------------------|

| Related Commands | Command         | Description                                 |
|------------------|-----------------|---------------------------------------------|
|                  | <b>vrf</b>      | Creates or configures a VRF instance.       |
|                  | <b>show vrf</b> | Displays the VRF configuration information. |

**Review Draft -- Cisco Confidential**

# vrf member

To add an interface to a virtual routing and forwarding (VRF) instance or to configure object tracking on a VRF instance, use the **vrf member** command. To remove the object tracking for this route, use the **no** form of this command.

**vrf member** *vrf-name*

**no vrf member** *vrf-name*

| Syntax Description | <i>vrf-name</i> VRF name. The name can be any case-sensitive, alphanumeric string up to 32 characters.                                                                                                                                                                                                                                                                                                                                           |  |         |              |             |                                             |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|---------|--------------|-------------|---------------------------------------------|
| Command Default    | None                                                                                                                                                                                                                                                                                                                                                                                                                                             |  |         |              |             |                                             |
| Command Modes      | Interface configuration mode<br>Object tracking confiuration mode                                                                                                                                                                                                                                                                                                                                                                                |  |         |              |             |                                             |
| Command History    | <table><tr><th>Release</th><th>Modification</th></tr><tr><td>6.0(2)N1(1)</td><td>This command was introduced.</td></tr></table>                                                                                                                                                                                                                                                                                                                  |  | Release | Modification | 6.0(2)N1(1) | This command was introduced.                |
| Release            | Modification                                                                                                                                                                                                                                                                                                                                                                                                                                     |  |         |              |             |                                             |
| 6.0(2)N1(1)        | This command was introduced.                                                                                                                                                                                                                                                                                                                                                                                                                     |  |         |              |             |                                             |
| Usage Guidelines   | Use the <b>vrf member</b> command in object tracking configuration mode to track objects in a nondefault VRF.                                                                                                                                                                                                                                                                                                                                    |  |         |              |             |                                             |
| Examples           | <p>This example shows how to track an IP route in VRF Red:</p> <pre>switch(config)# track 1 ip route 10.10.10.0/8 reachability switch(config-track) # vrf member Red switch(config-track) #</pre> <p>This example shows how to add the Ethernet interface 1/5 to VRF RemoteOfficeVRF:</p> <pre>switch(config)# interface ethernet 1/5 switch(config-if) # no switchport switch(config-if) # vrf member RemoteOfficeVRF switch(config-if) #</pre> |  |         |              |             |                                             |
| Related Commands   | <table><tr><th>Command</th><th>Description</th></tr><tr><td>show vrf</td><td>Displays the VRF configuration information.</td></tr></table>                                                                                                                                                                                                                                                                                                       |  | Command | Description  | show vrf    | Displays the VRF configuration information. |
| Command            | Description                                                                                                                                                                                                                                                                                                                                                                                                                                      |  |         |              |             |                                             |
| show vrf           | Displays the VRF configuration information.                                                                                                                                                                                                                                                                                                                                                                                                      |  |         |              |             |                                             |