



## INDEX

---

### A

#### Auto-Synchronization with Devices

- deleting events data [9-35](#)
- description [9-31](#)
- poller interval [4-15, 9-33](#)
- starting and stopping a poller [9-33](#)
- synchronizing with a device [9-34](#)

---

### C

#### chassis

- environmental status [5-2](#)
- events [5-4](#)
- hardware details [5-2](#)
- memory utilization [5-3](#)
- software details [5-2](#)

---

### D

#### DCNM

- deploying [1-4](#)
- description [1-1](#)

#### DCNM client

- downloading [3-2](#)
- installation prerequisites [3-1](#)
- Java [3-1](#)
- licensed features [3-1](#)
- operating systems [3-1](#)
- password, default [3-4](#)
- reinstalling the client [3-7](#)
- uninstalling the client [3-7](#)

#### DCNM Enterprise LAN License

- adding a device to a license [9-21](#)
- installing [2-11](#)
- removing a device from a license [9-22](#)

#### DCNM license

- adding a device to a license [9-21](#)
- installing [2-11](#)
- removing a device from a license [9-22](#)

#### DCNM server

- adding a device to a license [9-21](#)
- downloading [2-2](#)
- installing [2-3](#)
- installing a license [2-11](#)
- reinstalling [2-15](#)
- removing a device from a license [9-22](#)
- starting [2-9, 2-10, 2-17, 2-18](#)

#### deployment

- how to [1-4](#)

#### Device Discovery

- description [9-1](#)
- discovering a device [9-4](#)
- rediscovering a device [9-6](#)

#### Devices and Credentials

- adding a device [9-11](#)
- configuring default credentials [9-14](#)
- deleting a device [9-13](#)
- description [9-8](#)
- discovering a device [9-12](#)
- unmanaging a device [9-13](#)

#### documentation

- additional publications [iv-xvi](#)

***Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)***

---

**E**

## Events Browser

- adding a note [7-7](#)
- changing event status [7-6](#)
- configuring maximum event age [4-15, 4-16, 6-8](#)
- deleting an event [7-7](#)
- description [7-1](#)
- filtering events [7-4](#)
- viewing events [7-3](#)

## Events tab

- adding a note [7-7](#)
- changing event status [7-6](#)
- configuring maximum event age [4-15, 4-16, 6-8](#)
- deleting an event [7-7](#)
- description [7-1](#)
- viewing events [7-5](#)

---

**F**

## fabric module

- details [5-5](#)
- environmental status [5-6](#)
- events [5-7](#)

## fan tray

- details [5-10](#)
- events [5-10](#)

---

**G**

## Global preferences

- events preference [4-15](#)
- monitoring preference [4-15](#)
- overview [4-14](#)
- polling frequency preference [4-16](#)
- preprovisioning preference [4-16](#)

---

**I**

## I/O module

- details [5-5](#)
- environmental status [5-6](#)
- events [5-7](#)

## installation

- prerequisites [3-1](#)
- requirements [2-1](#)

## inventory information

## chassis

- detail [5-2](#)
- environmental status [5-2](#)
- events [5-4](#)
- memory utilization [5-3](#)
- summary [5-1](#)

## fan tray

- details [5-10](#)
- events [5-10](#)
- summary [5-9](#)

## module

- details [5-5](#)
- environmental status [5-6](#)
- events [5-7](#)
- summary [5-5](#)

## power supply

- details [5-8](#)
- events [5-8](#)
- summary [5-7](#)

---

**L**

## license

- adding a device to a license [9-21](#)
- installing [2-11](#)
- removing a device from a license [9-22](#)

***Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)***

---

## M

### module

- details [5-5](#)
- environmental status [5-6](#)
- events [5-7](#)

### monitoring

- stopping and starting [4-11](#)

---

## N

### NX-OS

- configuration requirements [1-5](#)
- logging requirements [1-6](#)
- preparing for management [1-5](#)

---

## P

### power supply

- details [5-8](#)
- events [5-8](#)
- redundancy [5-2](#)
- usage [5-2, 5-6](#)

---

## R

### related documents [iv-xvi](#)

### RSPAN VLANs

- as a SPAN source [8-5](#)
- configuring [8-8](#)

---

## S

### Server Log Settings

- configuring the default logging level [9-45](#)
- description [9-43](#)

### SPAN sessions

- configuring [8-5](#)

- description [8-1](#)
- destinations [8-5](#)
- resuming [8-8](#)
- sources [8-5](#)
- suspending [8-8](#)
- virtual. See virtual SPAN sessions

### Statistical Data Collection

- deleting a collection [9-40](#)
- deleting data from a collection [9-40](#)
- deleting data from the statistics database [9-41](#)
- description [9-37](#)
- Statistics tab [4-11](#)
- stopping and starting data collection [9-39](#)

### Statistics tab

- stopping and starting monitoring [4-11](#)

### supervisor module

- details [5-5](#)
- environmental status [5-6](#)
- events [5-7](#)
- redundancy information [5-2](#)

---

## T

### Topology

- description [6-1](#)
- exporting as JPG image [6-7](#)
- moving devices [6-6](#)
- viewing [6-3](#)

---

## U

### users

- adding a user [9-26](#)
- changing passwords [9-27](#)
- deleting [9-29](#)
- description [9-24](#)

***Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)***

---

## **V**

virtual SPAN sessions

configuring **8-6**

description **8-6**

sources **8-6**