



O Commands

This chapter describes the Cisco NX-OS security commands that begin with O.

object-group (identity policy)

To specify a MAC access control list (ACL) for an identity policy, use the **object-group** command. To remove ACL from the identity policy, use the **no** form of this command.

object-group *acl-name*

no object-group *acl-name*

Syntax Description	<i>acl-name</i>	Name of a MAC ACL. The name is case sensitive.
---------------------------	-----------------	--

Defaults	None
-----------------	------

Command Modes	Identity policy configuration
----------------------	-------------------------------

SupportedUserRoles	network-admin vdc-admin VDC user
---------------------------	--

Command History	Release	Modification
	4.0(1)	This command was introduced.

Usage Guidelines	Use the mac access-list command to create the MAC ACL to assign to the identity policy. This command does not require a license.
-------------------------	--

Send document comments to nexus7k-docfeedback@cisco.com

Examples

This example shows how to configure an ACL for an identity policy:

```
switch# config t
switch(config)# identity policy AdminPolicy
switch(config-id-policy)# object-group
```

This example shows how to remove an ACL from an identity policy:

```
switch# config t
switch(config)# identity policy AdminPolicy
switch(config-id-policy)# no object-group
```

Related Commands

Command	Description
identity policy	Creates or specifies an identity policy and enters identity policy configuration mode.
mac access-list	Creates a MAC ACL and enters MAC ACL configuration mode.
show identity policy	Displays identity policy information.

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

object-group ip address

To define an IPv4 address object group or to enter object-group configuration mode for a specific IPv4-address object group, use the **object-group ip address** command. To remove an IPv4-address object group, use the **no** form of this command.

object-group ip address *name*

no object-group ip address *name*

Syntax Description	<i>name</i>	Name of the IPv4 address object group, which can be up to 64 alphanumeric, case-sensitive characters.
---------------------------	-------------	---

Defaults	None
-----------------	------

Command Modes	Global configuration
----------------------	----------------------

SupportedUserRoles	network-admin vdc-admin
---------------------------	----------------------------

Command History	Release	Modification
	4.0(1)	This command was introduced.

Usage Guidelines

You can use IPv4 object groups in **permit** and **deny** commands for IPv4 access control lists (ACLs). IPv4 address object groups are not directional. Whether group members match a source or destination address or whether an object group applies to inbound or outbound traffic depends upon how you use the object group in an IPv4 ACL.

This command does not require a license.

Examples

This example shows how to configure an IPv4 address object group named ipv4-addr-group-13 with two group members that are specific IPv4 addresses and one group member that is the 10.23.176.0 subnet:

```
switch# config t
switch(config)# object-group ip address ipv4-addr-group-13
switch(config-ipaddr-ogroup)# host 10.121.57.102
switch(config-ipaddr-ogroup)# 10.121.57.234/32
switch(config-ipaddr-ogroup)# 10.23.176.0 0.0.0.255
switch(config-ipaddr-ogroup)# show object-group ipv4-addr-group-13
    10 host 10.121.57.102
    20 host 10.121.57.234
    30 10.23.176.0/24
switch(config-ipaddr-ogroup)#
```

Send document comments to nexus7k-docfeedback@cisco.com

Related Commands	Command	Description
	host (IPv4)	Configures a group member for an IPv4 address object group.
	show object-group	Displays object groups.

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

object-group ip port

To define an IP port object group or to enter object-group configuration mode for a specific IP port object group, use the **object-group ip port** command. To remove an IP port object group, use the **no** form of this command.

object-group ip port *name*

no object-group ip port *name*

Syntax Description	<i>name</i>	Name of the IP port object group, which can be up to 64 alphanumeric, case-sensitive characters.
---------------------------	-------------	--

Defaults	None
-----------------	------

Command Modes	Global configuration
----------------------	----------------------

SupportedUserRoles	network-admin vdc-admin
---------------------------	----------------------------

Command History	Release	Modification
	4.0(1)	This command was introduced.

Usage Guidelines

You can use IP port object groups in **permit** and **deny** commands for IPv4 access control lists (ACLs). IP port object groups are not directional. Whether group members match a source or destination port or whether an object group applies to inbound or outbound traffic depends upon how you use the object group in an ACL.

This command does not require a license.

Examples

This example shows how to configure an IP port object group named port-group-05 with a group member that matches traffic sent to or from port 443:

```
switch# config t
switch(config)# object-group ip port port-group-05
switch(config-port-ogroup)# eq 443
switch(config-port-ogroup)# show object-group port-group-05
      10 eq 443
switch(config-port-ogroup)#
```

Send document comments to nexus7k-docfeedback@cisco.com

Related Commands	Command	Description
	eq	Specifies an equal-to group member in an IP port object group.
	gt	Specifies a greater-than group member in an IP port object group.
	lt	Specifies a less-than group member in an IP port object group.
	neq	Specifies a not-equal-to group member in an IP port object group.
	range	Specifies a port range group member in an IP port object group.
	show object-group	Displays object groups.

[Send document comments to nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)

object-group ipv6 address

To define an IPv6 address object group or to enter IPv6 address object group configuration mode for a specific IPv6 address object group, use the **object-group ipv6 address** command. To remove an IPv6 address object group, use the **no** form of this command.

object-group ipv6 address *name*

no object-group ipv6 address *name*

Syntax Description	<i>name</i>	Name of the IPv6 address group object, which can be up to 64 alphanumeric, case-sensitive characters.
---------------------------	-------------	---

Defaults	None
-----------------	------

Command Modes	Global configuration
----------------------	----------------------

SupportedUserRoles	network-admin vdc-admin
---------------------------	----------------------------

Command History	Release	Modification
	4.0(1)	This command was introduced.

Usage Guidelines	This command does not require a license.
-------------------------	--

Examples This example shows how to configure an IPv6 address object group named ipv6-addr-group-A7 with two group members that are specific IPv6 addresses and one group member that is the 2001:db8:0:3ab7:: subnet:

```
switch# config t
switch(config)# object-group ipv6 address ipv6-addr-group-A7
switch(config-ipv6addr-ogroup)# host 2001:db8:0:3ab0::1
switch(config-ipv6addr-ogroup)# 2001:db8:0:3ab0::2/128
switch(config-ipv6addr-ogroup)# 2001:db8:0:3ab7::/96
switch(config-ipv6addr-ogroup)# show object-group ipv6-addr-group-A7
    10 host 2001:db8:0:3ab0::1
    20 host 2001:db8:0:3ab0::2
    30 2001:db8:0:3ab7::/96
switch(config-ipv6addr-ogroup)#
```

Send document comments to nexus7k-docfeedback@cisco.com

Related Commands	Command	Description
	host (IPv6)	Configures a group member for an IPv6 address object group.
	show object-group	Displays object groups.