



## B Commands

---

This chapter describes the Cisco NX-OS system management commands that begin with the letter B.

### blink

To blink the LED on the system, use the **blink** command. To restore the default LED state, use the **no** form of this command.

**blink** { **chassis** | **fan** *f-number* | **module** *slot* | **powersupply** *ps-number* | **xbar** *x-number* }

**no blink** { **chassis** | **fan** *f-number* | **module** *slot* | **powersupply** *ps-number* | **xbar** *x-number* }

Syntax Description		
<b>chassis</b>		Blinks the chassis LED.
<b>fan</b> <i>f-number</i>		Blinks the LED that represents the configured fan number. The range depends on the platform. Use ? to see the range.
<b>module</b> <i>slot</i>		Blinks the module LED. The range depends on the platform. Use ? to see the range.
<b>powersupply</b> <i>ps-number</i>		Blinks the power supply LED. The range depends on the platform. Use ? to see the range.
<b>xbar</b> <i>x-number</i>		Blinks the xbar module LED. The range depends on the platform. Use ? to see the range.

**Defaults** None

**Command Modes** Any

**Supported User Roles** Super user  
VDC administrator  
VDC user

***Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)***

---

**Command History**

Release	Modification
4.0(1)	This command was introduced.

---

---

**Usage Guidelines**

Use the **blink** command to flash the LED on a component in the system. You can use this blinking LED to identify the component to an administrator in the datacenter.

This command does not require a license.

---

**Examples**

This example blinks the LED for module 4:

```
switch# blink module 4
```