



## P Commands

---

This chapter describes the Cisco NX-OS system management commands that begin with the letter P.

### poweroff module

To power off a module, use the **poweroff module** command. To return power to the module, use the **no** form of this command.

**poweroff module** *module*

**no poweroff module** *module*

---

#### Syntax Description

<i>module</i>	The module number. The range is from 1 to 18.
---------------	---

---



---

#### Defaults

None

---

#### Command Modes

Global configuration mode

---

#### Supported User Roles

network-admin  
vdc-admin

Release	Modification
4.0(1)	This command was introduced.

---



---

#### Usage Guidelines

This command does not require a license.

---

#### Examples

This example shows how to power off module 2:

```
switch# poweroff module 2
```

***Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com)***

---

**Related Commands**

<b>Command</b>	<b>Description</b>
<b>show module</b>	Displays information about a module.

---