



## H Commands

---

This chapter describes the Cisco NX-OS system management commands that begin with the letter H.

**hw-module logging onboard**

**Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com).**

## hw-module logging onboard

To enable onboard failure logging (OBFL) based on the error type, use the **hw-module logging onboard** command. To disable OBFL (not recommended), use the **no** form of this command.

**hw-module logging onboard [counter-stats] [environmental-history] [error-stats]  
[interrupt-stats] [module num] [obfl-log]**

**no hw-module logging onboard [environmental-history] [error-stats] [interrupt-stats] [module num] [obfl-log]**

**Syntax Description**

<b>counter-stats</b>	(Optional) Specifies the OBFL counter statistics.
<b>environmental-history</b>	(Optional) Specifies the OBFL environmental history.
<b>error-stats</b>	(Optional) Specifies OBFL error statistics.
<b>interrupt-stats</b>	(Optional) Specifies OBFL interrupt statistics.
<b>module num</b>	(Optional) Specifies OBFL information for a specific module.
<b>obfl-log</b>	(Optional) Specifies OBFL (boot-upptime/device-version/obfl-history).

**Defaults**

Enabled and is the recommended state.

**Command Modes**

Global configuration

**SupportedUserRoles**

network-admin  
vdc-admin

**Command History**

<b>Release</b>	<b>Modification</b>
4.0(1)	This command was introduced.
4.0(2)	Added <b>counter-stats</b> keyword.

**Usage Guidelines**

The **hw-module logging onboard** command enables events to be recorded in files stored in nonvolatile memory, so that the data can be used to diagnose problems with hardware modules installed in a Cisco router or switch. When the onboard hardware is started up, a first record is made for each area monitored and becomes a base value for subsequent records. This command provides a circular updating scheme for collecting continuous records and archiving older (historical) records, ensuring accurate data about the hardware. Data is recorded in one of two formats: continuous information that displays a snapshot of data in a continuous file, and summary information that provides details about the data being collected. Use the **show logging onboard** command to see reports of current and historical data.

**Note**

We recommend that you do not disable OBFL.

**Send document comments to [nexus7k-docfeedback@cisco.com](mailto:nexus7k-docfeedback@cisco.com).**

This configuration command is applicable to the module inserted in a device. When the module is removed and inserted into a new device, the configuration of this command follows the module to the new device.

This command does not require a license.

---

**Examples**

This example shows how to configure OBFL message logging at level 7 (debugging):

```
Router> enable
switch# configure terminal
switch(config)# hw-module switch 2 module 1 logging onboard message level 7
switch(config)# end
```

---

**Related Commands**

Command	Description
<b>attach</b>	Connects to a specific line card for the purpose of executing commands on that card.
<b>clear logging onboard</b>	Clears onboard failure logs.
<b>show logging onboard</b>	Displays onboard failure logs.

---

■ hw-module logging onboard

***Send document comments to nexus7k-docfeedback@cisco.com.***