



Numerics

10/100BASE-T port

half duplex [1-6](#)

10/100BASE-T ports

cables and connectors [B-1](#)

connecting to [2-35](#)

connection distances, maximum [1-6](#)

full duplex [1-6](#)

half duplex [1-6](#)

pinouts [B-2](#)

100BASE-FX ports

cables and connectors [B-2](#)

connecting to [2-37 to 2-38](#)

connection distances, maximum [1-7](#)

100 port mode LED [1-14 to 1-16](#)

19-, 23-, and 24-inch racks [2-9](#)

A

AC power

connecting to [2-24](#)

connector [1-21](#)

warning [C-1 to C-4](#)

adapter pinouts

See terminal adapter pinouts

autonegotiation [1-6](#)

B

baud rate [2-42](#)

brackets

See mounting brackets

C

cables

10/100BASE-T ports [B-1 to B-2, B-4](#)

100BASE-FX, 50/125- or 62.5/125-micron
fiber-optic [2-37, B-2](#)

crossover and straight-through pinouts [B-4](#)

RJ-21 pinouts [B-5](#)

rollover [B-6](#)

rollover pinouts

DB-25 adapter [B-8](#)

CCO

See Cisco.com

chassis, warning against stacking [C-7](#)

circuit breaker (15A) warning [C-12](#)

- Cisco.com [xviii](#)
- Cisco RPS
 - See RPS
- CiscoWorks 2000 [1-4](#)
- Class 1 laser product warning [C-22](#)
- CLI [1-4](#)
- Cluster Management Suite
 - See CMS
- CMS [1-4](#)
- command-line interface
 - See CLI
- connecting 10/100 ports to IP
 - Phones [2-35 to 2-36](#)
- connecting to
 - 10/100BASE-T ports [2-35](#)
 - 100BASE-FX ports [2-37 to 2-38](#)
 - AC power [2-24](#)
 - console port [2-42 to 2-43](#)
 - DC power [2-25 to 2-35](#)
 - LRE port [2-38 to 2-41](#)
 - workstation [B-7](#)
- connection distances, maximum
 - 10/100BASE-T ports [1-6](#)
 - 100BASE-FX ports [1-7](#)
 - LRE ports [2-7](#)
- connectivity problems, solving [3-3](#)
- connectors
 - RJ-21 [B-3](#)
- connectors, See also ports
 - console [B-5](#)
 - connectors and cables [1-21](#)
 - 10/100BASE-T ports [B-1 to B-2](#)
 - 100BASE-FX ports [1-7, B-2](#)
 - console port [2-42 to 2-43](#)
 - power (AC and RPS) [1-21](#)
 - RJ-21 connector [B-3](#)
 - RPS 300 [1-23](#)
 - RPS 600 [1-22](#)
 - See also ports
 - console port [1-23](#)
 - adapter pinouts
 - RJ-45-to-DB-25 terminal [B-7](#)
 - RJ-45-to-DB-9 terminal [B-6](#)
 - cable [B-6](#)
 - connecting to [2-42 to 2-43](#)
 - default characteristics [2-42](#)
 - conventions, document [xii](#)
 - crossover cable
 - connectivity problems [3-5](#)
 - pinout [B-4](#)

D

- DC power
 - connecting to [2-25 to 2-35](#)
 - specifications [A-5](#)
 - warning [C-29 to C-30, C-39](#)
- default characteristics of the console port [2-42](#)

document conventions [xii](#)

duplex SC connector [B-2](#)

E

EMC regulatory statements [2-4 to 2-6](#)

expansion slots

LEDs [1-19](#)

supported modules [1-8](#)

exposed wire lead warning [C-41](#)

F

feedback to Cisco Systems, web [xviii](#)

fiber-optic cable

50/125- or 62.5/125-micron [2-37, B-2](#)

front panel

10/100 ports [1-6](#)

expansion slots [1-8](#)

fixed ports [1-6](#)

LEDs [1-9](#)

LRE ports [1-7](#)

full duplex

10/100BASE-T ports [1-6 to 1-7](#)

LED [1-16](#)

port mode [1-16](#)

G

ground connection warning [C-11](#)

grounded equipment warning [C-14](#)

H

half duplex

10/100BASE-T ports [1-6](#)

LED [1-16](#)

port mode [1-16](#)

hot-swappable modules [1-8](#)

HP OpenView [1-4](#)

I

installation

attaching mounting brackets
(rack-mount) [2-11, 2-16](#)

attaching mounting brackets (telco
rack-mount) [2-15](#)

attaching mounting brackets
(wall-mount) [2-22](#)

cable guide [2-19](#)

connecting to

10/100BASE-T ports [2-35](#)

100BASE-FX ports [2-37 to 2-38](#)

console port [2-42 to 2-43](#)

LRE port [2-38 to 2-41](#)

console port
 connecting to [2-42 to 2-43](#)
electrical noise, avoiding [2-7](#)
guidelines [2-6](#)
mounting in a rack [2-18 to 2-19](#)
mounting on a wall [2-22 to 2-24](#)
packing list [2-7](#)
rack-mount [2-18 to 2-19](#)
table or shelf [2-9](#)
wall-mount [2-22 to 2-24](#)
warnings [2-1 to 2-4](#)
installation guidelines [2-6](#)
IP Phones
 connecting to 10/100 ports [2-35 to 2-36](#)

J

jewelry removal warning [C-5](#)

L

LAN-to-phone jack [2-36](#)
Laser beam exposure warning [C-23](#)
LEDs
 100 port mode [1-14 to 1-16](#)
 expansion slots [1-19](#)
 FDUP [1-14 to 1-16](#)
 full duplex [1-16](#)
 half duplex [1-16](#)

interpreting [1-14](#)
LRE [1-15](#)
port (Catalyst 2900 LRE XL) [1-17](#)
port status [1-9, 1-16 to 1-18](#)
POST results [2-24, 3-1](#)
RPS [1-13 to 1-14](#)
RPS 600 [1-13](#)
SPEED [1-15](#)
STAT [1-14 to 1-17](#)
STAT LED [1-16](#)
System [1-12](#)
UTL [1-14, 1-16](#)

lightning activity warning [C-19](#)

Long-Reach Ethernet

 See LRE

LRE

 defined [1-1](#)

 LED [1-15](#)

 port

 connecting to [2-38 to 2-41](#)

 See also RJ-21 connector

M

main disconnecting device warning [C-8](#)

maximum connection distances

 See connection distances, maximum

mid-mount

See installation

attaching mounting brackets (telco rack-mount)

modules [1-8](#)

mounting brackets [2-9](#)

attaching [2-11, 2-15, 2-22](#)

N

no on/off switch warning [C-24](#)

O

overtemperature warning [C-9](#)

P

PC, connecting to switch [2-42](#)

performance problems, solving [3-3](#)

personnel warning [C-3](#)

pinouts

10/100BASE-T ports [B-2](#)

cable, straight-through and crossover [B-4](#)

RJ-21 connector [B-5](#)

RJ-45-to-DB-25 terminal adapter [B-8](#)

RJ-45-to-DB-9 terminal adapter [B-7](#)

rollover cable [B-7, B-8](#)

port LEDs

Catalyst 2900 LRE XL [1-17](#)

ports

10/100BASE-T [1-6](#)

100BASE-FX [1-7](#)

console [1-23](#)

console connector pinouts [B-5](#)

LED colors [1-16 to 1-18](#)

LRE [1-7](#)

module [1-8](#)

port status LEDs [1-9, 1-16 to 1-18](#)

port status LEDs [1-9, 1-16 to 1-18](#)

POST results [2-24](#)

power

connecting to [2-24](#)

warning [C-15](#)

power connectors [1-21](#)

power on [2-24](#)

power supply

AC power outlet [1-21](#)

RPS connector [1-21](#)

warning [C-17](#)

product disposal warning [C-21](#)

Q

qualified personnel warning [C-3](#)

R

rack installation

 bracket mounting points [2-10](#)

rear panel

 AC power connector [1-21](#)

 console port [B-5](#)

 RPS connector [1-21](#)

regulatory statements, EMC [2-4 to 2-6](#)

RJ-21 connector

 illustration [1-7](#)

 pinouts [B-5](#)

RJ-45 connector, console port [2-43, B-3, B-5](#)

RJ-45 console port [1-19](#)

rollover cable [2-43, B-6](#)

 identifying [B-6](#)

 pinouts [B-8](#)

RPS 300

 connector [1-23](#)

 supported switches [1-22](#)

 warning [C-2](#)

RPS 600

 connector [1-22](#)

 LED [1-13](#)

 supported switches [1-22](#)

 warning [C-1](#)

RPS LED [1-13 to 1-14](#)

S

safety [C-1](#)

SC connectors [B-2](#)

SPEED LED [1-15](#)

stacking the chassis warning [C-7](#)

STAT LED [1-14 to 1-17](#)

straight-through cable pinouts

 cables

 straight-through [B-4](#)

SunNet Manager [1-4](#)

supply circuit warning [C-15](#)

switch

 powering on [2-24](#)

switched ports, module [1-8](#)

System LED [1-12](#)

T

telco racks [2-15](#)

telephone network power warning

 See TN power warning [C-10](#)

temperature

 maximum for installation [2-7, A-2](#)

 warning [C-9](#)

temperature warning [C-9](#)

terminal, connecting to switch [2-42](#)

terminal adapter pinouts

 RH-45-to-RJ-45 [B-7](#)

RJ-45-to-DB-25 [B-7](#)

RJ-45-to-DB-9 [B-6](#)

terminal emulation software [2-42](#)

TN power warning [C-10](#)

translated warnings [C-1 to C-28](#)

U

UTL LED [1-14, 1-16](#)

V

VDSL

defined [1-1](#)

very-high-data-rate digital subscriber line

See VDSL

voltage warning [C-16](#)

W

warnings

defined [xiii to xv](#)

translated [C-1 to C-28](#)

