



---

## Numerics

10/100 ports [1-7](#)

    cable lengths [2-7](#)

    cables and connectors [B-1 to B-2](#)

    connecting to [2-18](#)

    described [1-7](#)

    groupings [1-7](#)

    illustrated [1-5](#)

1000BaseX ports [1-9](#)

    cable lengths [2-7](#)

    connecting to [2-20 to 2-23](#)

    connectors and cables [B-2 to B-3](#)

    illustrated [1-9](#)

19- and 24-inch racks [2-9](#)

---

## A

AC power

    connecting to [2-17](#)

    connector [1-22](#)

    specifications [A-1, A-2, A-3](#)

adapter pinouts, terminal

    RJ-45-to-DB-25 [B-7](#)

    RJ-45-to-DB-9 [B-6](#)

addresses, assigning IP [2-26](#)

agency approvals [A-3](#)

altitude [A-1, A-2, A-3](#)

applications (network examples) [1-25](#)

autonegotiation [1-8](#)

---

## B

bandwidth utilization [1-19, 1-20](#)

BOOTP [2-29](#)

brackets

    See mounting brackets

---

## C

cable guide, attaching [2-13](#)

cable lengths [2-7](#)

cabling

    10/100 ports [B-1 to B-4](#)

    1000BaseX ports [B-2 to B-3](#)

    GigaStack GBIC ports [B-3](#)

    pinouts [B-4](#)

    See also connectors and cables

cautions [xiii](#)

CGMP [1-3](#)

- chassis power warning [C-38](#)
- chassis warning
  - rack-mounting, servicing [C-33](#)
- circuit breaker (15A) warning [C-21](#)
- Cisco Access Analog Trunk Gateway [1-33](#)
- Cisco Access Digital Trunk Gateway [1-33](#)
- Cisco CallManager software [1-31, 1-33](#)
- Cisco Cluster Management Suite [1-24](#)
- Cisco Group Management Protocol (CGMP) [1-3](#)
- Cisco IP Phones [1-8, 1-31](#)
  - connecting [2-19](#)
- Cisco RPS [1-22](#)
  - connecting to [2-17](#)
  - LED [1-15](#)
- Cisco SoftPhone software [1-31](#)
- CiscoView [1-25](#)
- Cluster Builder application [1-24](#)
- Cluster Management Suite [1-24](#)
- Cluster Manager application [1-24](#)
- Cluster View application [1-24](#)
- command-line interface (CLI) [1-25](#)
- configuration, default values [2-30](#)
- configuration examples, network [1-25](#)
- connecting
  - to 10/100 ports [2-18](#)
  - to 1000BaseX ports [2-20](#)
  - to console port [2-18, B-3](#)
  - to GBICs [2-21](#)
  - to GigaStack GBICs [2-22](#)
- connection procedures [2-18 to 2-24](#)
- connectivity problems, solving [3-3](#)
- connectors and cables
  - 10/100 ports [B-1 to B-2](#)
  - 1000BaseX ports [B-2 to B-3](#)
  - console port [B-3 to B-7](#)
  - GigaStack GBICs [B-3](#)
  - power (AC and RPS) [1-22](#)
  - SC [2-21](#)
  - See also ports
- console port [1-24, B-3](#)
  - adapter pinouts
    - RJ-45-to-DB-25 terminal [B-7](#)
    - RJ-45-to-DB-9 terminal [B-6](#)
  - cable [B-5](#)
  - connecting to [2-23 to 2-24, B-5 to B-7](#)
  - default characteristics [2-23](#)
- conventions, document [xii](#)
- crossover cable
  - connectivity problems [3-5](#)
  - pinout [B-4](#)

---

## D

- default characteristics of the console port [2-23](#)
- default configuration [2-30 to 2-31](#)
- designing your network, examples [1-25](#)
- desk mounting [2-17](#)
- diagnosing problems [3-3](#)

diagnostics [2-31](#)

dimensions [A-2](#)

documentation

related publications [xviii](#)

document conventions [xii](#)

duplex LED [1-17, 1-18](#)

---

## E

electrical noise, avoiding [2-8](#)

electromagnetic interference (EMI) [A-3](#)

EMC regulatory statements [2-5](#)

Enterprise Edition software, switches  
running [1-2](#)

examples, network configuration [1-25](#)

---

## F

features [1-1 to 1-3](#)

flooding, traffic control [2-30](#)

front panel [1-5 to 1-20](#)

10/100 ports [1-7](#)

1000BaseX ports [1-9](#)

clearance [2-8](#)

LEDs [1-11 to 1-14](#)

---

## G

GBICs [1-9, 1-27](#)

connecting to [2-20](#)

installing [1-9](#)

supported [1-9](#)

GigaStack GBIC [1-9, 1-26](#)

cable lengths [2-7](#)

connecting to [2-22](#)

connector [B-3](#)

installing [1-9](#)

ground connection warning [C-20](#)

grounded equipment warning [C-23](#)

---

## H

half-duplex [1-17, 1-18](#)

HP OpenView [1-25](#)

humidity [A-1, A-2, A-3](#)

---

## I

IEEE 802.1p [1-3](#)

inline power [1-8, 2-18 to 2-19](#)

LED [1-17, 1-19](#)

troubleshooting [3-6](#)

installation

guidelines [2-7](#)

rack-mount [2-9](#)

See also procedures

warning [C-9](#)

Inter-Switch Link (ISL) [1-3](#)

IOS command-line interface [1-25](#)  
IP address procedures [2-24](#)  
IP setup [2-26](#)

---

## J

jewelry removal warning [C-10](#)

---

## L

LAN-to-phone jack [2-19](#)

### LEDs

Catalyst 3508G XL front panel [1-11](#)  
Catalyst 3512 and 3524 XL front panel [1-12](#)  
Catalyst 3548 XL front panel [1-14](#)  
color meanings [1-18](#)  
duplex [1-17, 1-18](#)  
half-duplex [1-17, 1-18](#)  
interpreting [1-16](#)  
LINE PWR [1-17](#)  
port [1-16 to 1-20](#)  
POST results [2-17, 3-2](#)  
RPS [1-15](#)  
speed [1-17](#)  
STAT [1-16](#)  
status [1-18](#)  
system [1-14](#)  
UTL [1-16, 1-18](#)

lightning activity warning [C-30](#)

line power  
See inline power

---

## M

management features and defaults [2-30](#)

Mode button [1-11, 1-16](#)

Mode label (on Catalyst 3548 XL only) [1-16](#)

models, switch [1-2](#)

mounting, table or desk [2-17](#)

mounting brackets [2-9](#)

attaching [2-11, 2-15](#)

rack-mount [2-13](#)

wall-mount [2-16](#)

---

## N

network configuration examples [1-25](#)

network redundancy values [2-30](#)

noise, electrical [2-8](#)

no on/off switch warning [C-25](#)

---

## O

overtemperature warning [C-16](#)

---

## P

packing list [2-8](#)

- PC, connecting to switch [2-23](#)
  - performance
    - network design [1-25](#)
  - performance problems, solving [3-3](#)
  - performance tuning features [2-30](#)
  - personnel warning [C-7](#)
  - pinouts
    - 10/100 ports [B-2](#)
    - adapters [B-5 to B-7](#)
    - cable, straight-through and crossover [B-4](#)
    - console port [B-5 to B-7](#)
    - RJ-45-to-DB-25 terminal adapter [B-7](#)
    - RJ-45-to-DB-9 PC adapter [B-6](#)
    - RJ-45-to-DB-9 terminal adapter [B-6](#)
    - rollover cable [B-5 to B-7](#)
  - port LEDs [1-16 to 1-20](#)
  - port modes
    - changing [1-11, 1-16](#)
    - LEDs [1-16](#)
    - See also Mode button
  - ports
    - 10/100 [1-5](#)
    - 1000BaseX [1-9](#)
    - See also 10/100, 1000BaseX, inline power
  - POST
    - LEDs [3-2](#)
    - results [2-17, 3-1, 3-2](#)
  - power
    - connecting to [2-17](#)
    - power connectors [1-21 to 1-22](#)
    - power on [2-17](#)
    - power specifications [A-1, A-2, A-3](#)
    - power supply
      - AC power outlet [1-23](#)
      - RPS connector [1-22](#)
      - warning [C-27](#)
  - procedures
    - connection [2-18 to 2-24](#)
    - installation [2-7 to 2-17](#)
    - IP address [2-24](#)
  - product disposal warning [C-31](#)
  - PSTN [1-33](#)
  - publications, related [xviii](#)
  - Public Switched Telephone Network
    - See PSTN
- 
- ## Q
- qualified personnel warning [C-7](#)
- 
- ## R
- rack installation [2-9](#)
    - bracket mounting points [2-10](#)
  - rack-mounting [2-13](#)
  - rear panel [1-21 to 1-22](#)
    - clearance [2-8](#)
  - Redundant Power Supply

See RPS

regulatory statements, EMC [2-5](#)

RJ-45 connector, console port [2-24](#), [B-3](#)

RJ-45 console port [1-21](#)

rollover cable [2-24](#), [B-5](#), [B-6](#)

RPS

- connecting to [2-17](#)
- connector [1-23](#)
- LED [1-15](#)
- warning [C-2](#), [C-4](#)

---

S

safety [2-2](#), [C-1](#)

SC connector [2-21](#), [B-2 to B-3](#)

security values [2-31](#)

setup program [2-25 to 2-28](#)

shelf-mounting [2-17](#)

shock hazard warning [C-41](#)

slots

- See ports [1-9](#)

SNMP network management platforms [1-3](#), [1-25](#)

software by model [1-2](#)

software switch management [1-24](#)

specifications [A-1](#)

stacking the chassis warning [C-13](#)

standard edition software, switches running [1-2](#)

startup

- powering on [2-17](#)

straight-through cable pinouts [B-4](#)

SunNet Manager [1-25](#)

supply circuit warning [C-24](#)

switch

- applications [1-25](#)
- startup

  - powering on [2-17](#)

system LED [1-14](#)

---

## T

table-mounting [2-17](#)

technical specifications [A-1](#)

Telnet, and accessing the CLI [1-25](#)

temperature

- operating [A-1](#)
- warning [C-16](#)

terminal, connecting to switch [2-23](#)

terminal emulation software [2-23](#)

TN power warning [C-19](#)

translated warnings [C-1](#)

troubleshooting [3-1 to 3-5](#)

---

## U

UTL LED [1-16](#), [1-17](#)

---

## V

Visual Switch Manager (VSM) [1-24](#)

VSM [1-24](#)

---

## W

wall-mounting [2-15 to 2-16](#)

warnings

    defined [xiii](#)

    installation [2-2](#)

    translated [C-1](#)

