

## Numerics

- 100BaseFX
    - cable, 50/125- or 62.5/125-micron fiber-optic 1-5
    - port 1-5, B-3
      - connecting to 2-27
  - 100BaseTX
    - cable, Category 5 1-5
    - ports 1-5
      - connecting to 2-25
      - specifications B-1
  - 100-Mbps fiber cable
    - MT-RJ-to-SC multimode patch cable 1-6, 2-29, B-4
    - MT-RJ-to-ST multimode patch cable 1-6, 2-29, B-4
    - ports 1-5, B-4
      - connecting to 2-29
  - 10Base2 cable 1-13
  - 10Base5 cable 1-13
  - 10BaseFL cable 1-13
  - 10BaseT
    - cable 1-13
    - ports 1-5
      - connecting to 2-23
      - specifications B-1
  - 19-, 23-, and 24-inch racks 2-8
  - 50/125- or 62.5/125-micron fiber-optic cable 1-5, 2-27
- ## A
- AC input voltage A-1
  - Accept Upgrade Transfer from Other Hosts
    - option 4-69
  - Action Upon Address Violation
    - drop-down list 3-74
    - option 4-12
  - Action Upon Exceeding Broadcast Threshold
    - field 3-77
    - option 4-18
  - Activate Group Settings option 4-75
  - adapters
    - diagnosing problems with 5-2
    - RJ-45-to-DB-25 female DTE 2-16, 2-17
      - pin assignments B-8
    - RJ-45-to-DB-25 male DCE 2-16
      - pin assignments B-9
    - RJ-45-to-DB-9 female DTE 2-16
      - pin assignments B-7
  - Add a Static Address option 4-56
  - Add Member Ports option 4-65
  - Add Ports to Capture List option 4-63
  - Address Aging Time option 4-13
  - address reports 4-78, 4-79
  - Address Table Management Page 3-26
  - Address Table Size option 4-55
  - address tables 3-26, 4-53
    - address aging 3-28
    - maximum limit 4-53
  - Address Violation Trap Generation check box 3-42
  - address violations 3-34
    - 100BaseT ports 3-25, 4-61
    - 10BaseT ports 3-25, 4-61
      - action upon 3-74
  - Addressing Security option 4-55, 4-56
  - agency approvals A-1
  - Aging Time field 3-28
  - alignment errors 3-25, 4-61
  - applications (network examples) 1-27
    - client/server workgroup 1-28
    - collapsed backbone 1-32
    - distributed backbone 1-30
    - extended network 1-36
    - redundant backbone 1-34

- approvals, agency
    - EMI A-1
    - safety A-1
  - Assign/Change Password field 3-8
  - assistance, Cisco xix
  - ATM LAN emulation, See LANE feature
  - AUI port 1-13, B-5
    - connecting to 2-32
    - pin assignments B-5
    - settings 3-17, 4-44
  - Authentication Trap Generation
    - check box 3-40
    - option 4-30
  - Auto Answer
    - check box 3-62
    - option 4-75
  - Auto Baud
    - check box 3-62
    - option 4-75
  - autonegotiation 3-20, 4-52
- B**
- Back Pressure option 3-75, 4-14
  - backbone applications
    - collapsed 1-32
    - distributed 1-30
    - redundant 1-34
  - bandwidth
    - statistics report 4-81
    - utilization
      - UTL LED 1-9, 3-14
      - UTL mode 1-9, 3-14
  - Bandwidth Usage Report 4-81
    - option 4-76
  - basic switch information, assigning or changing 3-4
  - Baud Rate
    - diagnosing problems 5-3
    - drop-down list 3-61
    - option 4-74
  - Bayonet connectors 1-13
  - blocking STP state 3-50, 4-34, 4-47
  - Boot Firmware 5-16
    - version field 5-11
  - BOOTP 2-22, 3-56, 4-62
  - Bridge Group
    - Configuration Menu 4-64
    - option 4-5
  - bridge groups 3-44, 4-31
    - overlapping 4-64
    - settings 4-64
  - Bridge ID field 3-46, 4-33
  - Bridge Priority
    - field 3-47
    - option 4-35
  - Bridge–Spanning–Tree option 4-19
  - broadcast packets 3-21, 4-58
    - storm control 3-76, 4-17
  - Broadcast Reenabled Threshold
    - field 3-77
    - option 4-18
  - Broadcast Storm Control 3-76
    - Menu 4-17
    - option 4-15
  - Broadcast Storm Trap Generation check box 3-41
  - Broadcast Threshold
    - field 3-77
    - option 4-18
  - Browse button 3-53
  - browsers, supported 1-16
    - configuring Microsoft Internet Explorer
      - 4.01a 2-35
      - 5.0 2-37
    - configuring Netscape Communicator 2-35

## C

- cable guide, attaching to rack 2-12
- cables
  - 100BaseFX, 50/125- or 62.5/125-micron fiber-optic 1-5, 2-27
  - 100BaseTX
    - Category 5 1-5, 2-25
    - crossover 2-25
    - straight-through 2-25
  - 100-Mbps fiber, MT-RJ-to-SC fiber-optic patch 1-6, 2-29, B-4
  - 100-Mbps fiber, MT-RJ-to-ST fiber-optic patch 1-6, 2-29, B-4
  - 10Base2 1-13
  - 10Base5 1-13
  - 10BaseFL 1-13
  - 10BaseT 1-13
    - Category 3, 4, and 5 2-23
    - crossover 2-23
    - straight-through 2-23
  - AUI transceiver 1-13, 2-32
  - console 2-16
    - specifications B-7
  - crossover B-3
  - diagnosing problems 5-2, 5-5
  - straight-through B-3
  - Token-Ring environments 5-6
- Cancel and Restore Previous Group Settings
  - option 4-75
- Capture Time Interval option 4-81
- Capturing Frames to the Monitoring Port
  - check box 3-58
  - option 4-63
- Catalyst 2820 Switch Manager, See switch manager
- Category 3, 4, and 5 cables 2-23
  - crossover 2-23, 2-25, B-3
  - straight-through 2-23, 2-25, B-3
- Category 5 cable 1-5, 2-25
- caution, definition of xv
- CCO xviii, 3-15
  - firmware upgrade 3-59, 4-68
- CDP 3-51, 4-36
  - changing settings 3-54, 4-36
  - detailed neighbor information 3-53, 4-38
  - diagnosing problems 5-3
  - option 4-19
- CDP Configuration/Status Menu 4-36
- CDP Enabled/Disabled list 3-55
- CDP Management Page 3-51
- CGMP
  - check box 3-80
  - groups 3-78, 3-81, 4-39, 4-40
  - option 4-19
  - routers 3-78, 3-82, 4-39
  - settings 3-80, 4-40
- CGMP Fast Leave
  - check box 3-80
  - option 4-40
- CGMP Management
  - Menu 4-39
  - Page 3-78
- Cisco Catalyst 1900/2820 Enterprise Edition Software,
  - See enterprise edition software
- Cisco Connection Online, See CCO
- Cisco Discovery Protocol, See CDP
- Cisco Documentation CD-ROM xviii
- Cisco Group Management Protocol, See CGMP
- Cisco resources
  - CCO 3-15
  - HTML interface development group 3-15
  - TAC 3-15
- Clear Addresses on LinkDown
  - column 3-35
  - option 4-56
- Clear Cached DNS Entries option 4-23
- CLI 1-24, 3-9, 4-9
  - accessing 2-41
  - option 2-42
- client/server workgroup application 1-28

- Cluster Management
    - applications xvii, 3-14
    - button 3-14
    - option 4-19
  - clustering 1-17
    - diagnosing problems 5-3
    - effects on the switch 1-18
      - host name 3-6, 4-12
      - IP information 2-19, 3-7, 3-70, 4-20
      - passwords 2-20, 3-9, 3-10, 4-8, 4-10
      - SNMP community strings 3-37, 3-38, 4-25, 4-27
      - switch name 3-6, 4-12
    - requirements 1-17
  - coaxial cable
    - thick 1-13
    - thin 1-13
  - Command Switch IP field 3-7
  - command switch, See clustering
  - Command-Line Interface, See CLI
  - Communicator, See Netscape Communicator
  - Configure Port option 4-57, 4-61
  - configuring browsers
    - Microsoft Internet Explorer 4.01a 2-35
    - Microsoft Internet Explorer 5.0 2-37
    - Netscape Communicator 2-35
  - connectivity, diagnosing problems 5-2
  - connectors B-1
    - 100BaseFX 1-5
      - connecting to 2-27
    - 100BaseTX 1-5
      - connecting to 2-25
      - pinout assignments B-1
    - 100-Mbps fiber 1-5
      - connecting to 2-29
    - 10BaseT 1-5
      - connecting to 2-23
      - pinout assignments B-1
  - AC power 1-12
    - connecting to 2-18
  - AUI 1-13
    - connecting to 2-32
    - pinout assignments B-5
  - Bayonet 1-13
  - console port 1-13, B-6
    - connecting to 2-16
    - pinout assignments B-7
  - MT-RJ fiber 1-6
  - RPS 1-12
  - SC fiber 1-5
  - Console and Upgrade Configuration Page 3-59
  - console cable
    - connecting to console port 2-16
    - identifying B-6
  - Console Password option 3-9, 4-4, 4-9
  - console port 1-13
    - configuring 3-61, 4-74
    - connecting to 2-16, 2-41
      - Sun workstation 2-17
    - default settings 2-16
    - pin assignments B-7, B-8, B-9
    - resetting to factory defaults 5-17, 5-19
    - restriction 2-17
  - Console Settings Menu 4-6
  - Contact Name
    - field 3-6
    - option 4-12
  - contacting Cisco xix
  - Continue with Standard System Start Up option 5-11
  - conventions, document xv
  - corrupted firmware, recovery 5-13
- ## D
- Data Bits
    - drop-down list 3-61
    - option 4-74
  - DC input voltage A-1
  - Default Gateway field 3-71
  - default gateway option 3-71, 4-22
  - Default Mode of Status LED option 4-7

- default settings
  - management console 1-22
  - resetting switch to factory 5-17, 5-18
  - switch manager 1-20
- Define a Restricted Static Address option 4-56
- Delete Member Ports option 4-65
- Delete Ports from Capture List option 4-63
- Description/Name of Port option 4-47
- Designated Root field 3-46, 4-33
- designing your network, examples 1-27
- Detailed Port Statistics Report 4-59
  - 10BaseT and 100BaseT ports 3-23
- Details button 3-53
- diagnostic console 5-9
  - accessing 5-10
- Diagnostic Console - System Debug Interface
  - Menu 5-16
- Diagnostic Console - Systems Engineering Menu 5-11
- Diagnostic Console Logon Screen 5-10
- dimensions, switch A-1
- Disable CDP on Port(s) option 4-37
- disabled STP state 3-50, 4-34, 4-47
- disabled-mgmt port state 3-18, 4-48
- disabled-self-test port state 3-18, 4-48
- disabled-violation port state 3-18, 4-48
- Discovered Neighboring Devices list 3-53
- distributed backbone application 1-30
- DNS servers 3-72
  - field 3-71
  - option 4-22
- documentation
  - CD-ROM, Cisco xviii
  - electronic access xviii
  - feedback xviii
- Domain Name System servers, See DNS servers
- Download Test Subsystem (XMODEM) option 4-70
- Duplex Mode Requested/Actual drop-down list 3-19
- duplex operation 3-20, 4-52
  - changing 3-19, 4-49
  - diagnosing problems 5-2
  - FDUP LED 1-11, 3-14

- FDUP mode 1-11, 3-14
- Dynamic Address Table 3-28, 4-54

## E

- ECC
  - 100BaseT ports 3-22, 4-51
  - 10BaseT ports 3-76, 4-14
- EMC regulatory statements 2-3
- EMI approvals A-1
- emulation software 1-16
- Enable CDP on Port(s) option 4-37
- Enable Spanning Tree check box 3-47
- enabled port state 3-18, 4-48
- encrypted privileged passwords 3-9, 4-7, 4-9
- enhanced congestion control, See ECC
- enterprise edition software xvii, 1-2, 4-5
- environmental operating ranges A-1
- Erase All Registered Multicast Addresses option 4-67
- Erase an Address option 4-57
- Exception Statistics Report 3-67, 4-79
  - option 4-76
- excessive deferrals 3-25, 4-61
- excessive errors, diagnosing problems 5-2
- extended network application 1-36

## F

- factory defaults
  - switch 5-17
- Fast EtherChannel feature 1-2
- FCS errors 3-25, 4-61
- features, switch 1-1
- feedback, documentation xviii
- fiber-optic cable 1-13
  - 50/125- or 62.5/125-micron 1-5, 2-27
  - MT-RJ-to-SC fiber-optic patch 1-6, 2-29, B-4
  - MT-RJ-to-ST fiber-optic patch 1-6, 2-29, B-4

- FIFO latencies 3-73, 3-74, 4-16, 4-17
- Filename for Firmware Upgrades
  - field 3-63
  - option 4-69
- firmware
  - diagnosing problems 5-5
  - recovering from corrupted 5-13
  - upgrade 3-62
    - from a TFTP client 3-64, 4-72
    - from a TFTP server 3-63, 4-71
    - using XMODEM 4-73
- Firmware Configuration Menu 4-68
- Firmware Version field 3-59, 4-68
- First-In, First-Out, see FIFO latencies
- Flood Unknown Unicasts option 4-56
- Flood Unregistered Multicasts option 4-56
- flooding control 3-21, 4-58
- flow control 3-20, 4-52
- Forward Delay
  - field 3-46, 4-33
  - option 4-35
- Forward Transitions column 3-50, 4-34, 4-47
- forwarding states, STP 3-50, 4-34, 4-47
- FragmentFree (cut-through) switching mode 3-73, 4-16
- front-panel description 1-4
  - 100BaseFX port 1-5
  - 100BaseTX ports 1-5
  - 100-Mbps fiber ports 1-5
  - 10BaseT ports 1-5
  - LEDs 1-6, 3-11
  - Mode button 1-6
- Full Duplex option
  - 100BaseT ports 3-19, 4-49
  - 10BaseT ports 3-19, 4-49
  - autonegotiation 4-52
  - with flow control 3-19, 3-20, 4-49, 4-52

## G

- Generate Alert on Address Violation option 4-13
- Generate Alert when Threshold Exceeded option 4-18
- Generic I/O option 5-16
- giant frames 3-25, 4-61
- Go to Port option 4-51, 4-57, 4-61
- Goto Bridge Group option 4-35

## H

- Half Duplex Back Pressure option 3-75, 4-14
- Half Duplex option
  - 100BaseT ports 3-19, 4-49
  - 10BaseT ports 3-19, 4-49
  - autonegotiation 4-52
- hardware
  - recommendations
    - PC environments 1-15
    - UNIX environments 1-15
  - requirements 1-15
- Hello Time
  - field 3-46, 4-33
  - option 3-48, 4-35
- Help
  - management console 4-5
  - switch manager 1-19
- Hold Time option 4-37
- Home Page 2-40, 3-4
- host name 3-6, 4-12
  - assigning or changing 3-6
  - clustering 3-6, 4-12
- Host Name field 3-6
- HTTP Server Configuration
  - Menu 4-42
  - option 4-19
  - settings 4-42
- Hypertext Transfer Protocol, See HTTP Server Configuration

## I

- IGMP 3-78, 4-39
  - CGMP Fast Leave requirement 3-80, 4-40
- Initialization String for Modem option 4-75
- installation
  - rack-mount 2-8
  - site preparation 2-4
    - testing the switch 2-6
  - tabletop or shelf 2-7
  - wall-mount 2-13
  - warnings 2-2
- Internet Explorer, See Microsoft Internet Explorer
- Internet Group Management Protocol, See IGMP
- Inter-Switch Link, See ISL feature
- IP Address
  - field 3-71
  - option 2-21, 4-4, 4-21
- IP Address of DNS Server
  - field 3-72
  - option 4-22
- IP configuration
  - assigning at logon 2-19, 3-7
  - changing 3-70, 4-20, 4-21
  - clustering 2-19, 3-7, 3-70, 4-20
  - Menu 2-21, 4-20
  - option 4-19
  - recommendation 2-19, 3-7, 3-70, 3-71, 4-20, 4-21
- IP Multicast Address Table 3-81, 4-41
- ISL feature 1-2

## J

- jabber errors 3-25, 4-61

## L

- LANE feature 1-2
- Last TopChange field 3-46, 4-33
- Last-In, First-Out, see LIFO latencies
- late collisions 3-25, 4-61
- latencies 3-73, 4-16
  - FIFO 3-73, 3-74, 4-16, 4-17
  - LIFO 3-73, 4-16
    - packet reception 3-74, 4-17
- learning state, STP 3-50, 4-34, 4-47
- LEDs 1-6
  - port 1-8, 3-12
  - redundant power supply (RPS) 1-7, 3-11
  - system status (STAT) 1-7, 3-11
  - utilization (UTL) 1-9, 3-14
- LIFO latencies 3-73, 4-16
- LinkUp/LinkDown Trap Generation
  - check box 3-41
  - option 4-30
- List Addresses option 4-57
- List All Registered Multicast Addresses option 4-67
- List IP Multicast Addresses option 4-41
- listening state, STP 3-50, 4-34, 4-47
- Location
  - field 3-6
  - option 4-12

## M

- MAC Address field 3-29, 3-30
- MAC addresses
  - flooding of unknown 3-21, 4-58
  - source 3-28, 4-54
- Management Bridge Group option 4-22
- management console 1-22, 4-1
  - accessing 2-41, 2-44
    - problems 5-3
  - canceling changes 4-3

- default settings 1-22
- Help 4-5
- Logon Screen 2-21, 2-42, 4-4
- Main Menu 2-43, 4-5
- navigating 4-1
- saving changes 4-3
- software requirements 1-16
- Management Console Inactivity Timeout
  - field 3-61
  - option 4-6
- management features 1-3
  - See also management interfaces
- Management Information Base files, See MIBs
- management interfaces 1-14
  - accessing 2-34
    - CLI 2-41
    - diagnostic console 5-10
    - management console 2-41
    - SNMP 2-44
    - switch manager 2-34
  - CLI 1-24
  - clustering 1-17
  - diagnostic console 5-9
  - hardware requirements 1-15
  - management console 1-22
  - SNMP 1-24
  - software requirements
    - management console 1-16
    - switch manager 1-16
  - switch manager 1-19
- management options, See management interfaces
- Match Remote Baud Rate option 4-75
- Max Age
  - field 3-46, 4-33
  - option 3-48, 4-35
- Maximum Secure Addresses
  - column 3-34
  - field 3-33
- Media Access Control addresses, See MAC addresses
- Member Switch Host Name field 3-6
- member switch, See clustering
- Memory (CPU) I/O option 5-16
- menu bar, switch manager 3-2
- menu console, See management console
- Menus option 2-42, 4-4
- MIBs 3-35, 4-24
  - accessing 2-44
- Microsoft Internet Explorer
  - configuring
    - 4.01a 2-35
    - 5.0 2-37
  - supported and unsupported versions of 1-16
- Mode button 1-6, 3-12
- models, switch 1-2
- modem initialization string 3-62
- modes
  - port 1-8, 3-12
    - default mode option 4-7
  - switching
    - FragmentFree (cut-through) 3-73, 4-16
    - store-and-forward 3-73, 4-16
- Modify Encrypted Password option 3-9, 4-7, 4-9
- Modify Unencrypted Password option 3-9, 4-7, 4-9
- Monitor Port Assignment option 4-63
- monitoring
  - RMON 3-56, 4-62
  - SPAN 3-56, 4-62
  - switch image 3-11
- Monitoring Configuration Menu 4-62
- Move Member Ports option 4-65
- MT-RJ connectors 1-6, B-4
  - connecting to 2-29
- multicast packets 3-21, 3-78, 4-39, 4-58
  - Permanent Multicast Address Table 3-30, 4-66
  - registration 4-66
  - store-and-forward of 3-74, 4-12
- Multicast Registration Menu 4-66

## N

- Name of System option 3-6, 4-12
- name or description 4-47
- Netscape Communicator
  - configuring 2-35
  - supported and unsupported versions of 1-16
- network configuration examples 1-27
- Network Management (SNMP)
  - Configuration Menu 4-24
  - READ Configuration Menu 4-25
  - TRAP Configuration Menu 4-28
  - WRITE Configuration Menu 4-26
- Network Management Menu 4-19
- Network Port 3-75
  - drop-down list 3-75
  - option 4-13
  - port security 3-33, 4-55
  - unknown unicast addresses 3-21, 4-58
- New Address scroll list 3-29, 3-30
- Next Bridge Group option 4-35
- Next Port option 4-51, 4-57, 4-61
- nonsecret privileged passwords 3-9, 4-7, 4-9
- Number for Dial-out Connection option 4-75
- Number of Member Ports field 3-46, 4-33

## O

- online help
  - management console 4-5
  - switch manager 1-19
- operating
  - altitude A-1
  - humidity A-1
  - ranges, environmental A-1
  - temperature A-1
- Operation firmware version field 5-11
- Overlapping of Bridge Groups Permitted option 4-65

## P

- package contents 2-5
- Packet Hold Time field 3-54
- packet reception latencies, see PRL
- Packet Transmission Time field 3-54
- Parity Settings
  - drop-down list 3-61
  - option 4-75
- Password Intrusion Threshold option 4-6
- passwords 2-42, 3-8, 4-8
  - changing 3-8, 4-8
    - encrypted privileged 3-9, 4-7, 4-9
    - unencrypted privileged 3-9, 4-7, 4-9
  - clustering 1-18, 2-20, 3-9, 3-10, 4-8, 4-10
  - forgotten and recovering 5-15
  - initial assignment of 2-20
  - lost and recovering 5-15
  - multistring 3-8, 4-7
  - privileged level 3-9, 4-7
  - user level 3-9, 4-9
- Path Cost
  - column 3-49
  - option 4-50
- performance
  - diagnosing problems 5-2
  - features 1-3
  - network design 1-27
  - settings 3-73, 4-11
- Permanent Multicast Address Table 3-30, 4-66
- Permanent Unicast Address Table 3-29, 4-55
- permanent virtual connection, See PVC feature
- physical dimensions A-1
- Ping option 4-23
- Port Addressing option 4-51, 4-61
- Port Addressing Report 4-78
  - option 4-76
- Port Configuration Menu
  - 100BaseT Ports 4-44
  - 10BaseT Ports 4-44

- Port Fast Mode
  - checkbox 3-50
  - column 3-50
  - option 4-50
    - after POST 2-6
- port LEDs 1-8
- Port Management Page 3-15
- port modes 3-12
  - bandwidth utilization (UTL) 1-9, 3-14
  - changing 1-8, 3-12
  - duplex operation (FDUP) 1-11, 3-14
  - port status (STAT) 1-9, 3-13
    - See also ports and module ports 1-8
- Port Monitored/Not Monitored list 3-58
- Port Name/Description column 3-23
- Port Priority option 4-49
- Port Security Table
  - button 3-31
  - Page 3-31
- port statistics 3-25
- port status
  - STAT LED 1-9, 3-13
  - STAT mode 1-9, 3-13
- Port Status Report 4-77
  - option 4-76
- port STP states 3-50, 4-34
- ports
  - 100BaseFX 1-5
  - 100BaseTX 1-5
  - 100-Mbps fiber 1-5, 1-6
  - 10BaseT 1-5
    - address statistics 4-78
    - console 1-13
    - duplex settings 3-19, 4-49
    - exception statistics 3-67, 4-79
    - LEDs 1-8, 3-12
      - diagnosing problems 5-5
      - POST test descriptions 5-8
    - modes 1-8
      - default mode option 4-7
    - name or description 3-23
      - pin assignments B-1
        - settings 3-15, 4-44
        - statistics 3-23, 4-59, 4-77
        - status descriptions 3-18, 4-48
  - POST 2-6, 5-7
    - displaying results 5-12
      - failure message example 5-12
    - fatal failures 2-7, 5-7
    - nonfatal failures 2-6, 5-7
    - test descriptions 5-8
  - POST Diagnostic Console option 5-17
- power
  - consumption A-1
  - requirements A-1
- power connections, diagnosing problems 5-5
- power connectors
  - internal AC power supply 1-12
  - redundant power system (RPS) 1-12
- power-on self-test, See POST
- powerup 2-18
  - redundant power sources, limitations 2-18
- preparation, site 2-4
- Previous Bridge Group option 4-35
- Previous Port option 4-51, 4-57, 4-61
- Priority column 3-49
- privileged encrypted passwords 3-9, 4-7, 4-9
- privileged unencrypted passwords 3-9, 4-7, 4-9
- PRL 3-74, 4-17
- problems, See troubleshooting
- publications, related xvii
- PVC feature 1-2

## R

- rack installation 2-8
  - attaching brackets
    - front panel forward 2-10
    - mid mount 2-11
    - rear panel forward 2-10

- attaching cable guide 2-12
  - attaching switch to rack 2-11
  - bracket mounting points 2-8
  - Read Community String
    - assigning or changing 3-37, 4-25
    - field 3-37
    - option 4-25
  - READ Configuration option 4-24
  - rear-panel description 1-11
    - AUI port 1-13
    - console port 1-13
    - power connectors 1-12
  - recommended configurations
    - PC 1-15
    - UNIX 1-15
  - Reconfirm Password field 3-8
  - redundant backbone application 1-34
  - redundant power sources, limitations 1-12
  - redundant power system, See RPS
  - Register a Multicast Address option 4-67
  - Register/Unregister buttons 3-30
  - related publications xvii
  - remote monitoring, See RMON
  - Remove All Addresses option 4-57
  - Remove IP multicast Addresses option 4-41
  - reports, usage summary 4-76
    - bandwidth usage 4-81
    - exception statistics 3-65, 4-79
    - port addressing 4-78
    - port status 4-77
    - utilization statistics 3-65, 4-80
  - requirements, technical specifications A-1
  - Reset All Statistics
    - button 3-67
    - option 4-79, 4-80
  - Reset Capture option 4-81
  - Reset Main Console RS232 Interface option 5-17, 5-19
  - reset port state 3-18, 4-48
  - Reset Port Statistics
    - button 3-67
    - option 4-61
  - Reset System option 4-15
  - Reset to Factory Defaults option 4-15
  - restricted static addresses 3-26, 4-53
  - Return System to Factory Defaults option 5-17, 5-18
  - RIP 3-72, 4-23
  - RJ-45 connectors
    - console port B-6
    - network ports B-1
    - pin assignments B-2
  - RJ-45-to-DB-25 female DTE adapter 2-16, 2-17, B-8
  - RJ-45-to-DB-25 male DCE adapter 2-16, B-9
  - RJ-45-to-DB-9 female DTE adapter 2-16, B-7
  - RJ-45-to-RJ-45 rollover console cable, See console cable
  - RMON 1-26, 3-56, 4-62
    - supported groups 1-26, 2-1
  - rollover console cable, See console cable
  - Root Path Cost field 3-46, 4-33
  - Root Port field 3-46, 4-33
  - root settings 3-46, 4-33
  - Router Hold Time
    - field 3-81
    - option 4-40
  - Router Ports Table 3-82
  - Routing Information Protocol, See RIP
  - RPS 1-12
    - LED 1-7, 3-11
      - diagnosing problems 5-4
    - limitations 1-12
  - RS-232 Port Configuration Menu (console port) 4-74
  - RS-232 port, See console port
- ## S
- safety
    - approvals A-1
    - warnings
      - installation 2-2
      - translated C-1

- saving changes
  - management console 4-3
  - switch manager 3-3
- SC connectors 1-5, 1-6, 2-29, B-3, B-4
  - connecting to 2-27
- secret privileged passwords 3-9, 4-7, 4-9
- secure ports 3-33, 4-55
- Security
  - check box 3-33, 3-35
  - column 3-33
- security reject count 3-34
- Select Monitoring Port drop-down list 3-58
- Server IP Address or Name of TFTP Server field 3-63
- shelf installation 2-7
- Show Neighbor option 4-38
- Silent Time Upon Intrusion Detection option 4-6
- Simple Network Management Protocol, See SNMP
- site preparation 2-1
- SNMP 1-24
  - accessing MIBs 2-44
  - changing settings 3-35, 4-24
  - community strings 2-44
    - clustering 1-18, 3-37, 3-38, 4-25, 4-27
    - Read 3-37, 4-25
    - Write 3-38, 4-26
  - operations 1-25
  - trap managers 3-39, 4-28
  - write managers 3-42
- SNMP Management
  - option 4-19
  - Page 3-35
- software requirements 1-15
  - browser configuration
    - Microsoft Internet Explorer 4.01a 2-35
    - Microsoft Internet Explorer 5.0 2-37
    - Netscape Communicator 2-35
  - emulation software 1-16
  - management console 1-16
  - switch manager 1-16
- source address tables 3-26, 4-53
- SPAN 3-56, 4-62
  - Configuration Page 3-56
  - Monitoring Configuration Menu 4-62
- Spanning Tree
  - check box 3-46
  - Configuration Menu 4-32
  - Management Page 3-44
- Spanning-Tree Algorithm and Protocol option 4-34
- Spanning-Tree Protocol, See STP
- specifications, technical A-1
- ST connectors 1-6, 1-13, 2-29, B-4
- standard-edition software 1-3
- startup
  - assigning IP information and password 2-19
  - from diagnostic console 5-12
  - powering up 2-18
- STAT LED 1-7, 3-11
- State column 3-50, 4-34
- static addresses 3-33, 3-35, 4-55, 4-56
- statistics reports 4-76
  - bandwidth usage 4-81
  - exception 3-65, 4-79
  - port 3-23, 4-59, 4-77
  - port addressing 4-78
  - utilization 3-65, 4-80
- Status field 5-11
- Status of Port option 4-47
- Status Requested/Actual column 3-17, 3-18
- sticky-learned addresses 3-29, 3-33, 4-55
- Stop Bits
  - drop-down list 3-61
  - option 4-74
- storage temperature A-1
- store-and-forward switching mode 3-73, 4-16
- STP 3-43, 4-31
  - after POST 2-6
  - enabling or disabling 3-46
  - forwarding states 3-50, 4-47
  - options 3-47, 4-31
  - port and forwarding states 3-50, 4-34
  - port settings 3-49, 4-31

- root settings 3-46, 4-33
- switch spanning-tree options 3-47, 4-31
- STP State field 4-47
- Subnet Mask
  - field 3-71
  - option 4-22
- support, Cisco xix
- suspended-no-linkbeat port state 3-18, 4-48
- switch
  - applications 1-27
    - client/server workgroup 1-28
    - collapsed backbone 1-32
    - distributed backbone 1-30
    - extended network 1-36
    - redundant backbone 1-34
  - connectors and cables B-1
  - features 1-1
  - front-panel description 1-4
  - hardware and software requirements 1-15
  - management options 1-14
    - using diagnostic console 5-9
    - using management console 4-1
    - using switch manager 3-1
  - models 1-2
  - POST tests 5-7
  - powerup 2-18
  - rear-panel description 1-11
  - recovery 5-9
  - startup
    - assigning IP information and password 2-19
    - from diagnostic console 5-12
    - powering up 2-18
  - technical specifications A-1
  - troubleshooting 5-1
- switch image, monitoring from 3-11
- Switch IP Address field 3-7
- switch manager 1-19, 3-1, 3-2
  - accessing 2-34
  - canceling changes 3-3
  - default settings 1-20
  - displaying 2-38

- Help 1-19
  - navigating 3-2
  - online help 3-1
  - saving changes 3-3
  - software requirements 1-16
- switch name 3-6, 4-12
  - assigning or changing 3-6
  - clustering 1-18, 3-6, 4-12
- Switch Port Analyzer, See SPAN
- Switching Mode
  - drop-down list 3-73
  - option 4-12
- switching modes
  - FragmentFree (cut-through) 3-73, 4-16
  - packet reception latencies 3-74, 4-17
  - store-and-forward 3-73, 4-16
  - switching latencies 3-74, 4-17
- System Configuration Menu 4-11
- System Debug Interface option 5-11
- SYSTEM LED, diagnosing problems 5-5
- System Management Page 3-68
- system management settings 3-68, 4-11
- System TFTP Upgrade
  - button 3-63
  - option 4-70
- System XMODEM Upgrade option 4-70

## T

- tabletop installation 2-7
- TAC xix, 3-15
- TACACS+ authentication feature 1-2
- Technical Assistance Center, See TAC
- technical specifications A-1
- Telnet
  - accessing management interfaces 2-41
  - button 3-53
  - link to open a session 3-15
- TFTP client, downloading firmware from 3-64, 4-72

- TFTP Server Name or IP Address option 4-69
- TFTP server, downloading firmware from 3-63, 4-71
- Time Delay between Attempts option 4-75
- Topology Changes field 3-46, 4-33
- transceiver, Ethernet 1-13, 2-32
- Transmission Interval option 4-37
- TRAP Community Strings option 4-29
- TRAP Configuration option 4-24
- Trap Manager Community String field 3-40
- TRAP Manager Names or IP Addresses option 4-29
- trap managers
  - address violation trap generation 3-42
  - assigning or changing 3-39, 4-28
  - authentication trap generation 3-40, 4-30
  - broadcast storm trap generation 3-41
  - linkUp/linkDown trap generation 3-41, 4-30
  - traps generated 3-39, 4-28
- troubleshooting 5-1
  - diagnostic console, recovery procedures 5-9
  - POST failures 5-7
  - symptoms and corrective actions 5-1
  - Token-Ring cabling 5-6

## U

- unauthorized addresses 3-34
- unencrypted privileged passwords 3-9, 4-7, 4-9
- unicast packets 3-21, 4-58
  - network port 3-21, 3-75, 4-58
  - Permanent Unicast Address Table 3-29, 4-55
- Unicast/Multicast check box 3-22
- Unregister a Multicast Address option 4-67
- unshielded twisted-pair cable 1-13
- Upgrade Operation Firmware option 5-11
- upgrading firmware 3-59, 3-62, 4-68
- Uplink Fast option 3-47
- Usage Summary Menu 4-76
- Use of Store-and-Forward for Multicast
  - check box 3-74
  - option 4-12

- Use Routing Information Protocol
  - check box 3-72
  - option 4-23
- Utilization Statistics Report 3-67, 4-80
  - option 4-76

## V

- Version option 4-37
- View Management Console Password option 5-16
- View Port Statistics option 4-51, 4-57
- virtual LAN, See VLAN feature
- VLAN feature 1-2
  - option 4-5

## W

- wall installation 2-13
  - attaching brackets 2-14
  - attaching switch to wall 2-15
- warnings
  - definition of xv
  - installation 2-2
  - translated C-1
- web console, See switch manager
- weight, switch A-1
- Write Community String
  - assigning or changing 3-38, 4-26
  - field 3-38
  - option 4-27
- Write Configuration option 4-24
- Write Manager Names or IP Addresses option 4-27
- write managers 3-42, 4-27

## X

- XMODEM Protocol
  - downloading firmware 4-73, 5-13