

**A**

## accessing

- Cluster Management 2-17
- command modes 2-30
- CVSM 2-8, 3-14
- CVSM from visual stack 3-13
- MIB files 2-39
- MIB objects 2-38
- MIB variables 2-39

## address aging time 3-69

## address count, secure 3-77

## address management, illustrated 3-68

## address resolution 3-64

## address security violations 3-76

## address table

- aging time, configuring 3-69
- dynamic entries, removing 3-70

## MAC 3-66

## secure addresses

- adding 3-71
- removing 3-71

## secured port, defining 3-76

## static addresses

- adding 3-74
- removing 3-75

## addresses

## dynamic

- aging time 3-69
- default aging 3-88
- described 3-66
- removing 3-70

## secure

- adding with CLI 3-71
- described 3-70
- removing with CLI 3-71

## static

- adding with CLI 3-74
- configuring (EtherChannel) 3-73

## described 3-72

## removing with CLI 3-75

## administrative information 4-25

## aggregation

- enterprise workgroup 1-7
- small-to-medium business workgroup 1-9

## aging time

- changing address 3-69
- defining 3-69

## aging, accelerating 3-88

## alarms, RMON 3-109

## ARP table

- address resolution 3-64
- illustrated 3-65
- managing 3-64

## ATM ports

- settings for 3-22
- VLAN membership 3-102

## authentication, enabling NTP 3-48

## autonegotiation

- connecting to devices without 3-22
- mismatches 5-1, 5-2

**B**

## bandwidth, graphing 2-26

## Beginning 3-85

## broadcast messages, configuring for 3-48

## broadcast storm control

- disabling 3-36
- enabling 3-35

## browsers

## configuring

- Internet Explorer 2-4
- Netscape Communicator 2-4
- supported versions 2-3

- buttons
  - Cluster Builder 2-20
  - Cluster Management 2-17
  - Cluster Manager 2-27
  - Cluster View 2-23
  - CVSM 2-8, 2-10
  - Network View 2-14
- bytes, graphing 4-38, 4-40

## C

- candidates
  - adding 4-2
  - automatically discovering 4-6
  - displaying 2-18
  - requirements 4-3
- Caution described xiv
- CDP
  - configuring 3-79, 3-81
  - illustrated 3-80
- CGMP
  - controlling management packets with 3-82
  - Fast Leave, disabling with CLI 3-84
  - Fast Leave, enabling with CLI 3-84
  - illustrated 3-83
- Cisco Discovery Protocol. See CDP
- Cisco Group Management Protocol. See CGMP
- Cisco Systems access page 2-10
- Cisco Visual Switch Manager. See CVSM
- CiscoWorks 2-39
- CLI
  - accessing 1-6
  - error messages 2-35
  - upgrading
    - 1900 and 2820 member switches 4-30
    - 2900 and 3500 member switches 4-29
    - single switches 3-42
  - using 2-29

- Cluster Builder
  - adding and removing members 4-12
  - arranging and saving the device layout 4-16
  - automatic discovery of candidates 4-6
  - changing the host name 4-25
  - changing the polling interval 4-17
  - displaying port connection information 4-25
  - illustrated 4-13
  - saving configuration changes 4-20
  - Suggested Candidate window 4-6
  - using 2-18
- Cluster Management
  - described 2-1, 4-1
  - using 2-16
- Cluster Manager
  - administrative information 4-25
  - changing the host name 4-25
  - changing the polling interval 4-20
  - configuring ports 4-21
  - configuring SNMP 4-31
  - displaying 2-20, 2-23
  - displaying VLAN membership 4-26
  - monitoring port status 4-20
  - saving configuration changes 4-20
  - upgrading groups of switches 4-27
  - using 2-25
- Cluster View
  - arranging and saving the device layout 4-16
  - displaying 4-14
  - saving configuration changes 4-20
  - using 2-22
- clusters
  - community string changes 4-9
  - creating 2-18, 4-11
  - described 4-1
  - disqualification code 4-14
  - host name changes 4-8
  - management VLAN
    - changing on candidates 4-5
    - changing on existing clusters 4-4
    - guidelines before changing 3-55

- requirements 3-54
- managing 2-41, 4-1, 4-18
- members
  - adding and removing with Cluster Builder 4-12
  - managing with CLI 2-33
  - removing with CLI 4-15
- naming 3-16
- password changes 4-10
- command modes 2-30
- command switch 4-1
  - and management 1-6
  - and managing with SNMP 2-41
- configuration conflicts 5-12
- defined 1-3
- enabling 3-16, 4-11
- recovering
  - from a failure 5-7
  - from lost member connectivity 5-12
- replacing
  - with another switch 5-10
  - with cluster member 5-7
- command-line error messages 2-35
- commands
  - ? 2-34
  - abbreviating 2-35
  - copy running-config startup-config 2-38
  - list of available 2-31
  - no 2-35
  - rcommand 2-33
  - resetting to defaults 2-35
  - show cluster 2-33
- community strings
  - changes to 4-9
  - configuring 4-31
  - entering 3-61
  - SNMP 2-41, 4-9
- configuration
  - conflicts, managing 3-7, 5-12
  - guidelines, port 3-22
  - multiple port 4-24
  - saving changes through Cluster Management 4-20
  - saving cluster 2-17, 4-20
  - saving to Flash memory 2-38
  - single port 4-22
  - SNMP, illustrated 3-60
  - startup, saving changes to 3-8
- configuration file, saving 3-39
- configuring
  - broadcast messages 3-48
  - CDP 3-79, 3-81
  - community strings 3-61, 4-31
  - devices with Cluster Manager 2-25
  - flooding controls 3-31
  - hello time 3-94
  - Internet Explorer 2-4, 2-6
  - IP information 3-49
  - logging 3-106
  - management VLAN
    - through console connection 3-55
    - through Telnet 3-56
  - member switches 2-33
  - Netscape Communicator 2-4
  - NTP 3-46
  - port parameters 3-22
  - ports
    - through Cluster Manager 4-21
    - through CVSM 3-17, 3-19
    - through visual stack 3-13
  - ports (Mode button) 2-11
  - preferences in Cluster Management 2-18
  - SNMP 3-59, 4-31
  - static addresses (EtherChannel) 3-73
  - STP 3-87
  - switch 3-16
  - Telnet 2-36
  - traps 3-61, 4-35
- conflicts
  - configuration 3-7, 5-12
  - during upgrade 3-42
- connecting to devices without autonegotiation 3-22

- connection information
  - Cluster Builder information 4-25
  - displaying 2-13
  - switch network view information 3-11
- conventions
  - command xii
  - Note and Caution xiv
  - text xii
- copy running-config startup-config command 2-38
- creating
  - clusters 4-5, 4-11
  - VLANs 3-100
- Current Multicast Groups table 3-86
- CVSM
  - accessing 2-8
  - accessing the home page 3-14
  - buttons 2-8
  - conflicts while upgrading 3-42
  - home page, illustrated 3-15
  - menu options 2-11, 2-12
  - monitoring port settings 3-16
  - using 2-8

## D

- date, setting 3-44
- daylight saving time 3-46
- defaults, resetting to 2-35
- deployment examples 1-7
- destination-based forwarding 3-27
- destination-based port groups 3-25, 3-73
- device arrangement 4-37
- device layout, arranging and saving 4-16
- device reports
  - displaying 2-16, 4-42
  - illustrated
    - configuration information 4-43
    - port information 4-45
    - system information 4-44

- disabling
  - broadcast storm control 3-36
  - CDP 3-79
  - CGMP Fast Leave 3-84
  - network port 3-34
  - port security 3-78
  - SNMP 3-60, 4-31
  - STP 3-88
  - Switch Port Analyzer 3-30
- disqualification code for clusters 4-14
- documentation, related xiii
- domain name
  - described 3-57
  - specifying 3-58
- Domain Name System (DNS) server 3-57, 3-58
- duplex
  - configuration guidelines 3-22
  - displaying with stack view 3-13
  - setting
    - with CLI 3-23
    - with Cluster Manager 4-21
    - with CVSM 3-19
- dynamic addresses
  - accelerated aging 3-88
  - changing the aging time 3-69
  - removing 3-70

## E

- enable password 2-32
- enable secret password 2-32
- enabling
  - broadcast storm control 3-34, 3-35
  - CGMP Fast Leave 3-84
  - command switch 4-6, 4-11
  - flow control 3-21
  - network port 3-33
  - NTP authentication 3-48
  - port security 3-76, 3-78

- ports 3-19
- SNMP 3-60, 4-31
- STP Port Fast 3-97
- Switch Port Analyzer (SPAN) 3-28
- traps 4-35
- Enterprise Edition Software
  - features 1-3
  - upgrading to 1-1
- enterprise workgroup aggregation 1-7
- error messages 2-35
- errors, graphing 4-38, 4-42
- EtherChannel port groups
  - configuring static address for 3-73
  - creating 3-25
- Ethernet statistics, RMON 3-109
- events, RMON 3-109
- examples, deployment 1-7

## F

- failures, command switch 5-7
- Fast EtherChannel port groups, creating 3-25
- Fast Leave
  - defined 3-82
  - disabling 3-84
  - enabling 3-84
- features
  - Cluster Management interface 2-17
  - conflicts between 2-29
  - default settings 3-2
  - Enterprise Edition Software 1-3
  - graphing 2-41
  - IOS 1-2, 3-1
  - management interface 2-1
  - port, conflicting 3-7
- filenames, Flash memory 3-39
- files, Flash memory 2-37
- firmware, upgrading 3-39

- Flash memory
  - saving configuration 2-38
  - specifying filenames 3-39
  - working with files in 2-37
- flooded traffic, reducing 3-36
- flooding controls
  - configuring 3-31
  - illustrated 3-32
- flow control
  - configuring with CLI 3-24
  - configuring with CVSM 3-21
- forwarding
  - controlling (SNMP) 2-41
  - restrictions 3-27
  - resuming 3-37
  - source-based, illustrated 3-26
- forwarding delay
  - changing 3-95
  - defined 3-90
- forwarding map, static address 3-72, 3-73
- forwarding port groups 3-25
- FTP, accessing MIB files 2-39

## G

- get-next-request operation 2-40
- get-request operation 2-40
- get-response operation 2-40
- Gigabit Ethernet
  - connecting to 3-22
  - port settings 3-22
- global configuration mode 2-31
- graphs
  - bandwidth 2-26
  - link utilization 4-37
  - percent utilization 4-40
  - prerequisites for 2-41
  - total bytes sent and received on link 4-40
  - total errors on link 4-42

total number of packets sent on link 4-41

## H

### hardware

PC requirements 2-2  
supported switches 1-3

### hello time

changing 3-94  
configuring 3-94  
defined 3-90

help command 2-34

history statistics, RMON 3-109

hold-time, modifying 3-85

### home page

CVSM, displayed 3-15  
switch 3-14

### host name

changes to 4-8  
changing 4-25  
entering 2-26  
to address mappings 3-57

HTML interfaces 1-5

HTTP 2-2

## I

interface configuration mode 2-31

interface features, Cluster Management buttons 2-17

### interfaces

IOS supported 1-5  
web-based 1-5

Internet Explorer, configuring 2-4, 2-6

### IOS

command-line interface, accessing 1-6  
deployment examples 1-7  
features 1-2  
hardware supported 1-4

interfaces supported 1-5

switching features, changing 3-1

### IP addresses

discovering 3-64  
member switches 2-1  
removing 3-53

### IP information

assigning 3-52  
configuring 3-49  
management VLAN 3-55, 3-56  
removing 3-53

IP management packets, controlling 3-82

IP Management, illustrated 3-50

IP setup program 5-8, 5-10

## L

### LEDs

changing mode 2-11, 2-25  
Cluster Manager 4-20  
monitoring 3-16, 3-17  
visual stack colors 3-12

line configuration mode 2-31

### link

errors, graphing 4-42  
graph, illustrated 4-39  
utilization graphs 4-37

link reports, displaying in Network View 2-13

### live images

displaying in Cluster Manager 2-25  
displaying in visual stack 2-14

location, entering 2-26, 4-25

logging 3-106

## M

### MAC address

adding secure 3-70

- aging time 3-69
- discovering 3-64, 3-67
- tables, managing 3-66
- management interface features 2-1
- management VLAN
  - changing on candidate switches 4-5
  - changing on existing clusters 4-4
  - characteristics 3-54
  - cluster requirements 3-54
  - configuring
    - through console 3-55
    - through Telnet 3-56
  - guidelines before changing 3-55
- map, static address forwarding 3-72
- member switches
  - defined 1-3, 4-1
  - IP addresses 2-1
  - recovering from lost connectivity 5-12
- messages 2-35
- MIB files, accessing with FTP 2-39
- MIB objects, accessing 2-38
- MIB variables, accessing 2-39
- Microsoft Internet Explorer. See Internet Explorer
- mismatches, autonegotiation 5-1, 5-2
- Mode button, configuring ports with 2-11
- modes, accessing command 2-30
- monitoring
  - devices with Cluster Manager 2-25
  - LEDs 3-16, 3-17
  - port status 3-12, 4-20
  - ports 3-16, 3-28
  - traffic 3-28
- multicast groups
  - described 3-82
  - removing 3-86
- multicast packets. See flooding controls
- multi-VLAN ports
  - assigning to VLANs 3-104
  - described 3-102, 3-103

## N

- Network Management System (NMS) 2-39
- network ports
  - disabling 3-34
  - enabling 3-33
- Network Time Protocol. See NTP
- Network View
  - buttons 2-14
  - described 2-1
  - displaying 3-9
  - managing switches with 3-8
  - page 3-10
  - stack 3-8
  - using 2-13
- NMS 2-39
- Note described xiv
- NTP
  - authentication 3-48
  - broadcast-client mode 3-48
  - client 3-47
  - described 3-46
  - illustrated 3-47

## O

- operating systems, supported 2-3
- order, switch 4-37

## P

- packets
  - See also traffic
  - controlling management (CGMP) 3-82
  - graphing 4-38, 4-41
- passwords
  - candidate switch 4-7

- changes to 4-10
- changing 3-14
- community strings 3-61
- configuring for Telnet 2-36
- recovery 5-4
- setting 2-32
- path cost 3-96
- PC requirements 2-2
- polling interval
  - graphing 4-17
  - port status monitoring 4-20
  - setting 2-18
- Port Configuration page 3-20
- Port Fast
  - enabling 3-97
  - setting 3-19
- port groups
  - configuring static addresses (EtherChannel) 3-73
  - creating EtherChannel 3-25, 3-27
  - destination based 3-73
  - illustrated 3-26
  - restrictions on forwarding 3-27
  - source-based 3-73
- port security 3-78
- port settings, displaying 2-14
- port status, monitoring 4-20
- ports
  - assigning multi-VLAN 3-104
  - assigning to VLANs 3-102
  - configuration
    - multiple 4-24
    - single 4-22
  - configuration guidelines 3-22
  - configuring 3-17
    - through Cluster Manager 4-21
    - through CVSM 3-19
    - through visual stack 3-13
  - configuring (Mode button) 2-11, 4-20
  - connection information, displaying 3-11
  - duplex
    - checking 3-21
    - setting 3-13, 3-21
  - features, conflicting 3-7
  - flooded traffic 3-37
  - mismatches 5-2
  - monitoring 3-16, 4-20
  - parameters, configuring 3-22
  - resume normal forwarding 3-37
  - secure 3-77
  - secured 3-76
  - security
    - described 3-76
    - disabling 3-78
    - enabling 3-78
    - illustrated 3-77
  - settings
    - correcting 5-3
    - displaying 3-20, 4-23
  - speed
    - checking through Cluster Manager 4-22
    - checking through CVSM 3-21
    - checking through visual stack 3-13
    - setting through Cluster Manager 4-22
    - setting through CVSM 3-21
    - setting through visual stack 3-19
  - status, monitoring 3-12, 4-20
  - STP parameters, changing 3-95
- portsconnection information, displaying 4-25
- priority 3-96
- privilege levels
  - mapping on member switches 4-10
  - setting 2-32
- privileged EXEC mode 2-30
- publications, related xiii

## R

- rcommand 2-33
- recovery procedures 5-3
- redundancy 3-88

- reload options, system 3-40
- remote devices, connecting to 3-22
- remote monitoring 3-109
- reports
  - device 2-13, 4-42
  - link 2-13, 2-16
- RMON 3-109
- router hold-time, modifying 3-85

## S

- saving
  - cluster configuration 2-17, 4-20
  - configuration file 3-39
  - layout of switch icons 2-20, 2-23
  - startup configuration changes 3-8
- secure address count, defining 3-77
- secure addresses
  - adding 3-70, 3-71
  - removing 3-71
- secure ports 3-76
  - address-security violations 3-76
  - disabling 3-78
  - enabling 3-78
  - maximum secure address count 3-77
- security
  - levels, defining 3-107
  - port 3-76, 3-77
  - violations, address 3-76
- set-request operation 2-40
- setting
  - date and time 3-44
  - passwords 2-32
  - privilege levels 2-32
  - time 3-46
- settings
  - configuring duplex 3-22
  - correcting port 5-3
  - port, displaying 2-14, 2-25

- setup program 5-8, 5-10
- small-to-medium business workgroup aggregation 1-9
- SNMP
  - accessing MIB variables with 2-39
  - changes to community strings 4-9
  - configuration, illustrated 3-60
  - configuring community strings
    - member switches 4-31
    - single switch 3-61
  - configuring on
    - cluster members 4-31
    - single switch 3-59
  - configuring traps
    - member switches 4-35
    - single switch 3-61
  - defined 2-39
  - enabling and disabling 3-60, 4-31
  - management 2-38
  - managing clusters with 2-41
  - network management platforms 1-6
  - trap types
    - in Cluster Manager 4-35, 4-36
    - in CVSM 3-62
- SNMP Manager, illustrated 4-33
- software
  - recovery procedures 5-3
  - upgrading
    - a single switch 3-39
    - groups of switches 4-27
    - with CLI 3-42
    - with CVSM 3-41
- source-based forwarding 3-27
- source-based port groups 3-25, 3-73
- SPAN
  - described 3-28
  - disabling with CLI 3-30
  - enabling with CLI 3-30
- Spanning-Tree Protocol. See STP
- speed
  - checking port 3-13, 4-20
  - setting 3-23, 4-22

- startup configuration, saving 3-8
- static address
  - forwarding map 3-72, 3-73
  - forwarding restrictions 3-27
- static addresses
  - adding 3-74
  - configuring for EtherChannel port groups 3-73
  - described 3-72
  - removing 3-75
- static-access ports
  - assigning to VLANs 3-103
  - described 3-102
- statistics, RMON 3-109
- status, monitoring port
  - with Cluster Manager 4-20
  - with CVSM 3-16
  - with stack view 3-12
- STP
  - BPDU message interval 3-93
  - described 3-87
  - disabling 3-88
  - enabling Port Fast feature 3-97
  - forwarding delay timer 3-95
  - hello BPDU interval 3-94
  - illustrated 3-91, 3-97
  - implementation type 3-92
  - number of supported instances 3-101
  - path cost 3-98
  - port parameters, changing 3-95
  - port priority 3-99
  - redundant connectivity 3-88
  - switch priority 3-92
  - unpredictable behavior 3-104
  - VLAN parameters described 3-89
- STP Port Fast 3-97
- Suggested Candidate window 4-6
- switch home page 3-14
- Switch Network View. See Network View
- switch order 4-37
- Switch Port Analyzer (SPAN)
  - disabling 3-30

- enabling 3-28
- illustrated 3-29
- syslog messages 3-107
- system
  - configuration 3-40
  - date and time, setting 3-44
  - reload options, entering 3-40
  - up time, displaying 2-26

## T

- Telnet
  - configuring 2-36
  - connections to cluster members 2-33
  - starting 2-37
- time
  - daylight saving 3-46
  - setting 3-44
- time zones 3-45
- traffic
  - blocking flooded 3-36, 3-37
  - monitoring 3-28
  - reducing flooded 3-31, 3-33
- trap managers, adding 3-61, 3-63
- trap operation 2-40
- traps, enabling 4-35
- troubleshooting
  - IOS 5-1
  - with CiscoWorks 2-39

## U

- unicast packets. See flooding controls
- UNIX workstation requirements 2-2
- upgrading
  - 1900 and 2820 member switches 4-30
  - 2900 and 3500 member switches 4-29
  - conflicts while 3-42

- groups of switches 4-27
- software with CLI 3-42
- software with CVSM 3-41
- to Enterprise Edition Software 1-1
- user EXEC mode 2-30
- user settings 2-18, 4-17
- utilization graphs 4-37

- web-based management, using 2-2

## X

- XMODEM protocol 5-3

## V

- visual stack

- accessing CVSM 3-13
- described 3-8
- displaying 3-11

- VLAN database mode 2-31

- VLAN ID, discovering 3-64, 3-67

- VLANs

- See also management VLAN

- aging dynamic addresses 3-88
- changing STP parameters 3-89
- creating and maintaining 3-100
- described 3-101

- membership

- ATM port 3-102
- displaying 2-26, 4-26
- illustrated 3-100

- multi-VLAN ports

- assigning 3-104
- defined 3-102

- number supported 3-101

- overlapping 3-103

- static-access ports

- assigning 3-103
- defined 3-102

## W

- web-based management tools 2-1

