

- A**
- accessing
 - command modes 2-24
 - CVSM 3-11
 - MIB files 2-32, 2-33
 - MIB objects 2-32
 - MIB variables 2-34
 - address aging time 3-51
 - address count, secure 3-57
 - address management illustrated 3-50
 - address security violations 3-56
 - address table
 - adding secure addresses 3-52
 - adding static addresses 3-54
 - defining secured port 3-56
 - MAC 3-49
 - addresses
 - adding secure 3-51
 - dynamic, default aging 3-66
 - secure, adding with CLI 3-52
 - static
 - adding and removing 3-52
 - adding with CLI 3-54
 - configuring (EtherChannel) 3-54
 - aggregation, wiring closet 1-5
 - aging time
 - changing address 3-51
 - defining 3-51
 - aging, accelerating 3-66
 - ARP table
 - illustrated 3-48
 - managing 3-47
 - ATM ports
 - settings for 3-19
 - VLAN membership 3-75
 - authentication, enabling NTP 3-38
 - autonegotiation
 - connecting to devices without 3-19
 - mismatches 5-1, 5-2
- B**
- bandwidth, graphing 2-21
 - broadcast messages, configuring for 3-39
 - broadcast storm control, enabling 3-29
 - browsers
 - requirements 2-3
 - bytes, graphing 4-23, 4-24
- C**
- candidates
 - adding 4-3
 - automatically discovering 4-4
 - requirements 4-3
 - Caution described xii
 - CCO, accessing MIB files 2-33
 - CDP
 - configuring 3-59, 3-60
 - illustrated 3-61
 - MIB 2-32
 - CGMP
 - controlling management packets with 3-62
 - illustrated 3-64
 - MIB 2-32
 - Cisco Discovery Protocol. See CDP
 - Cisco Group Management Protocol. See CGMP
 - Cisco Visual Switch Manager. See CVSM
 - CiscoWorks 2-34
 - CLI
 - accessing 1-4
 - adding secure addresses with 3-52
 - adding static address with 3-54
 - assigning IP with 3-42, 3-46

- assigning multi-VLAN ports to VLAN with 3-77
- assigning static-access ports to VLAN with 3-74
- blocking flooded traffic with 3-30
- changing router hold time with 3-63
- configuring CDP with 3-60
- creating a cluster with 4-6
- creating EtherChannel port groups with 3-24
- defining aging time with 3-51
- enabling a network port with 3-28
- enabling broadcast storm control with 3-29
- enabling Fast Leave option 3-63
- enabling port security with 3-58
- enabling STP Port Fast with 3-72
- error messages 2-29
- managing cluster members with 2-26
- removing a cluster member with 4-9
- removing multicast groups with 3-65
- setting speed and duplex with 3-20
- upgrading member switches with 4-18
- upgrading with 3-34
- using 2-23
- Cluster Builder
 - illustrated 4-8
 - using 2-15
- Cluster Management
 - described 2-1
 - displaying reports 4-26
- Cluster Manager
 - displaying 2-17
 - using 2-21
- Cluster View
 - displaying 4-10
 - using 2-19
- clusters
 - creating 2-15, 4-6
 - managing 2-35, 4-1, 4-11
 - members
 - adding and removing 4-7
 - managing with CLI 2-26
 - removing 4-9
 - members, adding and removing 4-9
- command modes 2-24
- command switch 4-1
 - and management 1-4
 - and managing with SNMP 2-35
 - defined 1-2
 - enabling 3-12
- command-line error messages 2-29
- commands
 - ? 2-27
 - abbreviating 2-28
 - copy running-config startup-config 2-31
 - list of available 2-25
 - no 2-28
 - rcommand 2-26
 - resetting to defaults 2-28
 - show cluster 2-26
- community strings
 - configuring 4-19
 - entering 3-45
 - SNMP 2-35, 4-6
- configuration
 - conflicts, managing 3-5
 - multiple port 4-15
 - parameters, port 3-18
 - saving cluster 4-4
 - saving Flash memory 2-31
 - single port 4-14
 - SNMP illustrated 3-44
 - startup, saving changes to 3-6
- configuration file, saving 3-31
- configuring
 - broadcast messages 3-39
 - CDP 3-59, 3-60
 - community strings 4-19
 - devices with Cluster Manager 2-21
 - flooding controls 3-26
 - Internet Explorer 2-4, 2-5
 - IP information 3-40
 - logging 3-78
 - member switches 2-26
 - Netscape Communicator 2-3

- NTP 3-38
- port parameters 3-19
- ports 3-11, 3-14, 3-16, 4-13
- SNMP 3-43, 4-19
- static addresses (EtherChannel) 3-54
- STP 3-65
- switch 3-13
- Telnet 2-30
- conflicts
 - configuration 3-5
 - during upgrade 3-34
- connecting to devices without autonegotiation 3-19
- connection information 3-9
 - displaying 3-7
- connectivity, workgroup 1-6
- conventions
 - command x
 - Note and Caution xii
 - text x
- copy running-config startup-config command 2-31
- creating
 - clusters 4-2, 4-6
 - VLANs 3-73
- Current Multicast Groups table 3-64
- CVSM
 - accessing 3-11
 - conflicts while upgrading 3-34
 - home page 3-12, 3-13
 - displayed 3-14
 - displaying 2-20, 2-21

D

- date, setting 3-36
- daylight saving time 3-38
- defaults
 - resetting to 2-28
- deployment examples 1-5
- destination-based forwarding 3-23

- destination-based port groups 3-21, 3-54
- device arrangement 4-22
- device reports
 - displaying 2-21, 4-28
 - illustrated 4-28, 4-29, 4-30
- documentation, related xi
- duplex settings 3-10, 3-16, 3-19, 3-20
- dynamic addresses 3-51, 3-66

E

- enable password 2-26
- enable secret password 2-26
- enabling
 - broadcast storm control 3-29
 - Fast Leave 3-62
 - flow control 3-18
 - network port 3-28
 - NTP authentication 3-38
 - Port Fast option 3-71
 - port security 3-56, 3-58
 - ports 3-16
 - SNMP 3-43
 - STP Port Fast 3-72
 - Switch Port Analyzer (SPAN) 3-24
 - traps 4-21
- Enterprise Edition Software
 - features 1-2
 - switches supported 1-2
 - upgrading to 1-1
- error messages, understanding 2-29
- errors, graphing 4-23, 4-26
- EtherChannel port groups
 - configuring static address for 3-54
 - creating 3-21
- examples, deployment 1-5

F

- Fast EtherChannel port groups, creating 3-21
- Fast Leave, enabling 3-62, 3-63
- features
 - conflicts between 2-23
 - Enterprise Edition Software 1-2
 - graphing 2-35
 - IOS 1-1, 3-1
 - management interface 2-1
 - port, conflicting 3-5
- filenames, Flash memory 3-31
- files, Flash memory 2-31
- firmware, upgrading 3-31
- Flash memory
 - saving configuration 2-31
 - specifying filenames 3-31
 - working with files in 2-31
- flooded traffic, reducing 3-30
- flooding controls
 - configuring 3-26
 - illustrated 3-27
- flooding, reducing 3-63
- flow control, enabling and disabling 3-18
- forwarding
 - controlling (SNMP) 2-35
 - restrictions 3-23
 - source-based, illustrated 3-22
- forwarding map, static address 3-52, 3-53
- forwarding port groups 3-21
- FTP, accessing MIB files 2-32, 2-33

G

- get-next-request operation 2-34, 2-35
- get-request operation 2-34, 2-35
- get-response operation 2-35
- Gigabit Ethernet devices, connecting to 3-19
- Gigabit Ethernet port settings 3-19

- global configuration mode 2-25
- graph, bandwidth 2-21
- graphing features, enabling 2-35
- graphs, link utilization 4-22

H

- hardware
 - supported 1-2
- help command 2-27
- hold time, modifying 3-63
- home page
 - CVSM, displayed 3-14
 - switch 3-12
- host name, entering 2-21
- HTTP 2-2

I

- incompatible features 3-5
- Index 1
- interface configuration mode 2-25
- interfaces
 - IOS supported 1-4
 - web-based 1-4
- Internet Explorer
 - configuring 2-4, 2-5
- IOS
 - command-line interface, accessing 1-4
 - deployment examples 1-5
 - features 1-1
 - hardware supported 1-3
 - interfaces supported 1-4
 - switching features, changing 3-1
- IP address, discovering 3-47
- IP information
 - assigning 3-42, 3-46
 - configuring 3-40

- IP management packets, controlling 3-62
- IP Management, illustrated 3-41
- IP setup program 5-8, 5-10

L

LEDs

- changing mode 2-21
- Cluster Manager 4-13
- monitoring 3-13
- visual stack colors 3-10

line configuration mode 2-25

link

- errors, graphing 4-26
- graph, illustrated 4-23
- utilization graphs 4-22

link report

- displaying 4-26
- illustrated 4-27

location, entering 2-21

logging 3-78

M

MAC address

- adding secure 3-51
- aging time 3-51
- discovering 3-47, 3-49
- tables, managing 3-49

management interface features 2-1

map

- static address forwarding 3-52, 3-53

member switches

- defined 1-2, 4-1
- IP addresses 2-1

messages 2-29

MIB files

- accessing with CCO 2-33

- accessing with FTP 2-32, 2-33
- specific trap information 2-32

MIB objects, accessing 2-32, 2-33

MIB variables, accessing 2-34

Microsoft Internet Explorer. See Internet Explorer

mismatches, autonegotiation 5-1, 5-2

modes, accessing command 2-24

monitoring

- devices with Cluster Manager 2-21
- LEDs 3-13
- port status 3-10, 4-13
- ports 3-13, 3-24
- switch 3-13
- traffic 3-24

multicast groups

- listing and removing 3-62
- removing 3-64

multicast packets. See flooding controls

multi-VLAN ports 3-74

- assigning to VLANs 3-77

N

Network Management System (NMS) 2-34

network port, enabling 3-28

Network Time Protocol (NTP) 3-38

Network View

- described 2-1
- displaying 3-7
- managing switches with 3-6
- page 3-8
- stack 3-6

NMS 2-34

Note described xii

NTP 3-38, 3-39

O

order, switch 4-21

P

packets

- controlling management (CGMP) 3-62
- graphing 4-23, 4-25

packets. See also traffic

passwords

- candidate switch 4-4
- changing 3-12
- community strings 3-45
- configuring for Telnet 2-30
- recovery 5-4
- setting 2-26

path cost 3-70

PC requirements 2-2

performance graph, displaying link 2-20

polling interval 4-10

Port Configuration page 3-17

Port Fast

- enabling 3-71
- setting 3-16

port groups

- configuring static addresses (EtherChannel) 3-54
- configuring static addresses for 3-54
- creating EtherChannel 3-21, 3-24
- destination based 3-54
- illustrated 3-23
- restrictions on forwarding 3-23
- source-based 3-54

port status, monitoring 4-13

ports

- assigning multi-VLAN 3-77
- assigning to VLANs 3-74
- configuration
 - multiple 4-15

- single 4-14

- configuration parameters 3-18

- configuring 3-14, 3-16, 4-13

- configuring switch 3-11

- features, conflicting 3-5

- flooded traffic 3-30

- mismatches 5-2

- monitoring 3-13

- parameters, configuring 3-19

- secure 3-57

- secured 3-56

- security

 - enabling 3-56

 - enabling with CLI 3-58

 - illustrated 3-57

- settings, correcting 5-3

- speed

 - checking 3-10

 - setting 3-16

- status, monitoring 3-10

- STP parameters, changing 3-70

priority 3-70

privileged EXEC mode 2-24

Protocol 3-38

publications, related xi

R

rcommand 2-26

recovery procedures 5-3

redundancy 3-66

reload options, system 3-32

remote devices, connecting to 3-19

reports

- displaying 4-26

- displaying device 2-21

router hold time

- modifying 3-63

router hold time, modifying 3-63

S

saving

- cluster configuration 4-4
- configuration file 3-31
- layout of switch icons 2-17
- startup configuration changes 3-6

secure address

- count, defining 3-57

secure addresses

- adding 3-51, 3-52

secure ports 3-56, 3-57

security

- levels, defining 3-80
- port 3-56, 3-57
- violations, address 3-56

set-request operation 2-34

setting

- date and time 3-36
- passwords 2-26
- time 3-38

settings

- configuring duplex 3-19
- correcting port 5-3
- displaying link 2-20

setup program 5-8, 5-10

SNMP

- accessing MIB variables with 2-34
- configuration, illustrated 3-44
- configuring 3-43, 4-19
- defined 2-34
- enabling and disabling 3-43
- management 2-32
- managing clusters with 2-35
- network management platforms 1-4

SNMP Manager, illustrated 4-20

software

- recovery procedures 5-3
- upgrading 3-31
- upgrading for groups of switches 4-16

upgrading switch 3-33

source-based forwarding 3-23

source-based port groups 3-21, 3-54

SPAN, enabling 3-24

Spanning-Tree Protocol. See STP

speed

checking port 3-10

setting 3-16, 3-20

startup configuration, saving 3-6

static access ports assigned to VLANs 3-74

static address forwarding map 3-52, 3-53

static address forwarding restrictions 3-23

static addresses

adding and removing 3-52, 3-54

configuring for EtherChannel port groups 3-54

status, monitoring port 3-10

STP

changing VLAN parameters 3-67

configuring 3-65

disabling 3-67

illustrated 3-69, 3-71

Port Fast option 3-71, 3-72

port parameters, changing 3-70

unpredictable behavior 3-76

switch home page 3-12

Switch Network View. See Network View

switch order 4-21

Switch Port Analyzer (SPAN)

enabling 3-24

illustrated 3-25

syslog messages 3-80

system configuration 3-32

system date and time, setting 3-36

system reload options, entering 3-32

system-up time, entering 2-21

T

Telnet

- configuring 2-30
- starting 2-30

time

- daylight saving 3-38
- setting 3-36

time zones 3-37

traffic

- blocking flooded 3-30
- monitoring 3-24
- reducing flooded 3-26, 3-28

trap information location 2-32

trap managers, adding 3-45

trap operation 2-35

traps, enabling 4-21

troubleshooting

- IOS 5-1
- with CiscoWorks 2-34

U

unicast packets. See flooding controls

UNIX workstation requirements 2-2

upgrading

- conflicts while 3-34
- groups of switches 4-16
- member switches 4-18
- software with CLI 3-34
- switch software 3-31, 3-33
- to Enterprise Edition Software 1-1

user EXEC mode 2-24

user settings, changing 4-10

utilization

- graphing 4-24

utilization graphs 4-22

V

visual stack

- described 3-6
- displaying 3-9

VLAN database mode 2-25

VLAN ID, discovering 3-47, 3-49

VLANs

- aging dynamic addresses 3-66
- assigning ports to 3-74, 3-77
- assigning static-access ports to 3-74
- changing STP parameters 3-67
- creating and maintaining 3-73
- members, displaying 2-21
- membership
 - ATM port 3-75
 - displaying 4-15
 - illustrated 3-75
 - MIB 2-32
- overlapping 3-76

W

web-based management features, using 2-2

web-based management interfaces, preparing to use 2-2

web-based management tools 2-1

wiring closet aggregation 1-5

workgroup connectivity 1-6