



Numerics

10/100/1000 ports

- cable lengths [3-3](#)
- connecting to [3-14 to 3-15](#)
- connectors and cables [B-3](#)
- described [2-3 to 2-4](#)

10/100 ports

- cable lengths [3-3](#)
- connecting to [3-14 to 3-15](#)
- connectors and cables [B-1 to B-2](#)
- described [2-3](#)
- illustrated [2-2](#)

100BASE-FX ports

- cable lengths [3-3](#)
- connecting to [3-15 to 3-16](#)
- connectors and cables [B-4](#)
- described [2-4](#)
- power levels, fiber-optic [A-2](#)

A

AC power

- connector [2-9](#)
- specifications [A-1](#)

adapter pinouts, terminal

- RJ-45-to-DB-25 [B-9](#)
- RJ-45-to-DB-9 [B-8](#)

adapters

- RJ-45-to-DB-9 [B-8](#)

addresses, assigning IP [3-17](#)

agency approvals [A-2](#)

altitude [A-1](#)

autonegotiation

- 10/100/1000 ports [2-4](#)
- 10/100 ports [2-3](#)

C

cable guard [2-6](#)

cables

- 10/100/1000 ports [2-3 to 2-4](#)
- 10/100 ports [2-3](#)

crossover

- connecting to [B-2, B-3](#)
- four twisted-pair pinout, 10/100 ports [B-6](#)
- four twisted-pair pinout, 1000BASE-T ports [B-7](#)
- two twisted-pair pinout [B-5](#)

MT-RJ [2-4](#)

problems, solving [4-4](#)

rollover [B-9](#)

straight-through

- connecting to [B-2, B-3](#)
- four twisted-pair pinout, 10/100 ports [B-6](#)
- four twisted-pair pinout, 1000BASE-T ports [B-7](#)
- two twisted-pair pinout [B-5](#)

twisted-pair

- 10/100/1000 ports [2-3 to 2-4](#)
- 10/100 ports [2-3](#)

See also connectors and cables

cautions, defined [vii](#)

chassis warnings

- against stacking [3-2](#)

CiscoView [2-11](#)

Class 1 laser product warning [3-2](#)

clearance [3-3](#)

CLI [2-11](#)

- accessing by using Express Setup [D-1](#)

- accessing through console port [D-2](#)

command-line interface

- See CLI

- configuration examples, network [2-1](#)

- configuring ports [3-17](#)

connecting

- to 10/100/1000 ports [3-14 to 3-15](#)

- to 10/100 ports [3-14 to 3-15](#)

- to 100BASE-FX ports [3-15 to 3-16](#)

- to SFP modules [3-12 to 3-13, 3-16 to 3-17](#)

- connecting to the console port [D-3](#)

- connectivity problems, solving [4-2](#)

connectors and cables

- 10/100/1000 ports [B-3](#)

- 10/100 ports [B-1 to B-2](#)

- 100BASE-FX ports [B-4](#)

- AC power [2-9](#)

- console port [B-5](#)

- See also cables

console port

- adapter pinouts

- RJ-45-to-DB-25 terminal [B-9](#)

- cable, rollover [B-9](#)

- connecting to [B-8 to B-9, D-3](#)

- illustrated [2-9](#)

- RJ-45-to-DB-9 adapter cable pinouts [B-8](#)

crossover cable

- connecting to

- 10/100/1000 ports [3-14](#)

- 10/100 ports [3-14](#)

- connectivity problems [4-2](#)

pinout

- four twisted-pair, 10/100 ports [B-6](#)

- four twisted-pair, 100BASE-T ports [B-7](#)

- two twisted-pair [B-5](#)

D

- Device Manager [xiii](#)

- description [2-11](#)

- to configure switch [3-17](#)

- viewing LEDs [2-7](#)

- dimensions [A-1](#)

documentation

- ordering [xiv](#)

- related publications [xiii](#)

- URLs, Cisco [xiv](#)

- duplex LED [2-8](#)

E

- electrical noise, avoiding [3-3](#)

- electromagnetic interface (EMI) [A-2](#)

EMC

- agency approvals [A-2](#)

- environmental ranges [A-1](#)

- examples, network configuration [2-1](#)

Express Setup

- accessing CLI by using [D-1](#)

F

- features [2-1 to 2-2](#)

- feedback to Cisco Systems, web [xv](#)

- fiber-optic port specifications [A-2](#)

front panel

- 10/100/1000 ports [2-3 to 2-4](#)

- 10/100 ports [2-3](#)

- 100BASE-FX ports [2-4](#)

- clearance [3-3](#)

- described [2-2](#)

- illustrated [2-2](#)

G

- ground connection warning [3-2](#)
- grounded equipment warning [3-2](#)

H

- HP OpenView [2-11](#)
- humidity [A-1](#)

I
installation

- connecting to a power source [D-3](#)
- guidelines [3-3](#)
- magnet mount [3-12](#)
- mounting on a desk (with mounting screws) [3-5 to 3-7](#)
- mounting on a desk (without mounting screws) [3-5](#)
- mounting on a wall [3-9 to 3-11](#)
- mounting under a desk [3-7 to 3-9](#)
- package contents [3-3 to 3-4](#)
- pre-installation information and guidelines [3-1](#)
- starting the terminal-emulation software [D-4](#)
- table or shelf [3-5, 3-9](#)

IOS command-line interface

See CLI

IP address

configuring through CLI [D-6](#)

IP address procedures [3-17](#)

J

- jewelry removal warning [3-2](#)

L

- laser beam exposure warning [3-2](#)
- laser radiation warning [3-2](#)

LEDs

- color meanings [2-8](#)
- duplex (DPLX) [2-8](#)
- full-duplex [2-8](#)
- half-duplex [2-8](#)
- interpreting [2-7 to 2-8](#)
- port mode [2-7 to 2-8](#)
- speed (SPD) [2-7, 2-8](#)
- status (STAT) [2-7, 2-8](#)
- system (SYST) [2-7](#)
- lightning activity warning [3-2](#)

M

- main disconnecting device warning [3-2](#)
- management options [2-11](#)
- Methods for accessing the switch [D-1](#)
- Mode button [2-7](#)
- MT-RJ
 - connector [B-4](#)
 - patch cables [2-4](#)

N
Network Assistant

- getting started guide [xiii](#)
- to configure switch [3-17](#)
- viewing LEDs [2-7](#)
- network configuration examples [2-1](#)
- Network Manager
 - described [2-11](#)
- noise, electrical [3-3](#)
- notes, defined [vii](#)

O

- obtaining documentation [xiv to xv](#)
- overtemperature warning [3-2](#)

P

package contents [3-3 to 3-4](#)

patch cables, MT-RJ [2-4](#)

PC, connecting to switch [B-8](#)

performance problems, solving [4-4](#)

physical dimensions [A-1](#)

pinouts

- 10/100/1000 ports [B-3](#)
- 10/100 ports [B-2](#)

adapters

- DB-25 [B-9](#)

console port

- DB-25 adapter [B-9](#)
- RJ-45-to-DB-9 adapter cable [B-8](#)

crossover cables

- four twisted-pair, 10/100 ports [B-6](#)
- four twisted-pair, 1000BASE-T ports [B-7](#)
- two twisted-pair [B-5](#)

RJ-45-to-DB-25 terminal adapter [B-9](#)

RJ-45-to-DB-9 adapter cable [B-8](#)

RJ-45-to-DB-9 PC adapter cable [B-8](#)

straight-through cables

- four twisted-pair, 10/100 ports [B-6](#)
- four twisted-pair, 1000BASE-T ports [B-7](#)
- two twisted-pair [B-5](#)

port mode LEDs [2-7 to 2-8](#)

port numbering [2-3](#)

ports

- See 10/100 ports, 10/100/1000 ports, 100BASE-FX ports, and console ports

POST

- problems, solving [4-5](#)
- verifying switch operation [3-4](#)

power

- requirements [A-1](#)

power connector [2-9](#)

procedures

- IP address [3-17](#)

product disposal warning [3-2](#)

publications, related [xiii](#)

R

rear panel

- clearance [3-3](#)

- console port connector [2-10](#)

- described [2-9](#)

- illustrated [2-9](#)

- power connector [2-9](#)

related publications [xiii](#)

rollover cable [B-9](#)

S

safety agency approvals [A-2](#)

safety warnings [3-1 to 3-2](#)

security slot [2-10](#)

SFP modules

- cabling recommendations [2-5](#)

- connecting to [3-12 to 3-13, 3-16 to 3-17](#)

- described [2-5](#)

SFP module slot

- numbering [2-3](#)

slot numbering [2-3](#)

SNMP network management platforms [2-11](#)

software switch management [2-11](#)

specifications [A-1 to A-2](#)

speed LED [2-7, 2-8](#)

stacking the chassis warning [3-2](#)

status LED [2-7, 2-8](#)

straight-through cable

- connecting to

- 10/100/1000 ports [3-14](#)

- 10/100 ports [3-14](#)

- connectivity problems [4-2](#)
- pinout
 - four twisted-pair, 10/100 ports [B-6](#)
 - four twisted-pair, 1000BASE-T ports [B-7](#)
 - two twisted-pair [B-5](#)
- SunNet Manager [2-11](#)
- switch
 - front panel [2-2](#)
- system LED [2-7](#)
- jewelry removal [3-2](#)
- laser beam exposure [3-2](#)
- laser radiation [3-2](#)
- lightning activity [3-2](#)
- main disconnecting device [3-2](#)
- overtemperature [3-2](#)
- product disposal [3-2](#)
- stacking the chassis [3-2](#)

T

- technical assistance [xv to xvi](#)
- technical specifications [A-1 to A-2](#)
- Telnet, and accessing the CLI [2-11](#)
- temperature
 - operating [A-1](#)
 - warning [3-2](#)
- terminal, connecting to a switch [B-8 to B-9](#)
- terminal-emulation software [D-4](#)
- troubleshooting [4-1](#)
 - understanding POST results [4-1](#)

U

- URLs, Cisco [xiv](#)

V

- verifying package contents [3-3](#)

W

- warnings
 - Class 1 laser product [3-2](#)
 - ground connection [3-2](#)
 - grounded equipment [3-2](#)
 - installation [3-1 to 3-2](#)

