



INDEX

Numerics

- 10/100/1000 ports
 - cable lengths [2-4, 3-4](#)
 - connecting to [2-14](#)
 - connectors and cables [B-1 to B-2](#)
 - described [1-11 to 1-12](#)
 - illustrated [1-4](#)
 - PoE [1-12](#)
 - speed indicator [1-18](#)
- 10/100/1000 ports, described [1-13](#)
- 10/100 ports [1-11](#)
- 10/100 ports PoE [1-12](#)
- 19- and 24-inch racks [2-7, 3-15](#)

A

- AC power
 - connecting to [2-5, 3-5](#)
 - connector [1-20](#)
 - specifications [A-2 to A-4](#)
- AC power adapter for Catalyst 2960PD-8TT-L switch [1-14](#)
- adapter pinouts, terminal
 - RJ-45-to-DB-25 [B-8](#)
 - RJ-45-to-DB-9 [B-8](#)
- attaching the Cisco RPS warning [2-2, 2-6](#)
- auto-MDIX [1-11 to 1-12, 2-15, 2-20, B-1, B-3, C-2](#)
- autonegotiation [1-11](#)
- autonegotiation troubleshooting [4-4](#)

B

- bodily injury prevention warning [2-2, 3-2](#)
- bodily injury warning [2-3, 2-6, 3-2, 3-15](#)
- brackets
 - See mounting brackets

C

- cable guard [1-19, 3-4](#)
- cable guide, attaching [2-11](#)
- cable lengths [2-4, 3-3](#)
- cable lock [3-4](#)
- cables
 - crossover
 - four twisted-pair pinout, 1000BASE-T ports [B-7](#)
 - identifying [B-7](#)
 - two twisted-pair pinout, 10/100 ports [B-6](#)
 - using [B-2](#)
 - SFP modules
 - 1000BASE-T module [2-19](#)
 - fiber-optic [B-4](#)
 - straight-through
 - four twisted-pair pinout, 1000BASE-T ports [B-6](#)
 - two twisted-pair pinout [B-6](#)
 - using [B-1](#)
- cabling
 - 10/100/1000 ports [1-11, 2-14](#)
 - auto-MDIX [1-11 to 1-12, 2-15, 2-20, B-1, B-3, C-2](#)
 - pinouts [B-6](#)
 - See also connectors and cables
- circuit protection warning [2-3](#)
- Cisco IOS command-line interface [1-22](#)

Cisco IP Phones, connecting to [1-12, 2-15](#)

Cisco RPS

See RPS

CiscoView [1-22](#)

class 1 laser warning [2-3, 3-2](#)

CLI

accessing by using Express Setup [C-1](#)

accessing through console port [C-2](#)

described [1-22](#)

command-line interface

See CLI

compliance warning [2-4, 3-3](#)

configuration examples, network [1-1](#)

connecting

to 10/100/1000 ports [2-14](#)

to console port [B-4, C-3](#)

to SFP modules [2-18 to 2-20](#)

connecting to the console port [B-4, C-3](#)

connection procedures [2-14 to 2-20](#)

connectors and cables

10/100/1000 [B-1 to B-2](#)

console [B-4 to B-8](#)

dual-purpose [B-3](#)

power (AC and RPS) [1-20](#)

SC connectors [B-3](#)

SFP module ports [B-3](#)

console port

connecting to [C-3](#)

described [1-21](#)

specifications [B-4 to B-8](#)

crossover cable [B-7](#)

crossover cable, connecting to 1000BASE-T SFP module ports [2-19](#)

crossover cable pinout, four twisted-pair, 1000BASE-T ports [B-7](#)

descriptions of switch models [1-1](#)

desk-mounting [2-14, 3-6](#)

device manager

described [1-22](#)

to configure switch [2-21, 3-18](#)

diagnosing problems [4-1](#)

disconnecting device warning [2-3](#)

dual-purpose ports

connectors and cables [B-3](#)

described [1-13](#)

LEDs [1-18](#)

duplex, troubleshooting [4-4](#)

duplex LED [1-16](#)

E

electrical noise, avoiding [2-5, 3-4](#)

Ethernet and fiber-optic cable troubleshooting [4-3](#)

Ethernet cable warning

24- and 48-port switches [2-2](#)

8-port switches [3-2](#)

Ethernet ports warning [3-3](#)

examples, network configuration [1-1](#)

Express Setup, accessing CLI by using [C-1](#)

F

features [1-1](#)

front panel

10/100/1000 ports [1-11 to 1-12](#)

clearance [2-5, 3-4](#)

description [1-4 to 1-17](#)

dual-purpose ports [1-13](#)

LEDs [1-14 to 1-17](#)

SFP module ports [1-13](#)

D

DC power RPS [1-4](#)

G

ground connection warning [2-4, 3-3](#)
grounded equipment warning [2-3, 3-3](#)

H

HP OpenView [1-22](#)
humidity, relative [A-1](#)

I

installation
 assigning the IP address [C-4](#)
 connecting to a power source [C-4](#)
 mounting
 in a rack (24- and 48-port switches) [2-7 to 2-10](#)
 in a rack (8-port switches) [3-15 to 3-16](#)
 on a wall (24- and 48-port switches) [2-11](#)
 on a wall (8-ports switches) [3-11 to 3-13](#)
 on a wall with rack-mount brackets (8-port switches) [3-16](#)
 on desk or shelf [2-14, 3-6, 3-11](#)
 under a desk [3-8](#)
 using a magnet [3-14](#)
 site requirements [2-4, 3-3](#)
 starting the terminal emulation software [C-3](#)
 See also procedures
installation instructions warning [2-2, 3-2](#)
installing SFP modules [2-16 to 2-17](#)
internal power supply [1-20](#)

J

jewelry removal warning [2-2, 3-2](#)

L

LEDs
 color meanings [1-17](#)
 dual-purpose port [1-18](#)
 duplex [1-16](#)
 front panel [1-15](#)
 interpreting [1-17](#)
 PoE [1-16, 1-18](#)
 port mode [1-16, 1-17](#)
 POST results [2-6, 3-5, 4-2, C-4](#)
 RPS [1-16](#)
 speed [1-16](#)
 STATUS [1-16](#)
 system [1-15](#)
 troubleshooting with [4-1 to 4-2](#)
lightning activity warning [2-2, 3-2](#)
link status troubleshooting [4-3](#)

M

Mode button [1-14](#)
model descriptions [1-1](#)
mounting, desk or shelf [2-14, 3-6](#)
mounting, wall-mounting [2-11, 3-16](#)
mounting brackets
 attaching [2-7 to 2-9](#)
 rack-mount [2-10, 3-16](#)

N

Network Assistant
 described [1-22](#)
 to configure switch [2-21, 3-18](#)
network configuration examples [1-1](#)
noise, electrical [2-5, 3-4](#)
no user-serviceable parts warning [2-4](#)

O

overheating warning [2-2, 3-1](#)

P

pinouts

10/100 ports [B-3](#)

adapters [B-7](#)

console port [B-8](#)

crossover cables

four twisted-pair, 1000BASE-T ports [B-7](#)

two twisted-pair 10/100 ports [B-6](#)

RJ-45-to-DB-25 terminal adapter [B-8](#)

RJ-45-to-DB-9 terminal adapter [B-8](#)

SFP module [B-3](#)

straight-through cables

four twisted-pair 1000BASE-T ports [B-6](#)

two twisted-pair [B-6](#)

plug-socket combination warning [2-3](#)

PoE

LED [1-16, 1-17, 1-18](#)

on Catalyst 2960-24PC-L, 24LT-L, and 48PST-L switches [1-12](#)

warning [3-2](#)

port and interface troubleshooting [4-4](#)

port modes

changing [1-14](#)

LEDs [1-16](#)

See also Mode button

ports

10/100/1000 [1-4, 1-11 to 1-12, 1-13, 1-18](#)

dual-purpose [1-13](#)

numbering of 10/100/1000 [1-11 to 1-12](#)

numbering of SFP module ports [1-9](#)

POST

LEDs [2-6, 3-5, 4-2, C-4](#)

results [2-6, 3-5, 4-1, C-4](#)

running at power on [2-6, 3-5, 4-2](#)

power

connecting to [2-5, 3-5](#)

connectors [1-19, 1-20](#)

power on [2-5, 3-5](#)

power-on self test

See POST

Power over Ethernet

See PoE

Power over Ethernet

See PoE

power supply

AC power outlet [1-20](#)

for the Catalyst 2960PD-8TT-L switch [1-14](#)

internal [1-20](#)

RPS connector [1-20](#)

power supply warning [2-3, 3-3](#)

procedures

connection [2-14 to 2-20](#)

installation [2-6 to 2-14, 3-5 to 3-18](#)

product disposal warning [2-3, 3-3](#)

R

rack-mounting [2-7 to 2-10, 3-15 to 3-16](#)

rack-mounting warning [2-3, 2-6, 3-2, 3-15](#)

read the wall-mounting instructions warning [2-2, 3-11, 3-17](#)

rear panel

clearance [2-5, 3-4](#)

description [1-19 to 1-21](#)

redundant power supply

See RPS

removing SFP modules [2-17 to 2-18](#)

restricted access area warning [2-3](#)

RJ-45 connector, console port [B-4](#)

RJ-45 console port [1-19](#)

RPS

- attachment warning [2-2, 2-6](#)
- connecting to [2-5, 3-5](#)
- connector [1-20](#)
- LED [1-16](#)

RPS warning [2-2, 2-13](#)

S

safety warnings [2-2, 3-1](#)

SC connector [B-3](#)

security slot [1-21](#)

serial number location [4-6](#)

SFP modules

- 1000BASE-T supported speeds [1-17](#)
- bale-clasp latch removal [2-17](#)
- cables [B-4](#)
- connecting to [2-18 to 2-20](#)
- connectors [B-3](#)
- described [1-13](#)
- installation [2-16 to 2-17](#)

shelf-mounting [2-14, 3-6](#)

Simple Network Management Protocol

See SNMP

SNMP network management platforms [1-22](#)

software switch management [1-22](#)

specifications [A-1](#)

speed, troubleshooting [4-4](#)

stacking the chassis warning [2-2, 3-2](#)

straight-through cable pinout

- four twisted-pair 1000BASE-T ports [B-6](#)
- two twisted-pair 10/100 ports [B-6](#)

SunNet Manager [1-22](#)

switch descriptions [1-1](#)

switch powering on [2-5, 3-5](#)

system LED [1-15](#)

T

technical specifications [A-1](#)

telco racks [2-7, 3-15](#)

Telnet, and accessing the CLI [1-22](#)

temperature, operating [A-1](#)

terminal emulation software [C-3](#)

trained and qualified personnel warning [2-3](#)

troubleshooting [4-1 to 4-6](#)

bad or damaged cable [4-2](#)

connection problems [4-2](#)

diagnosing problems [4-1](#)

Ethernet and fiber-optic cables [4-3](#)

link status [4-3](#)

ping end device [4-4](#)

port and interface settings [4-4](#)

POST [4-1](#)

spanning tree loops [4-4](#)

speed, duplex, and autonegotiation [4-4](#)

switch performance [4-4](#)

troubleshooting spanning tree loops [4-4](#)

W

wall-mounting [2-11, 3-16](#)

warnings

attaching the Cisco RPS [2-2, 2-6](#)

circuit protection [2-3](#)

class 1 laser product [2-3, 3-2](#)

disconnecting device [2-3](#)

Ethernet cables [2-2, 3-2](#)

Ethernet ports [3-3](#)

ground connection [2-4, 3-3](#)

grounded equipment [2-3, 3-3](#)

installation [2-2, 3-1](#)

installation instructions [2-2, 3-2](#)

jewelry removal [2-2, 3-2](#)

lightning activity [2-2, 3-2](#)

local and national electrical codes compliance [2-4, 3-3](#)

more than one power supply [3-3](#)
no user-serviceable parts [2-4](#)
overheating prevention [2-2, 3-1](#)
plug-socket combination [2-3](#)
PoE [3-2](#)
power supplies [2-3](#)
prevent bodily injury [2-3, 2-6, 3-2, 3-15](#)
product disposal [2-3, 3-3](#)
rack-mounting [2-3, 2-6, 3-2, 3-15](#)
read the wall-mounting instructions [2-2, 3-11, 3-17](#)
restricted access area [2-3](#)
RPS [2-2, 2-13](#)
stacking the chassis [2-2, 3-2](#)
trained and qualified personnel [2-3](#)