



## INDEX

---

### A

aaa accounting dot1x command [2-1](#)  
aaa authentication dot1x command [2-3](#)  
aaa authorization network command [2-5](#)  
AAA methods [2-3](#)  
abort command [2-596](#)  
access control entries  
    See ACEs  
access control lists  
    See ACLs  
access groups  
    IP [2-118](#)  
    MAC, displaying [2-388](#)  
access mode [2-549](#)  
access ports [2-549](#)  
ACEs [2-67, 2-259](#)  
ACLs  
    deny [2-65](#)  
    displaying [2-295](#)  
    for non-IP protocols [2-180](#)  
    IP [2-118](#)  
    on Layer 2 interfaces [2-118](#)  
    permit [2-257](#)  
address aliasing [2-248](#)  
aggregate-port learner [2-253](#)  
allowed VLANs [2-564](#)  
apply command [2-596](#)  
archive download-sw command [2-6](#)  
archive tar command [2-8](#)  
archive upload-sw command [2-11](#)  
audience [xvii](#)

authentication failed VLAN  
    See dot1x auth-fail vlan  
auth-fail max-attempts  
    See dot1x auth-fail max-attempts  
auth-fail vlan  
    See dot1x auth-fail vlan  
authorization state of controlled port [2-91](#)  
autonegotiation of duplex mode [2-99](#)  
auto qos voip command [2-13](#)

---

### B

BackboneFast, for STP [2-484](#)  
backup interfaces  
    configuring [2-543](#)  
    displaying [2-350](#)  
boot (boot loader) command [A-2](#)  
boot bootlpr command [2-17](#)  
boot config-file command [2-18](#)  
boot enable-break command [2-19](#)  
boot helper command [2-20](#)  
boot helper-config file command [2-21](#)  
booting  
    Cisco IOS image [2-24](#)  
    displaying environment variables [2-303](#)  
    interrupting [2-19](#)  
    manually [2-22](#)  
boot loader  
    accessing [A-1](#)  
    booting  
        Cisco IOS image [A-2](#)  
        helper image [2-20](#)

**boot loader (continued)**

- directories
  - creating [A-14](#)
  - displaying a list of [A-7](#)
  - removing [A-18](#)
- displaying
  - available commands [A-12](#)
  - memory heap utilization [A-13](#)
  - version [A-25](#)
- environment variables
  - described [A-19](#)
  - displaying settings [A-19](#)
  - location of [A-20](#)
  - setting [A-19](#)
  - unsetting [A-23](#)
- files
  - copying [A-5](#)
  - deleting [A-6](#)
  - displaying a list of [A-7](#)
  - displaying the contents of [A-4](#), [A-15](#), [A-22](#)
  - renaming [A-16](#)
- file system
  - formatting [A-10](#)
  - initializing flash [A-9](#)
  - running a consistency check [A-11](#)
- prompt [A-1](#)
- resetting the system [A-17](#)
- boot manual command [2-22](#)
- boot private-config-file command [2-23](#)
- boot system command [2-24](#)
- BPDU filtering, for spanning tree [2-485](#), [2-520](#)
- BPDU guard, for spanning tree [2-487](#), [2-520](#)
- broadcast storm control [2-538](#)

**C**

- candidate switches
  - See clusters
- cat (boot loader) command [A-4](#)

- caution, description [xviii](#)
- channel-group command [2-25](#)
- channel-protocol command [2-28](#)
- Cisco Network Assistant
  - See Network Assistant [xviii](#)
- Cisco SoftPhone
  - auto-QoS configuration [2-13](#)
  - trusting packets sent from [2-240](#)
- class command [2-30](#)
- class-map command [2-32](#)
- class maps
  - creating [2-32](#)
  - defining the match criteria [2-200](#)
  - displaying [2-307](#)
- class of service
  - See CoS
- clear dot1x command [2-34](#)
- clear eap sessions command [2-35](#)
- clear errdisable interface [2-36](#)
- clear ip dhcp snooping database command [2-37](#)
- clear lacp command [2-39](#)
- clear mac address-table command [2-40](#), [2-42](#)
- clear pagp command [2-43](#)
- clear port-security command [2-44](#)
- clear spanning-tree counters command [2-46](#)
- clear spanning-tree detected-protocols command [2-47](#)
- clear vmpls statistics command [2-48](#)
- clear vtp counters command [2-49](#)
- cluster commander-address command [2-50](#)
- cluster discovery hop-count command [2-52](#)
- cluster enable command [2-53](#)
- cluster holdtime command [2-54](#)
- cluster member command [2-55](#)
- cluster outside-interface command [2-57](#)
- cluster requirements [xviii](#)
- cluster run command [2-58](#)

## clusters

- adding candidates [2-55](#)
- binding to HSRP group [2-59](#)
- building manually [2-55](#)
- communicating with
  - devices outside the cluster [2-57](#)
  - members by using Telnet [2-275](#)
- debug messages, display [B-5](#)
- displaying
  - candidate switches [2-310](#)
  - debug messages [B-5](#)
  - member switches [2-312](#)
  - status [2-308](#)
- hop-count limit for extended discovery [2-52](#)
- HSRP standby groups [2-59](#)
- redundancy [2-59](#)
- SNMP trap [2-474](#)
- cluster standby-group command [2-59](#)
- cluster timer command [2-61](#)
- command modes defined [1-1](#)
- command switch
  - See clusters
- configuration, initial
  - See getting started guide and hardware installation guide
- configuration files
  - password recovery disable considerations [A-1](#)
  - specifying the name [2-18, 2-23](#)
- configuring multiple interfaces [2-114](#)
- config-vlan mode
  - commands [2-585](#)
  - description [1-4](#)
  - entering [2-584](#)
  - summary [1-2](#)
- conventions
  - command [xvii](#)
  - for examples [xviii](#)
  - publication [xvii](#)
  - text [xvii](#)

copy (boot loader) command [A-5](#)

## CoS

- assigning default value to incoming packets [2-210](#)
- overriding the incoming value [2-210](#)

CoS-to-DSCP map [2-214](#)

CPU ASIC statistics, displaying [2-314](#)

crashinfo files [2-107](#)

---

**D**

- debug auto qos command [B-2](#)
- debug backup command [B-4](#)
- debug cluster command [B-5](#)
- debug dot1x command [B-7](#)
- debug dtp command [B-8](#)
- debug eap command [B-9](#)
- debug etherchannel command [B-10](#)
- debug interface command [B-11](#)
- debug ip dhcp snooping command [B-12](#)
- debug ip igmp filter command [B-13](#)
- debug ip igmp max-groups command [B-14](#)
- debug ip igmp snooping command [B-15](#)
- debug lacp command [B-16](#)
- debug mac-notification command [B-17](#)
- debug matm command [B-18](#)
- debug matm move update command [B-19](#)
- debug monitor command [B-20](#)
- debug mvrdbg command [B-21](#)
- debug nvram command [B-22](#)
- debug pagp command [B-23](#)
- debug platform acl command [B-24](#)
- debug platform backup interface command [B-25](#)
- debug platform cpu-queues command [B-26](#)
- debug platform dot1x command [B-28](#)
- debug platform etherchannel command [B-29](#)
- debug platform forw-tcam command [B-30](#)
- debug platform ip dhcp command [B-31](#)
- debug platform ip igmp snooping command [B-32](#)
- debug platform led command [B-34](#)

debug platform matm command [B-35](#)  
 debug platform messaging application command [B-36](#)  
 debug platform phy command [B-37](#)  
 debug platform pm command [B-39](#)  
 debug platform port-asic command [B-41](#)  
 debug platform port-security command [B-42](#)  
 debug platform qos-acl-tcam command [B-43](#)  
 debug platform resource-manager command [B-44](#)  
 debug platform snmp command [B-45](#)  
 debug platform span command [B-46](#)  
 debug platform supervisor-asic command [B-47](#)  
 debug platform sw-bridge command [B-48](#)  
 debug platform tcam command [B-49](#)  
 debug platform udd command [B-51](#)  
 debug platform vlan command [B-52](#)  
 debug pm command [B-53](#)  
 debug port-security command [B-55](#)  
 debug qos-manager command [B-56](#)  
 debug spanning-tree backbonefast command [B-59](#)  
 debug spanning-tree bpdu command [B-60](#)  
 debug spanning-tree bpdu-opt command [B-61](#)  
 debug spanning-tree command [B-57](#)  
 debug spanning-tree mstp command [B-62](#)  
 debug spanning-tree switch command [B-64](#)  
 debug spanning-tree uplinkfast command [B-66](#)  
 debug sw-vlan command [B-67](#)  
 debug sw-vlan ifs command [B-69](#)  
 debug sw-vlan notification command [B-71](#)  
 debug sw-vlan vtp command [B-72](#)  
 debug udd command [B-74](#)  
 debug vqpc command [B-76](#)  
 define interface-range command [2-62](#)  
 delete (boot loader) command [A-6](#)  
 delete command [2-64](#)  
 deny command [2-65](#)  
 detect mechanism, causes [2-100](#)  
 device manager requirements [xviii](#)

## DHCP snooping

accepting untrusted packets from edge switch [2-133](#)  
 enabling  
     on a VLAN [2-139](#)  
     option 82 [2-131, 2-133](#)  
     trust on an interface [2-137](#)  
 error recovery timer [2-105](#)  
 rate limiting [2-135](#)

## DHCP snooping binding database

binding file, configuring [2-129](#)  
 bindings  
     adding [2-127](#)  
     deleting [2-127](#)  
     displaying [2-362](#)  
 clearing database agent statistics [2-37](#)  
 database agent, configuring [2-129](#)  
 displaying  
     binding entries [2-362](#)  
     database agent status [2-364, 2-366](#)  
 renewing [2-279](#)

dir (boot loader) command [A-7](#)

directories, deleting [2-64](#)

documentation, related [xviii](#)

document conventions [xvii](#)

domain name, VTP [2-603, 2-607](#)

dot1x auth-fail max-attempts [2-70](#)

dot1x auth-fail vlan [2-72](#)

dot1x command [2-68](#)

dot1x control-direction command [2-74](#)

dot1x critical global configuration command [2-76](#)

dot1x critical interface configuration command [2-78](#)

dot1x default command [2-80](#)

dot1x fallback command [2-81](#)

dot1x guest-vlan command [2-82](#)

dot1x host-mode command [2-84](#)

dot1x initialize command [2-85](#)

dot1x mac-auth-bypass command [2-86](#)

dot1x max-reauth-req command [2-88](#)

dot1x max-req command [2-89](#)

- dot1x pae command [2-90](#)
- dot1x port-control command [2-91](#)
- dot1x re-authenticate command [2-93](#)
- dot1x reauthentication command [2-94](#)
- dot1x timeout command [2-95](#)
- DSCP-to-CoS map [2-214](#)
- DSCP-to-DSCP-mutation map [2-214](#)
- DTP [2-550](#)
- DTP flap
  - error detection for [2-100](#)
  - error recovery timer [2-105](#)
- DTP negotiation [2-551](#)
- dual-purpose uplink ports
  - displaying configurable options [2-352](#)
  - displaying the active media [2-357](#)
  - selecting the type [2-204](#)
- duplex command [2-98](#)
- dynamic-access ports
  - configuring [2-541](#)
  - restrictions [2-542](#)
- dynamic auto VLAN membership mode [2-549](#)
- dynamic desirable VLAN membership mode [2-549](#)
- Dynamic Host Configuration Protocol (DHCP)
  - See DHCP snooping
- Dynamic Trunking Protocol
  - See DTP

## E

- EAP-request/identity frame
  - maximum number to send [2-89](#)
  - response time before retransmitting [2-95](#)
- environment variables, displaying [2-303](#)
- errdisable detect cause command [2-100](#)
- errdisable detect cause small-frame command [2-102](#)
- errdisable recovery cause small-frame [2-104](#)
- errdisable recovery command [2-105](#)
- error conditions, displaying [2-339](#)
- error disable detection [2-100](#)
- error-disabled interfaces, displaying [2-350](#)
- EtherChannel
  - assigning Ethernet interface to channel group [2-25](#)
  - creating port-channel logical interface [2-112](#)
  - debug EtherChannel/PAgP, display [B-10](#)
  - debug platform-specific events, display [B-29](#)
  - displaying [2-343](#)
  - interface information, displaying [2-350](#)
- LACP
  - clearing channel-group information [2-39](#)
  - debug messages, display [B-16](#)
  - displaying [2-379](#)
  - modes [2-25](#)
  - port priority for hot-standby ports [2-165](#)
  - restricting a protocol [2-28](#)
  - system priority [2-167](#)
- load-distribution methods [2-266](#)
- PAgP
  - aggregate-port learner [2-253](#)
  - clearing channel-group information [2-43](#)
  - debug messages, display [B-23](#)
  - displaying [2-432](#)
  - error detection for [2-100](#)
  - error recovery timer [2-105](#)
  - learn method [2-253](#)
  - modes [2-25](#)
  - physical-port learner [2-253](#)
  - priority of interface for transmitted traffic [2-255](#)
- Ethernet controller, internal register display [2-316](#)
- Ethernet statistics, collecting [2-281](#)
- examples, conventions for [xviii](#)
- exception crashinfo command [2-107](#)
- exit command [2-596](#)
- extended discovery of candidate switches [2-52](#)
- extended-range VLANs
  - and allowed VLAN list [2-564](#)
  - and pruning-eligible list [2-564](#)
  - configuring [2-584](#)
- extended system ID for STP [2-493](#)

---

**F**

fallback profile command [2-108](#)  
 fallback profiles, displaying [2-346](#)  
 fan information, displaying [2-336](#)  
 file name, VTP [2-603](#)  
 files, deleting [2-64](#)  
 flash\_init (boot loader) command [A-9](#)  
 Flex Links  
     configuring [2-543](#)  
     configuring preferred VLAN [2-545](#)  
     displaying [2-350](#)  
 flowcontrol command [2-110](#)  
 format (boot loader) command [A-10](#)  
 forwarding results, display [C-5](#)  
 frame forwarding information, displaying [C-5](#)  
 fsck (boot loader) command [A-11](#)

---

**G**

global configuration mode [1-2, 1-3](#)

---

**H**

hardware ACL statistics [2-295](#)  
 help (boot loader) command [A-12](#)  
 hierarchical policy maps [2-265](#)  
 hop-count limit for clusters [2-52](#)  
 host connection, port configuration [2-548](#)  
 Hot Standby Router Protocol  
     See HSRP  
 HSRP  
     binding HSRP group to cluster [2-59](#)  
     standby group [2-59](#)

---

**I**

IEEE 802.1x  
     and switchport modes [2-550](#)  
     violation error recovery [2-105](#)  
     See also port-based authentication  
 IEEE 802.1X Port Based Authentication  
     enabling guest VLAN supplicant [2-71, 2-81, 2-109](#)  
 IGMP filters  
     applying [2-140](#)  
     debug messages, display [B-13](#)  
 IGMP groups, setting maximum [2-142](#)  
 IGMP maximum groups, debugging [B-14](#)  
 IGMP profiles  
     creating [2-144](#)  
     displaying [2-369](#)  
 IGMP snooping  
     adding ports as a static member of a group [2-161](#)  
     displaying [2-370, 2-375, 2-377](#)  
     enabling [2-146](#)  
     enabling the configurable-leave timer [2-148](#)  
     enabling the Immediate-Leave feature [2-157](#)  
     flooding query count [2-154](#)  
     interface topology change notification behavior [2-156](#)  
     multicast table [2-373](#)  
     querier [2-150](#)  
     query solicitation [2-154](#)  
     report suppression [2-152](#)  
     switch topology change notification behavior [2-154](#)  
 images  
     See software images  
 Immediate-Leave feature, MVR [2-250](#)  
 immediate-leave processing [2-157](#)  
 initial configuration  
     See getting started guide and hardware installation guide  
 interface configuration mode [1-2, 1-4](#)  
 interface port-channel command [2-112](#)  
 interface range command [2-114](#)

- interface-range macros [2-62](#)
  - interfaces
    - assigning Ethernet interface to channel group [2-25](#)
    - configuring [2-98](#)
    - configuring multiple [2-114](#)
    - creating port-channel logical [2-112](#)
    - debug messages, display [B-11](#)
    - disabling [2-470](#)
    - displaying the MAC address table [2-400](#)
    - restarting [2-470](#)
  - interface speed, configuring [2-530](#)
  - interface vlan command [2-117](#)
  - internal registers, displaying [2-316, 2-323](#)
  - Internet Group Management Protocol
    - See IGMP
  - invalid GBIC
    - error detection for [2-100](#)
    - error recovery timer [2-105](#)
  - ip access-group command [2-118](#)
  - ip address command [2-120](#)
  - IP addresses, setting [2-120](#)
  - ip admission command [2-122](#)
  - ip admission name proxy http command [2-124](#)
  - IP DHCP snooping
    - See DHCP snooping
  - ip dhcp snooping binding command [2-127](#)
  - ip dhcp snooping command [2-126](#)
  - ip dhcp snooping database command [2-129](#)
  - ip dhcp snooping information option allow-untrusted command [2-133](#)
  - ip dhcp snooping information option command [2-131](#)
  - ip dhcp snooping limit rate command [2-135](#)
  - ip dhcp snooping trust command [2-137](#)
  - ip dhcp snooping verify command [2-138](#)
  - ip dhcp snooping vlan command [2-139](#)
  - ip igmp filter command [2-140](#)
  - ip igmp max-groups command [2-142](#)
  - ip igmp profile command [2-144](#)
  - ip igmp snooping command [2-146](#)
  - ip igmp snooping last-member-query-interval command [2-148](#)
  - ip igmp snooping querier command [2-150](#)
  - ip igmp snooping report-suppression command [2-152](#)
  - ip igmp snooping tcn command [2-154](#)
  - ip igmp snooping tcn flood command [2-156](#)
  - ip igmp snooping vlan immediate-leave command [2-157](#)
  - ip igmp snooping vlan mrouter command [2-159](#)
  - ip igmp snooping vlan static command [2-161](#)
  - IP multicast addresses [2-247](#)
  - IP phones
    - auto-QoS configuration [2-13](#)
    - trusting packets sent from [2-240](#)
  - IP-precedence-to-DSCP map [2-214](#)
  - IP source guard
    - displaying
      - dynamic binding entries only [2-362](#)
  - ip ssh command [2-163](#)
- 
- ## J
- jumbo frames
    - See MTU
- 
- ## L
- LACP
    - See EtherChannel
  - lacp port-priority command [2-165](#)
  - lacp system-priority command [2-167](#)
  - Layer 2 traceroute
    - IP addresses [2-575](#)
    - MAC addresses [2-572](#)
  - line configuration mode [1-2, 1-5](#)
  - Link Aggregation Control Protocol
    - See EtherChannel
  - link flap
    - error detection for [2-100](#)
    - error recovery timer [2-105](#)

link state group command [2-172](#)  
 link state track command [2-174](#)  
 load-distribution methods for EtherChannel [2-266](#)  
 location (global configuration) command [2-168](#)  
 location (interface configuration) command [2-170](#)  
 logging event command [2-175](#)  
 logging file command [2-176](#)  
 logical interface [2-112](#)  
 loopback error  
     detection for [2-100](#)  
     recovery timer [2-105](#)  
 loop guard, for spanning tree [2-495, 2-499](#)

## M

mac access-group command [2-178](#)  
 MAC access-groups, displaying [2-388](#)  
 MAC access list configuration mode [2-180](#)  
 mac access-list extended command [2-180](#)  
 MAC access lists [2-65](#)  
 MAC addresses  
     displaying  
         aging time [2-394](#)  
         all [2-392](#)  
         dynamic [2-398](#)  
         MAC address-table move updates [2-402](#)  
         notification settings [2-404](#)  
         number of addresses in a VLAN [2-396](#)  
         per interface [2-400](#)  
         per VLAN [2-408](#)  
         static [2-406](#)  
         static and dynamic entries [2-390](#)  
     dynamic  
         aging time [2-182](#)  
         deleting [2-40](#)  
         displaying [2-398](#)  
     enabling MAC address notification [2-185](#)  
     enabling MAC address-table move update [2-183](#)

## MAC addresses (continued)

static  
     adding and removing [2-187](#)  
     displaying [2-406](#)  
     dropping on an interface [2-188](#)  
     tables [2-392](#)  
 MAC address notification, debugging [B-17](#)  
 mac address-table aging-time [2-178](#)  
 mac address-table aging-time command [2-182](#)  
 mac address-table move update command [2-183](#)  
 mac address-table notification command [2-185](#)  
 mac address-table static command [2-187](#)  
 mac address-table static drop command [2-188](#)  
 macro apply command [2-190](#)  
 macro description command [2-193](#)  
 macro global command [2-194](#)  
 macro global description command [2-197](#)  
 macro name command [2-198](#)  
 macros  
     adding a description [2-193](#)  
     adding a global description [2-197](#)  
     applying [2-194](#)  
     creating [2-198](#)  
     displaying [2-434](#)  
     interface range [2-62, 2-114](#)  
     specifying parameter values [2-194](#)  
     tracing [2-194](#)  
 manual  
     audience [xvii](#)  
     purpose of [xvii](#)  
 maps  
     QoS  
         defining [2-214](#)  
         displaying [2-418](#)  
 match (class-map configuration) command [2-200](#)  
 maximum transmission unit  
     See MTU  
 mdix auto command [2-202](#)  
 media-type command [2-204](#)

## member switches

See clusters

memory (boot loader) command [A-13](#)

mkdir (boot loader) command [A-14](#)

mls qos aggregate-policer command [2-208](#)

mls qos command [2-206](#)

mls qos cos command [2-210](#)

mls qos dscp-mutation command [2-212](#)

mls qos map command [2-214](#)

mls qos queue-set output buffers command [2-218](#)

mls qos queue-set output threshold command [2-220](#)

mls qos rewrite ip dscp command [2-222](#)

mls qos srr-queue input bandwidth command [2-224](#)

mls qos srr-queue input buffers command [2-226](#)

mls qos-srr-queue input cos-map command [2-228](#)

mls qos srr-queue input dscp-map command [2-230](#)

mls qos srr-queue input priority-queue command [2-232](#)

mls qos srr-queue input threshold command [2-234](#)

mls qos-srr-queue output cos-map command [2-236](#)

mls qos srr-queue output dscp-map command [2-238](#)

mls qos trust command [2-240](#)

mode, MVR [2-247](#)

Mode button, and password recovery [2-284](#)

modes, commands [1-1](#)

monitor session command [2-242](#)

more (boot loader) command [A-15](#)

## MSTP

displaying [2-446](#)

interoperability [2-47](#)

link type [2-497](#)

### MST region

aborting changes [2-503](#)

applying changes [2-503](#)

configuration name [2-503](#)

configuration revision number [2-503](#)

current or pending display [2-503](#)

displaying [2-446](#)

MST configuration mode [2-503](#)

VLANs-to-instance mapping [2-503](#)

## MSTP (continued)

path cost [2-505](#)

protocol mode [2-501](#)

restart protocol migration process [2-47](#)

### root port

loop guard [2-495](#)

preventing from becoming designated [2-495](#)

restricting which can be root [2-495](#)

root guard [2-495](#)

### root switch

affects of extended system ID [2-493](#)

hello-time [2-508, 2-516](#)

interval between BPDU messages [2-509](#)

interval between hello BPDU messages [2-508, 2-516](#)

max-age [2-509](#)

maximum hop count before discarding BPDU [2-510](#)

port priority for selection of [2-512](#)

primary or secondary [2-516](#)

switch priority [2-515](#)

### state changes

blocking to forwarding state [2-522](#)

enabling BPDU filtering [2-485, 2-520](#)

enabling BPDU guard [2-487, 2-520](#)

enabling Port Fast [2-520, 2-522](#)

forward-delay time [2-507](#)

length of listening and learning states [2-507](#)

rapid transition to forwarding [2-497](#)

shutting down Port Fast-enabled ports [2-520](#)

state information display [2-445](#)

## MTU

configuring size [2-569](#)

displaying global setting [2-453](#)

multicast group address, MVR [2-250](#)

multicast groups, MVR [2-248](#)

multicast router learning method [2-159](#)

multicast router ports, configuring [2-159](#)

multicast storm control [2-538](#)

multicast VLAN, MVR [2-248](#)

multicast VLAN registration

See MVR

Multiple Spanning Tree Protocol

See MSTP

MVR

and address aliasing [2-248](#)

configuring [2-247](#)

configuring interfaces [2-250](#)

debug messages, display [B-21](#)

displaying [2-426](#)

displaying interface information [2-428](#)

members, displaying [2-430](#)

mvr (global configuration) command [2-247](#)

mvr (interface configuration) command [2-250](#)

mvr vlan group command [2-251](#)

## N

native VLANs [2-564](#)

Network Admission Control Software Configuration Guide [2-123, 2-125](#)

Network Assistant requirements [xviii](#)

nonegotiate, speed [2-530](#)

nonegotiating DTP messaging [2-551](#)

non-IP protocols

denying [2-65](#)

forwarding [2-257](#)

non-IP traffic access lists [2-180](#)

non-IP traffic forwarding

denying [2-65](#)

permitting [2-257](#)

normal-range VLANs [2-584, 2-589](#)

note, description [xviii](#)

no vlan command [2-584, 2-593](#)

## P

PAgP

See EtherChannel

pagp learn-method command [2-253](#)

pagp port-priority command [2-255](#)

password, VTP [2-603, 2-607](#)

password-recovery mechanism, enabling and disabling [2-284](#)

permit (MAC access-list configuration) command [2-257](#)

per-VLAN spanning-tree plus

See STP

physical-port learner [2-253](#)

PID, displaying [2-360](#)

PIM-DVMRP, as multicast router learning method [2-159](#)

police aggregate command [2-262](#)

police command [2-260](#)

policed-DSCP map [2-214](#)

policy-map command [2-264](#)

policy maps

applying to an interface [2-286, 2-290](#)

creating [2-264](#)

displaying [2-437](#)

hierarchical [2-265](#)

policers

displaying [2-411](#)

for a single class [2-260](#)

for multiple classes [2-208, 2-262](#)

policed-DSCP map [2-214](#)

traffic classification

defining the class [2-30](#)

defining trust states [2-577](#)

setting DSCP or IP precedence values [2-288](#)

Port Aggregation Protocol

See EtherChannel

- port-based authentication
  - AAA method list [2-3](#)
  - debug messages, display [B-7](#)
  - enabling IEEE 802.1x
    - globally [2-68](#)
    - per interface [2-91](#)
  - guest VLAN [2-82](#)
  - host modes [2-84](#)
  - IEEE 802.1x AAA accounting methods [2-1](#)
  - initialize an interface [2-85](#)
  - MAC authentication bypass [2-86](#)
  - manual control of authorization state [2-91](#)
  - PAE as authenticator [2-90](#)
  - periodic re-authentication
    - enabling [2-94](#)
    - time between attempts [2-95](#)
  - quiet period between failed authentication exchanges [2-95](#)
  - re-authenticating IEEE 802.1x-enabled ports [2-93](#)
  - resetting configurable IEEE 802.1x parameters [2-80](#)
  - switch-to-authentication server retransmission time [2-95](#)
  - switch-to-client frame-retransmission number [2-88 to 2-89](#)
  - switch-to-client retransmission time [2-95](#)
- port-channel load-balance command [2-266](#)
- Port Fast, for spanning tree [2-522](#)
- port ranges, defining [2-62](#)
- ports, debugging [B-53](#)
- ports, protected [2-562](#)
- port security
  - aging [2-558](#)
  - debug messages, display [B-55](#)
  - enabling [2-553](#)
  - violation error recovery [2-105](#)
- port trust states for QoS [2-240](#)
- port types, MVR [2-250](#)
- power information, displaying [2-336](#)
- priority-queue command [2-268](#)
- privileged EXEC mode [1-2, 1-3](#)

- product identification information, displaying [2-360](#)
- protected ports, displaying [2-355](#)
- pruning
  - VLANs [2-564](#)
  - VTP
    - displaying interface information [2-350](#)
    - enabling [2-603, 2-607](#)
- pruning-eligible VLAN list [2-565](#)
- PVST+
  - See STP

---

## Q

- QoS
  - auto-QoS
    - configuring [2-13](#)
    - debug messages, display [B-2](#)
    - displaying [2-299](#)
  - class maps
    - creating [2-32](#)
    - defining the match criteria [2-200](#)
    - displaying [2-307](#)
  - defining the CoS value for an incoming packet [2-210](#)
  - displaying configuration information [2-299, 2-410](#)
  - DSCP transparency [2-222](#)
  - DSCP trusted ports
    - applying DSCP-to-DSCP-mutation map to [2-212](#)
    - defining DSCP-to-DSCP-mutation map [2-214](#)
  - egress queues
    - allocating buffers [2-218](#)
    - defining the CoS output queue threshold map [2-236](#)
    - defining the DSCP output queue threshold map [2-238](#)
    - displaying buffer allocations [2-414](#)
    - displaying CoS output queue threshold map [2-418](#)
    - displaying DSCP output queue threshold map [2-418](#)
    - displaying queueing strategy [2-414](#)

**QoS (continued)**

## egress queues (continued)

- displaying queue-set settings [2-421](#)
- enabling bandwidth shaping and scheduling [2-534](#)
- enabling bandwidth sharing and scheduling [2-536](#)
- limiting the maximum output on a port [2-532](#)
- mapping a port to a queue-set [2-270](#)
- mapping CoS values to a queue and threshold [2-236](#)
- mapping DSCP values to a queue and threshold [2-238](#)
- setting maximum and reserved memory allocations [2-220](#)
- setting WTD thresholds [2-220](#)

enabling [2-206](#)

## ingress queues

- allocating buffers [2-226](#)
- assigning SRR scheduling weights [2-224](#)
- defining the CoS input queue threshold map [2-228](#)
- defining the DSCP input queue threshold map [2-230](#)
- displaying buffer allocations [2-414](#)
- displaying CoS input queue threshold map [2-418](#)
- displaying DSCP input queue threshold map [2-418](#)
- displaying queueing strategy [2-414](#)
- displaying settings for [2-412](#)
- enabling the priority queue [2-232](#)
- mapping CoS values to a queue and threshold [2-228](#)
- mapping DSCP values to a queue and threshold [2-230](#)
- setting WTD thresholds [2-234](#)

## maps

- defining [2-214, 2-228, 2-230, 2-236, 2-238](#)
- displaying [2-418](#)

**QoS (continued)**

## policy maps

- applying an aggregate policer [2-262](#)
- applying to an interface [2-286, 2-290](#)
- creating [2-264](#)
- defining policers [2-208, 2-260](#)
- displaying policers [2-411](#)
- displaying policy maps [2-437](#)
- hierarchical [2-265](#)
- policed-DSCP map [2-214](#)
- setting DSCP or IP precedence values [2-288](#)
- traffic classifications [2-30](#)
- trust states [2-577](#)

port trust states [2-240](#)queues, enabling the expedite [2-268](#)

## statistics

- in-profile and out-of-profile packets [2-414](#)
- packets enqueued or dropped [2-414](#)
- sent and received CoS values [2-414](#)
- sent and received DSCP values [2-414](#)

trusted boundary for IP phones [2-240](#)

## quality of service

## See QoS

querytime, MVR [2-247](#)queue-set command [2-270](#)

---

**R**radius-server dead-criteria command [2-273](#)radius-server host command [2-271](#)

## rapid per-VLAN spanning-tree plus

## See STP

## rapid PVST+

## See STP

rcommand command [2-275](#)re-authenticating IEEE 802.1x-enabled ports [2-93](#)

## re-authentication

- periodic [2-94](#)
- time between attempts [2-95](#)

receiver ports, MVR [2-250](#)  
 receiving flow-control packets [2-110](#)  
 recovery mechanism  
     causes [2-105](#)  
     display [2-36, 2-305, 2-337, 2-341](#)  
     timer interval [2-105](#)  
 redundancy for cluster switches [2-59](#)  
 remote-span command [2-277](#)  
 Remote Switched Port Analyzer  
     See RSPAN  
 rename (boot loader) command [A-16](#)  
 renew ip dhcp snooping database command [2-279](#)  
 requirements  
     cluster [xviii](#)  
     device manager [xviii](#)  
     Network Assistant [xviii](#)  
 reset (boot loader) command [A-17](#)  
 reset command [2-596](#)  
 resource templates, displaying [2-442](#)  
 restricted VLAN  
     See dot1x auth-fail vlan  
 rmdir (boot loader) command [A-18](#)  
 rmon collection stats command [2-281](#)  
 root guard, for spanning tree [2-495](#)  
 RSPAN  
     configuring [2-242](#)  
     displaying [2-424](#)  
     filter RSPAN traffic [2-242](#)  
     remote-span command [2-277](#)  
     sessions  
         displaying [2-424](#)

## S

sdm prefer command [2-282](#)  
 SDM templates  
     displaying [2-442](#)  
 secure ports, limitations [2-555](#)  
 sending flow-control packets [2-110](#)  
 service password-recovery command [2-284](#)  
 service-policy command [2-286](#)  
 set (boot loader) command [A-19](#)  
 set command [2-288](#)  
 setup command [2-290](#)  
 setup express command [2-293](#)  
 show access-lists command [2-295](#)  
 show archive status command [2-298](#)  
 show auto qos command [2-299](#)  
 show boot command [2-303](#)  
 show cable-diagnostics tdr command [2-305](#)  
 show changes command [2-596](#)  
 show class-map command [2-307](#)  
 show cluster candidates command [2-310](#)  
 show cluster command [2-308](#)  
 show cluster members command [2-312](#)  
 show controllers cpu-interface command [2-314](#)  
 show controllers ethernet-controller command [2-316](#)  
 show controllers tcam command [2-323](#)  
 show controller utilization command [2-325](#)  
 show current command [2-596](#)  
 show dot1x command [2-327](#)  
 show dtp [2-331](#)  
 show eap command [2-333](#)  
 show env command [2-336](#)  
 show errdisable detect command [2-337](#)  
 show errdisable flap-values command [2-339](#)  
 show errdisable recovery command [2-341](#)  
 show etherchannel command [2-343](#)  
 show fallback profile command [2-346](#)  
 show flowcontrol command [2-348](#)  
 show interfaces command [2-350](#)  
 show interfaces counters command [2-358](#)  
 show inventory command [2-360](#)  
 show ip dhcp snooping binding command [2-362](#)  
 show ip dhcp snooping command [2-361](#)  
 show ip dhcp snooping database command [2-364, 2-366](#)  
 show ip igmp profile command [2-369](#)  
 show ip igmp snooping command [2-370](#)

- show ip igmp snooping groups command [2-373](#)
- show ip igmp snooping mrouter command [2-375](#)
- show ip igmp snooping querier command [2-377](#)
- show lacp command [2-379](#)
- show link state group command [2-385](#)
- show mac access-group command [2-388](#)
- show mac address-table address command [2-392](#)
- show mac address-table aging time command [2-394](#)
- show mac address-table command [2-390](#)
- show mac address-table count command [2-396](#)
- show mac address-table dynamic command [2-398](#)
- show mac address-table interface command [2-400](#)
- show mac address-table move update command [2-402](#)
- show mac address-table notification command [2-42, 2-404, B-19](#)
- show mac address-table static command [2-406](#)
- show mac address-table vlan command [2-408](#)
- show mls qos aggregate-policer command [2-411](#)
- show mls qos command [2-410](#)
- show mls qos input-queue command [2-412](#)
- show mls qos interface command [2-414](#)
- show mls qos maps command [2-418](#)
- show mls qos queue-set command [2-421](#)
- show mls qos vlan command [2-423](#)
- show monitor command [2-424](#)
- show mvr command [2-426](#)
- show mvr interface command [2-428](#)
- show mvr members command [2-430](#)
- show pagp command [2-432](#)
- show parser macro command [2-434](#)
- show platform acl command [C-2](#)
- show platform backup interface command [C-3](#)
- show platform etherchannel command [C-4](#)
- show platform forward command [C-5](#)
- show platform igmp snooping command [C-7](#)
- show platform layer4op command [C-9](#)
- show platform mac-address-table command [C-10](#)
- show platform messaging command [C-11](#)
- show platform monitor command [C-12](#)
- show platform mvr table command [C-13](#)
- show platform pm command [C-14](#)
- show platform port-asic command [C-15](#)
- show platform port-security command [C-20](#)
- show platform qos command [C-21](#)
- show platform resource-manager command [C-22](#)
- show platform snmp counters command [C-24](#)
- show platform spanning-tree command [C-25](#)
- show platform stp-instance command [C-26](#)
- show platform team command [C-27](#)
- show platform vlan command [C-29](#)
- show policy-map command [2-437](#)
- show port security command [2-439](#)
- show proposed command [2-596](#)
- show sdm prefer command [2-442](#)
- show setup express command [2-444](#)
- show spanning-tree command [2-445](#)
- show storm-control command [2-451](#)
- show system mtu command [2-453](#)
- show trust command [2-577](#)
- show udd command [2-454](#)
- show version command [2-457](#)
- show vlan command [2-459](#)
- show vlan command, fields [2-460](#)
- show vmmps command [2-462](#)
- show vtp command [2-465](#)
- shutdown command [2-470](#)
- shutdown vlan command [2-471](#)
- small violation-rate command [2-472](#)
- Smartports macros
  - See macros
- SNMP host, specifying [2-478](#)
- SNMP informs, enabling the sending of [2-474](#)
- snmp-server enable traps command [2-474](#)
- snmp-server host command [2-478](#)
- snmp trap mac-notification command [2-482](#)

## SNMP traps

- enabling MAC address notification trap [2-482](#)
- enabling the MAC address notification feature [2-185](#)
- enabling the sending of [2-474](#)

## SoftPhone

- See Cisco SoftPhone

## software images

- deleting [2-64](#)
- downloading [2-6](#)
- upgrading [2-6](#)
- uploading [2-11](#)

software version, displaying [2-457](#)source ports, MVR [2-250](#)

## SPAN

- configuring [2-242](#)
- debug messages, display [B-20](#)
- displaying [2-424](#)
- filter SPAN traffic [2-242](#)
- sessions
  - add interfaces to [2-242](#)
  - displaying [2-424](#)
  - start new [2-242](#)

- spanning-tree backbonefast command [2-484](#)
- spanning-tree bpdupfilter command [2-485](#)
- spanning-tree bpduguard command [2-487](#)
- spanning-tree cost command [2-489](#)
- spanning-tree etherchannel command [2-491](#)
- spanning-tree extend system-id command [2-493](#)
- spanning-tree guard command [2-495](#)
- spanning-tree link-type command [2-497](#)
- spanning-tree loopguard default command [2-499](#)
- spanning-tree mode command [2-501](#)
- spanning-tree mst configuration command [2-503](#)
- spanning-tree mst cost command [2-505](#)
- spanning-tree mst forward-time command [2-507](#)
- spanning-tree mst hello-time command [2-508](#)
- spanning-tree mst max-age command [2-509](#)
- spanning-tree mst max-hops command [2-510](#)
- spanning-tree mst port-priority command [2-512](#)

spanning-tree mst pre-standard command [2-514](#)spanning-tree mst priority command [2-515](#)spanning-tree mst root command [2-516](#)spanning-tree portfast (global configuration) command [2-520](#)spanning-tree portfast (interface configuration) command [2-522](#)spanning-tree port-priority command [2-518](#)

## Spanning Tree Protocol

## See STP

spanning-tree transmit hold-count command [2-524](#)spanning-tree uplinkfast command [2-525](#)spanning-tree vlan command [2-527](#)speed command [2-530](#)srr-queue bandwidth limit command [2-532](#)srr-queue bandwidth share command [2-536](#)SSH, configuring version [2-163](#)static-access ports, configuring [2-541](#)statistics, Ethernet group [2-281](#)sticky learning, enabling [2-553](#)storm-control command [2-538](#)

## STP

BackboneFast [2-484](#)counters, clearing [2-46](#)

## debug messages, display

BackboneFast events [B-59](#)MSTP [B-62](#)optimized BPDUs handling [B-61](#)spanning-tree activity [B-57](#)switch shim [B-64](#)transmitted and received BPDUs [B-60](#)UplinkFast [B-66](#)detection of indirect link failures [2-484](#)EtherChannel misconfiguration [2-491](#)extended system ID [2-493](#)path cost [2-489](#)protocol modes [2-501](#)

**STP (continued)**

## root port

- accelerating choice of new [2-525](#)
- loop guard [2-495](#)
- preventing from becoming designated [2-495](#)
- restricting which can be root [2-495](#)
- root guard [2-495](#)
- UplinkFast [2-525](#)

## root switch

- affects of extended system ID [2-493, 2-528](#)
- hello-time [2-527](#)
- interval between BDPUs messages [2-527](#)
- interval between hello BPDU messages [2-527](#)
- max-age [2-527](#)
- port priority for selection of [2-518](#)
- primary or secondary [2-527](#)
- switch priority [2-527](#)

## state changes

- blocking to forwarding state [2-522](#)
- enabling BPDU filtering [2-485, 2-520](#)
- enabling BPDU guard [2-487, 2-520](#)
- enabling Port Fast [2-520, 2-522](#)
- enabling timer to recover from error state [2-105](#)
- forward-delay time [2-527](#)
- length of listening and learning states [2-527](#)
- shutting down Port Fast-enabled ports [2-520](#)

state information display [2-445](#)VLAN options [2-515, 2-527](#)

## Switched Port Analyzer

See SPAN

- switchport access command [2-541](#)
- switchport backup interface command [2-543](#)
- switchport block command [2-547](#)
- switchport host command [2-548](#)
- switchport mode command [2-549](#)
- switchport nonegotiate command [2-551](#)
- switchport port-security aging command [2-558](#)
- switchport port-security command [2-553](#)
- switchport priority extend command [2-560](#)

- switchport protected command [2-562](#)
- switchports, displaying [2-350](#)
- switchport trunk command [2-564](#)
- switchport voice vlan command [2-567](#)
- system message logging, save message to flash [2-176](#)
- system mtu command [2-569](#)
- system resource templates [2-282](#)

---

**T**

- tar files, creating, listing, and extracting [2-8](#)
- TDR, running [2-571](#)
- Telnet, using to communicate to cluster switches [2-275](#)
- temperature information, displaying [2-336](#)
- templates, SDM [2-282](#)
- templates, system resources [2-282](#)
- test cable-diagnostics tdr command [2-571](#)
- traceroute mac command [2-572](#)
- traceroute mac ip command [2-575](#)
- trunking, VLAN mode [2-549](#)
- trunk mode [2-549](#)
- trunk ports [2-549](#)
- trunks, to non-DTP device [2-550](#)
- trusted boundary for QoS [2-240](#)
- trusted port states for QoS [2-240](#)
- type (boot loader) command [A-22](#)

---

**U**

## UDLD

- aggressive mode [2-579, 2-581](#)
- debug messages, display [B-74](#)
- enable globally [2-579](#)
- enable per interface [2-581](#)
- error recovery timer [2-105](#)
- message timer [2-579](#)
- normal mode [2-579, 2-581](#)

**UDLD (continued)**

- reset a shutdown interface [2-583](#)
- status [2-454](#)
- udld command [2-579](#)
- udld port command [2-581](#)
- udld reset command [2-583](#)
- unicast storm control [2-538](#)
- UniDirectional Link Detection
  - See UDLD
- unknown multicast traffic, preventing [2-547](#)
- unknown unicast traffic, preventing [2-547](#)
- unset (boot loader) command [A-23](#)
- upgrading
  - software images
    - downloading [2-6](#)
    - monitoring status of [2-298](#)
- upgrading information
  - See release notes
- UplinkFast, for STP [2-525](#)
- user EXEC mode [1-2, 1-3](#)

**V**

- version (boot loader) command [A-25](#)
- vlan (global configuration) command [2-584](#)
- vlan (VLAN configuration) command [2-589](#)
- VLAN configuration
  - rules [2-587, 2-591](#)
  - saving [2-584, 2-593](#)
- VLAN configuration mode
  - commands
    - VLAN [2-589](#)
    - VTP [2-607](#)
  - description [1-5](#)
  - entering [2-595](#)
  - summary [1-2](#)
- vlan database command [2-595](#)
- VLAN ID range [2-584, 2-589](#)

**VLAN Query Protocol**

See VQP

**VLANs**

- adding [2-584](#)
- configuring [2-584, 2-589](#)
- debug messages, display
  - ISL [B-71](#)
  - VLAN IOS file system error tests [B-69](#)
  - VLAN manager activity [B-67](#)
  - VTP [B-72](#)
- displaying configurations [2-459](#)
- enabling guest VLAN supplicant [2-71, 2-81, 2-109](#)
- extended-range [2-584](#)
- MAC addresses
  - displaying [2-408](#)
  - number of [2-396](#)
- media types [2-586, 2-591](#)
- normal-range [2-584, 2-589](#)
- restarting [2-471](#)
- saving the configuration [2-584](#)
- shutting down [2-471](#)
- SNMP traps for VTP [2-476, 2-479](#)
- suspending [2-471](#)
- variables [2-589](#)

**VLAN Trunking Protocol**

See VTP

**VMPS**

- configuring servers [2-601](#)
- displaying [2-462](#)
- error recovery timer [2-105](#)
- reconfirming dynamic VLAN assignments [2-598](#)
- vmmps reconfirm (global configuration) command [2-599](#)
- vmmps reconfirm (privileged EXEC) command [2-598](#)
- vmmps retry command [2-600](#)
- vmmps server command [2-601](#)
- voice VLAN
  - configuring [2-567](#)
  - setting port priority [2-560](#)

## VQP

- and dynamic-access ports [2-542](#)
- clearing client statistics [2-48](#)
- displaying information [2-462](#)
- per-server retry count [2-600](#)
- reconfirmation interval [2-599](#)
- reconfirming dynamic VLAN assignments [2-598](#)

## VTP

- changing characteristics [2-603](#)
  - clearing pruning counters [2-49](#)
  - configuring
    - domain name [2-603, 2-607](#)
    - file name [2-603](#)
    - mode [2-603, 2-607](#)
    - password [2-603, 2-607](#)
  - counters display fields [2-466](#)
  - displaying information [2-465](#)
  - enabling
    - pruning [2-603, 2-607](#)
    - Version 2 [2-603, 2-607](#)
  - mode [2-603, 2-607](#)
  - pruning [2-603, 2-607](#)
  - saving the configuration [2-584, 2-593](#)
  - statistics [2-465](#)
  - status [2-465](#)
  - status display fields [2-468](#)
- vtp (global configuration) command [2-603](#)
- vtp (VLAN configuration) command [2-607](#)