



## INDEX

### A

- aaa accounting dot1x command [1](#)
- aaa authentication dot1x command [3, 801](#)
- aaa authorization network command [5, 22, 28, 30, 32, 34, 36, 129, 275, 457, 7, 35](#)
- AAA methods [3, 801](#)
- access control entries
  - See ACEs
- access control lists
  - See ACLs
- access groups
  - IP [181](#)
  - MAC, displaying [579](#)
- access mode [766](#)
- access ports [766](#)
- ACEs [114, 388](#)
- ACLs
  - deny [112](#)
  - displaying [440](#)
  - for non-IP protocols [279](#)
  - IP [181](#)
  - on Layer 2 interfaces [181](#)
  - permit [386](#)
- address aliasing [367](#)
- aggregate-port learner [380](#)
- allowed VLANs [781](#)
- archive copy-sw command [6](#)
- archive download-sw command [9](#)
- archive tar command [13](#)
- archive upload-sw command [16](#)
- arp access-list command [18](#)
- authentication command bounce-port ignore [20](#)
- authentication command disable-port ignore [21](#)
- authentication control-direction command [22](#)
- authentication event command [24](#)
- authentication failed VLAN
  - See dot1x auth-fail vlan
- authentication fallback command [28](#)
- authentication host-mode command [30](#)
- authentication mac-move permit command [32](#)
- authentication open command [34](#)
- authentication order command [36](#)
- authentication periodic command [38](#)
- authentication port-control command [40](#)
- authentication priority command [42](#)
- authentication timer command [44](#)
- authentication violation command [46](#)
- auth-fail max-attempts
  - See dot1x auth-fail max-attempts
- auth-fail vlan
  - See dot1x auth-fail vlan
- auth open command [34](#)
- auth order command [36](#)
- authorization state of controlled port [147](#)
- auth timer command [44](#)
- autonegotiation of duplex mode [159](#)
- auto qos voip command [48](#)
- Auto Smartports macros
  - LLDP [304](#)

## B

BackboneFast, for STP [691](#)

backup interfaces

- configuring [759](#)
- displaying [512](#)

boot (boot loader) command [2](#)

boot auto-copy-sw command [53](#)

boot config-file command [54](#)

boot enable-break command [55](#)

boot helper command [56](#)

boot helper-config file command [57](#)

booting

- Cisco IOS image [60](#)
- displaying environment variables [453](#)
- interrupting [55](#)
- manually [58](#)

boot loader

- accessing [1](#)
- booting
  - Cisco IOS image [2](#)
  - helper image [56](#)
- directories
  - creating [14](#)
  - displaying a list of [7](#)
  - removing [18](#)
- displaying
  - available commands [12](#)
  - memory heap utilization [13](#)
  - version [25](#)
- environment variables
  - described [19](#)
  - displaying settings [19](#)
  - location of [20](#)
  - setting [19](#)
  - unsetting [23](#)

## boot loader (continued)

- files
  - copying [5](#)
  - deleting [6](#)
  - displaying a list of [7](#)
  - displaying the contents of [4, 15, 22](#)
  - renaming [16](#)
- file system
  - formatting [10](#)
  - initializing flash [9](#)
  - running a consistency check [11](#)
- prompt [1](#)
- resetting the system [17](#)

boot manual command [58](#)

boot private-config-file command [59](#)

boot system command [60](#)

BPDU filtering, for spanning tree [692, 727](#)

BPDU guard, for spanning tree [694, 727](#)

broadcast storm control [748](#)

## C

candidate switches

- See clusters

cat (boot loader) command [4](#)

channel-group command [62](#)

channel-protocol command [66](#)

Cisco SoftPhone

- auto-QoS configuration [48](#)
- trusting packets sent from [359](#)

CISP

- See Client Information Signalling Protocol

cisp

- debug platform cisp command [35](#)

cisp enable command [67](#)

class command [68](#)

class-map command [70](#)

- class maps
  - creating 70
  - defining the match criteria 316
  - displaying 458
- class of service
  - See CoS
- clear dot1x command 72
- clear eap sessions command 73
- clear errdisable interface 74
- clear ip arp inspection log command 75
- clear ip arp inspection statistics command 76
- clear ip dhcp snooping database command 77
- clear lacp command 79
- clear logging onboard command 80
- clear mac address-table command 81, 83
- clear nmsp statistics command 84
- clear pagp command 85
- clear port-security command 86
- clear spanning-tree counters command 88
- clear spanning-tree detected-protocols command 89
- clear vmmps statistics command 90
- clear vtp counters command 91
- Client Information Signalling Protocol 67, 129, 457, 7, 35
- cluster commander-address command 92
- cluster discovery hop-count command 94
- cluster enable command 95
- cluster holdtime command 96
- cluster member command 97
- cluster outside-interface command 99
- cluster run command 100
- clusters
  - adding candidates 97
  - binding to HSRP group 101
  - building manually 97
  - communicating with
    - devices outside the cluster 99
    - members by using Telnet 412
  - debug messages, display 8
- clusters (continued)
  - displaying
    - candidate switches 461
    - debug messages 8
    - member switches 463
    - status 459
  - hop-count limit for extended discovery 94
  - HSRP standby groups 101
  - redundancy 101
  - SNMP trap 681
- cluster standby-group command 101
- cluster timer command 103
- command modes defined 2
- command switch
  - See clusters
- configuration files
  - password recovery disable considerations 1
  - specifying the name 54, 59
- configuring multiple interfaces 177
- copy (boot loader) command 5
- copy logging onboard command 104
- CoS
  - assigning default value to incoming packets 327
  - overriding the incoming value 327
- CoS-to-DSCP map 331
- CPU ASIC statistics, displaying 465
- crashinfo files 167
- critical VLAN 25

---

## D

- debug authentication 2
- debug auto qos command 4
- debug backup command 6
- debug cisp command 7
- debug cluster command 8
- debug dot1x command 10
- debug dtp command 12
- debug eap command 13

- debug etherchannel command 14
- debug ilpower command 15
- debug interface command 16
- debug ip dhcp snooping command 17
- debug ip igmp filter command 19
- debug ip igmp max-groups command 20
- debug ip igmp snooping command 21
- debug ip verify source packet command 18
- debug lacp command 22
- debug lldp packets command 23
- debug mac-notification command 24
- debug macro command 25
- debug matm command 26
- debug matm move update command 27
- debug monitor command 28
- debug mvrdbg command 29
- debug nmsp command 30
- debug nvram command 31
- debug pagp command 32
- debug platform acl command 33
- debug platform backup interface command 34
- debug platform cisp command 35
- debug platform cli-redirection main command 36
- debug platform configuration command 37, 43
- debug platform cpu-queues command 38
- debug platform dot1x command 40
- debug platform etherchannel command 41
- debug platform forw-tcam command 42
- debug platform ip arp inspection command 44
- debug platform ip dhcp command 45
- debug platform ip igmp snooping command 46
- debug platform ip source-guard command 48
- debug platform led command 49
- debug platform matm command 50
- debug platform messaging application command 51
- debug platform phy command 52
- debug platform pm command 54
- debug platform port-asic command 56
- debug platform port-security command 57
- debug platform qos-acl-tcam command 58
- debug platform resource-manager command 59
- debug platform snmp command 60
- debug platform span command 61
- debug platform stack-manager command 62
- debug platform supervisor-asic command 63
- debug platform sw-bridge command 64
- debug platform tcam command 65
- debug platform udd command 67
- debug platform vlan command 68
- debug pm command 69
- debug port-security command 71
- debug qos-manager command 72
- debug spanning-tree backbonefast command 75
- debug spanning-tree bpdu command 76
- debug spanning-tree bpdu-opt command 77
- debug spanning-tree command 73
- debug spanning-tree mstp command 78
- debug spanning-tree switch command 80
- debug spanning-tree uplinkfast command 82
- debug sw-vlan command 83
- debug sw-vlan ifs command 85
- debug sw-vlan notification command 86
- debug sw-vlan vtp command 88
- debug udd command 90
- debug vqpc command 92
- define interface-range command 106
- delete (boot loader) command 6
- delete command 108
- deny (ARP access-list configuration) command 110
- deny command 112
- detect mechanism, causes 160

- DHCP snooping
  - accepting untrusted packets from edge switch [210](#)
  - enabling
    - on a VLAN [216](#)
    - option 82 [208, 210](#)
    - trust on an interface [214](#)
  - error recovery timer [165](#)
  - rate limiting [212](#)
- DHCP snooping binding database
  - binding file, configuring [205](#)
  - bindings
    - adding [203](#)
    - deleting [203](#)
    - displaying [530](#)
  - clearing database agent statistics [77](#)
  - database agent, configuring [205](#)
  - displaying
    - binding entries [530](#)
    - database agent status [532, 534](#)
  - renewing [420](#)
- dir (boot loader) command [7](#)
- directories, deleting [108](#)
- domain name, VTP [811](#)
- dot1x auth-fail max-attempts [123](#)
- dot1x auth-fail vlan [125](#)
- dot1x command [121](#)
- dot1x control-direction command [127](#)
- dot1x credentials (global configuration) command [129](#)
- dot1x critical global configuration command [130](#)
- dot1x critical interface configuration command [132](#)
- dot1x default command [134](#)
- dot1x fallback command [135](#)
- dot1x guest-vlan command [136](#)
- dot1x host-mode command [138](#)
- dot1x initialize command [140](#)
- dot1x mac-auth-bypass command [141](#)
- dot1x max-reauth-req command [143](#)
- dot1x max-req command [145](#)
- dot1x pae command [146](#)
- dot1x port-control command [147](#)
- dot1x re-authenticate command [149](#)
- dot1x reauthentication command [150](#)
- dot1x supplicant force-multicast command [151](#)
- dot1x test eapol-capable command [152](#)
- dot1x test timeout command [153](#)
- dot1x timeout command [154](#)
- dot1x violation-mode command [157](#)
- DSCP-to-CoS map [331](#)
- DSCP-to-DSCP-mutation map [331](#)
- DTP [767](#)
- DTP flap
  - error detection for [160](#)
  - error recovery timer [165](#)
- DTP negotiation [768](#)
- dual-purpose uplink ports
  - displaying configurable options [515](#)
  - displaying the active media [519](#)
  - selecting the type [319](#)
- duplex command [158](#)
- dynamic-access ports
  - configuring [757](#)
  - restrictions [758](#)
- dynamic ARP inspection
  - ARP ACLs
    - apply to a VLAN [189](#)
    - define [18](#)
    - deny packets [110](#)
    - display [444](#)
    - permit packets [384](#)
  - clear
    - log buffer [75](#)
    - statistics [76](#)
  - display
    - ARP ACLs [444](#)
    - configuration and operating state [525](#)
    - log buffer [525](#)
    - statistics [525](#)
    - trust state and rate limit [525](#)

**dynamic ARP inspection (continued)**

- enable per VLAN [199](#)
- log buffer
  - clear [75](#)
  - configure [193](#)
  - display [525](#)
- rate-limit incoming ARP packets [191](#)
- statistics
  - clear [76](#)
  - display [525](#)
- trusted interface state [195](#)
- type of packet logged [200](#)
- validation checks [197](#)

dynamic auto VLAN membership mode [766](#)

dynamic desirable VLAN membership mode [766](#)

Dynamic Host Configuration Protocol (DHCP)

See DHCP snooping

Dynamic Trunking Protocol

See DTP

**E**

EAP-request/identity frame

- maximum number to send [145](#)
- response time before retransmitting [154](#)

environment variables, displaying [453](#)

errdisable detect cause command [160](#)

errdisable detect cause small-frame comand [162](#)

errdisable recovery cause small-frame [164](#)

errdisable recovery command [165](#)

error conditions, displaying [501](#)

error disable detection [160](#)

error-disabled interfaces, displaying [512](#)

EtherChannel

assigning Ethernet interface to channel group [62](#)

creating port-channel logical interface [175](#)

debug EtherChannel/PAgP, display [14](#)

debug platform-specific events, display [41](#)

displaying [505](#)

interface information, displaying [512](#)

LACP

clearing channel-group information [79, 80](#)

debug messages, display [22](#)

displaying [560](#)

modes [62](#)

port priority for hot-standby ports [260](#)

restricting a protocol [66](#)

system priority [262](#)

load-distribution methods [395](#)

PAgP

aggregate-port learner [380](#)

clearing channel-group information [85](#)

debug messages, display [32](#)

displaying [629](#)

error detection for [160](#)

error recovery timer [165](#)

learn method [380](#)

modes [62](#)

physical-port learner [380](#)

priority of interface for transmitted traffic [382](#)

Ethernet controller, internal register display [467](#)

Ethernet controller, stackport information [474](#)

Ethernet statistics, collecting [423](#)

exception crashinfo command [167, 173](#)

extended discovery of candidate switches [94](#)

extended-range VLANs

and allowed VLAN list [781](#)

and pruning-eligible list [781](#)

extended system ID for STP [700](#)

## F

fallback profile command [169](#)  
 fallback profiles, displaying [508](#)  
 fan information, displaying [497](#)  
 file name, VTP [811](#)  
 files, deleting [108](#)  
 flash\_init (boot loader) command [9](#)  
 flexible authentication ordering [36](#)  
 Flex Links  
     configuring [759](#)  
     configuring preferred VLAN [761](#)  
     displaying [512](#)  
 flowcontrol command [171](#)  
 format (boot loader) command [10](#)  
 forwarding results, display [5](#)  
 frame forwarding information, displaying [5](#)  
 front-end controller, counter and status information [7](#)  
 fsck (boot loader) command [11](#)

## G

global configuration mode [2, 4](#)

## H

hardware ACL statistics [440](#)  
 help (boot loader) command [12](#)  
 hierarchical policy maps [394](#)  
 hop-count limit for clusters [94](#)  
 host connection, port configuration [765](#)  
 Hot Standby Router Protocol  
     See HSRP  
 HSRP  
     binding HSRP group to cluster [101](#)  
     standby group [101](#)

## I

IEEE 802.1x  
     and switchport modes [767](#)  
     violation error recovery [165](#)  
     See also port-based authentication  
 IEEE 802.1X Port Based Authentication  
     enabling guest VLAN supplicant [124, 135, 170](#)  
 IGMP filters  
     applying [219](#)  
     debug messages, display [19](#)  
 IGMP groups, setting maximum [221](#)  
 IGMP maximum groups, debugging [20](#)  
 IGMP profiles  
     creating [223](#)  
     displaying [537](#)  
 IGMP snooping  
     adding ports as a static member of a group [239](#)  
     displaying [538, 543, 545](#)  
     enabling [225](#)  
     enabling the configurable-leave timer [227](#)  
     enabling the Immediate-Leave feature [236](#)  
     flooding query count [233](#)  
     interface topology change notification behavior [235](#)  
     multicast table [541](#)  
     querier [229](#)  
     query solicitation [233](#)  
     report suppression [231](#)  
     switch topology change notification behavior [233](#)  
 images  
     See software images  
 Immediate-Leave feature, MVR [369](#)  
 immediate-leave processing [236](#)  
 Immediate-Leave processing, IPv6 [258](#)  
 interface configuration mode [3, 4](#)  
 interface port-channel command [175](#)  
 interface range command [177](#)  
 interface-range macros [106](#)

## interfaces

- assigning Ethernet interface to channel group [62](#)
- configuring [158](#)
- configuring multiple [177](#)
- creating port-channel logical [175](#)
- debug messages, display [16](#)
- disabling [677](#)
- displaying the MAC address table [591](#)
- restarting [677](#)

interface speed, configuring [737](#)

interface vlan command [180](#)

internal registers, displaying [467, 474, 481](#)

## Internet Group Management Protocol

See IGMP

## invalid GBIC

- error detection for [160](#)
- error recovery timer [165](#)

ip access-group command [181](#)

ip address command [183](#)

IP addresses, setting [183](#)

ip admission command [185](#)

ip admission name proxy http command [187](#)

ip arp inspection filter vlan command [189](#)

ip arp inspection limit command [191](#)

ip arp inspection log-buffer command [193](#)

ip arp inspection trust command [195](#)

ip arp inspection validate command [197](#)

ip arp inspection vlan command [199](#)

ip arp inspection vlan logging command [200](#)

## IP DHCP snooping

See DHCP snooping

ip dhcp snooping binding command [203](#)

ip dhcp snooping command [202](#)

ip dhcp snooping database command [205](#)

ip dhcp snooping information option allow-untrusted command [210](#)

ip dhcp snooping information option command [208](#)

ip dhcp snooping limit rate command [212](#)

ip dhcp snooping trust command [214](#)

ip dhcp snooping verify command [215](#)

ip dhcp snooping vlan command [216](#)

ip dhcp snooping vlan information option format-type circuit-id string command [217](#)

ip igmp filter command [219](#)

ip igmp max-groups command [221](#)

ip igmp profile command [223](#)

ip igmp snooping command [225](#)

ip igmp snooping last-member-query-interval command [227](#)

ip igmp snooping querier command [229](#)

ip igmp snooping report-suppression command [231](#)

ip igmp snooping tcn command [233](#)

ip igmp snooping tcn flood command [235](#)

ip igmp snooping vlan immediate-leave command [236](#)

ip igmp snooping vlan mrouter command [237](#)

ip igmp snooping vlan static command [239](#)

IP multicast addresses [366](#)

## IP phones

auto-QoS configuration [48](#)

trusting packets sent from [359](#)

IP-precedence-to-DSCP map [331](#)

ip source binding command [241](#)

## IP source guard

disabling [245](#)

displaying

binding entries [547](#)

configuration [548](#)

dynamic binding entries only [530](#)

enabling [245](#)

static IP source bindings [241](#)

ip ssh command [243](#)

ipv6 mld snooping command [246](#)

ipv6 mld snooping last-listener-query count command [248](#)

ipv6 mld snooping last-listener-query-interval command [250](#)

ipv6 mld snooping listener-message-suppression command [252](#)

ipv6 mld snooping robustness-variable command [254](#)



[ipv6 mld snooping tcn command](#) [256](#)  
[ipv6 mld snooping vlan command](#) [258](#)  
[IPv6 SDM template](#) [424](#)  
[ip verify source command](#) [245](#)

## J

[jumbo frames](#)  
     See [MTU](#)

## L

[LACP](#)  
     See [EtherChannel](#)  
[lacp port-priority command](#) [260](#)  
[lacp system-priority command](#) [262](#)  
[Layer 2 traceroute](#)  
     [IP addresses](#) [792](#)  
     [MAC addresses](#) [789](#)  
[line configuration mode](#) [3, 5](#)  
[Link Aggregation Control Protocol](#)  
     See [EtherChannel](#)  
[link flap](#)  
     [error detection for](#) [160](#)  
     [error recovery timer](#) [165](#)  
[link state group command](#) [268](#)  
[link state track command](#) [270](#)  
[load-distribution methods for EtherChannel](#) [395](#)  
[location \(global configuration\) command](#) [264](#)  
[location \(interface configuration\) command](#) [266](#)  
[logging event command](#) [271](#)  
[logging event power-inline-status command](#) [272](#)  
[logging file command](#) [273](#)  
[logical interface](#) [175](#)  
[loopback error](#)  
     [detection for](#) [160](#)  
     [recovery timer](#) [165](#)  
[loop guard, for spanning tree](#) [702, 706](#)

## M

[mab request format attribute 32 command](#) [275](#)  
[mac access-group command](#) [277](#)  
[MAC access-groups, displaying](#) [579](#)  
[MAC access list configuration mode](#) [279](#)  
[mac access-list extended command](#) [279](#)  
[MAC access lists](#) [112](#)  
[MAC addresses](#)  
     [disabling MAC address learning per VLAN](#) [282](#)  
     [displaying](#)  
         [aging time](#) [585](#)  
         [all](#) [583](#)  
         [dynamic](#) [589](#)  
         [MAC address-table move updates](#) [594](#)  
         [notification settings](#) [593, 596](#)  
         [number of addresses in a VLAN](#) [587](#)  
         [per interface](#) [591](#)  
         [per VLAN](#) [600](#)  
         [static](#) [598](#)  
         [static and dynamic entries](#) [581](#)  
     [dynamic](#)  
         [aging time](#) [281](#)  
         [deleting](#) [81](#)  
         [displaying](#) [589](#)  
     [enabling MAC address notification](#) [286](#)  
     [enabling MAC address-table move update](#) [284](#)  
     [persistent stack](#) [745](#)  
     [static](#)  
         [adding and removing](#) [288](#)  
         [displaying](#) [598](#)  
         [dropping on an interface](#) [289](#)  
     [tables](#) [583](#)  
[MAC address notification, debugging](#) [24](#)  
[mac address-table aging-time](#) [277](#)  
[mac address-table aging-time command](#) [281](#)  
[mac address-table learning command](#) [282](#)  
[mac address-table move update command](#) [284](#)  
[mac address-table notification command](#) [286](#)

- mac address-table static command [288](#)
- mac address-table static drop command [289](#)
- macro apply command [291](#)
- macro auto device command [294](#)
- macro auto execute command [296](#)
- macro auto file command [302](#)
- macro auto global processing command [304](#)
- macro auto mac-address-group command [306](#)
- macro auto sticky command [308](#)
- macro description command [309](#)
- macro global command [310](#)
- macro global description command [313](#)
- macro name command [314](#)
- macros
  - adding a description [309](#)
  - adding a global description [313](#)
  - applying [310](#)
  - creating [314](#)
  - displaying [631](#)
  - interface range [106, 177](#)
  - specifying parameter values [310](#)
  - tracing [310](#)
- maps
  - QoS
    - defining [331](#)
    - displaying [611](#)
- match (class-map configuration) command [316](#)
- maximum transmission unit
  - See MTU
- mdix auto command [318](#)
- media-type (interface configuration) command [319](#)
- media-type rj45 (line configuration) command [321](#)
- member switches
  - See clusters
- memory (boot loader) command [13](#)
- mkdir (boot loader) command [14](#)
- MLD snooping
  - configuring [252, 254](#)
  - configuring queries [248, 250](#)
  - configuring topology change notification [256](#)
  - displaying [550, 552, 554, 556](#)
  - enabling [246](#)
- MLD snooping on a VLAN, enabling [258](#)
- mls qos aggregate-policer command [325](#)
- mls qos command [323](#)
- mls qos cos command [327](#)
- mls qos dscp-mutation command [329](#)
- mls qos map command [331](#)
- mls qos queue-set output buffers command [335](#)
- mls qos queue-set output threshold command [337](#)
- mls qos queue-set stack buffers command [339](#)
- mls qos rewrite ip dscp command [341](#)
- mls qos srr-queue input bandwidth command [343](#)
- mls qos srr-queue input buffers command [345](#)
- mls qos srr-queue input cos-map command [347](#)
- mls qos srr-queue input dscp-map command [349](#)
- mls qos srr-queue input priority-queue command [351](#)
- mls qos srr-queue input threshold command [353](#)
- mls qos srr-queue output cos-map command [355](#)
- mls qos srr-queue output dscp-map command [357](#)
- mls qos trust command [359](#)
- mode, MVR [366](#)
- Mode button, and password recovery [426](#)
- modes, commands [2](#)
- monitor session command [361](#)
- more (boot loader) command [15](#)

## MSTP

- displaying 651
- interoperability 89
- link type 704
- MST region
  - aborting changes 710
  - applying changes 710
  - configuration name 710
  - configuration revision number 710
  - current or pending display 710
  - displaying 651
  - MST configuration mode 710
  - VLANs-to-instance mapping 710
- path cost 712
- protocol mode 708
- restart protocol migration process 89
- root port
  - loop guard 702
  - preventing from becoming designated 702
  - restricting which can be root 702
  - root guard 702
- root switch
  - affects of extended system ID 700
  - hello-time 715, 723
  - interval between BPDU messages 716
  - interval between hello BPDU messages 715, 723
  - max-age 716
  - maximum hop count before discarding BPDU 717
  - port priority for selection of 719
  - primary or secondary 723
  - switch priority 722

## MSTP (continued)

- state changes
  - blocking to forwarding state 729
  - enabling BPDU filtering 692, 727
  - enabling BPDU guard 694, 727
  - enabling Port Fast 727, 729
  - forward-delay time 714
  - length of listening and learning states 714
  - rapid transition to forwarding 704
  - shutting down Port Fast-enabled ports 727
- state information display 650
- MTU
  - configuring size 786
  - displaying global setting 661
- Multicast Listener Discovery
  - See MLD
- multicast group address, MVR 369
- multicast groups, MVR 367
- Multicast Listener Discovery
  - See MLD
- multicast router learning method 237
- multicast router ports, configuring 237
- multicast router ports, IPv6 258
- multicast storm control 748
- multicast VLAN, MVR 367
- multicast VLAN registration
  - See MVR
- Multiple Spanning Tree Protocol
  - See MSTP
- MVR
  - and address aliasing 367
  - configuring 366
  - configuring interfaces 369
  - debug messages, display 29
  - displaying 618
  - displaying interface information 620
  - members, displaying 622

mvr (global configuration) command [366](#)  
 mvr (interface configuration) command [369](#)  
 mvr vlan group command [370](#)

## N

native VLANs [781](#)  
 Network Admission Control Software Configuration Guide [186, 188](#)  
 network-policy (global configuration) command [373](#)  
 network-policy command [372](#)  
 network-policy profile (network-policy configuration) command [375](#)  
 nmsp attachment suppress command [379](#)  
 nmsp command [377](#)  
 negotiate, speed [737](#)  
 negotiating DTP messaging [768](#)  
 non-IP protocols  
     denying [112](#)  
     forwarding [386](#)  
 non-IP traffic access lists [279](#)  
 non-IP traffic forwarding  
     denying [112](#)  
     permitting [386](#)  
 normal-range VLANs [804](#)

## O

online diagnostics  
     displaying  
         configured boot-up coverage level [485](#)  
         current scheduled tasks [485](#)  
         event logs [485](#)  
         supported test suites [485](#)  
         test ID [485](#)  
         test results [485](#)  
         test statistics [485](#)

## online diagnostics (continued)

global configuration mode  
     clearing health monitoring diagnostic test schedule [75](#)  
     setting health monitoring diagnostic testing [75](#)  
     setting up health monitoring diagnostic test schedule [75](#)  
 health monitoring diagnostic tests, configuring [115](#)  
 testing, starting [119](#)

## P

PAgP  
     See EtherChannel  
 pagp learn-method command [380](#)  
 pagp port-priority command [382](#)  
 password, VTP [812](#)  
 password-recovery mechanism, enabling and disabling [426](#)  
 permit (ARP access-list configuration) command [384](#)  
 permit (MAC access-list configuration) command [386](#)  
 per-VLAN spanning-tree plus  
     See STP  
 physical-port learner [380](#)  
 PID, displaying [524](#)  
 PIM-DVMRP, as multicast router learning method [237](#)  
 PoE  
     configuring the power budget [400](#)  
     configuring the power management mode [397](#)  
     displaying controller register values [479](#)  
     displaying power management information [639](#)  
     logging of status [272](#)  
     monitoring power [402](#)  
     policing power consumption [402](#)  
 police aggregate command [391](#)  
 police command [389](#)  
 policed-DSCP map [331](#)  
 policy-map command [393](#)

## policy maps

- applying to an interface [428, 433](#)
- creating [393](#)
- displaying [634](#)
- hierarchical [394](#)
- policers
  - displaying [605](#)
  - for a single class [389](#)
  - for multiple classes [325, 391](#)
  - policed-DSCP map [331](#)
- traffic classification
  - defining the class [68](#)
  - defining trust states [794](#)
  - setting DSCP or IP precedence values [431](#)

## Port Aggregation Protocol

See EtherChannel

## port-based authentication

- AAA method list [3, 801](#)
- configuring violation modes [157](#)
- debug messages, display [10](#)
- enabling IEEE 802.1x
  - globally [121](#)
  - per interface [147](#)
- guest VLAN [136](#)
- host modes [138](#)
- IEEE 802.1x AAA accounting methods [1](#)
- initialize an interface [140, 153](#)
- MAC authentication bypass [141](#)
- manual control of authorization state [147](#)
- PAE as authenticator [146](#)
- periodic re-authentication
  - enabling [150](#)
  - time between attempts [154](#)
- quiet period between failed authentication exchanges [154](#)
- re-authenticating IEEE 802.1x-enabled ports [149](#)
- resetting configurable IEEE 802.1x parameters [134](#)
- switch-to-authentication server retransmission time [154](#)

## port-based authentication (continued)

- switch-to-client frame-retransmission number [143 to 145](#)
- switch-to-client retransmission time [154](#)
- test for IEEE 802.1x readiness [152](#)
- port-channel load-balance command [395](#)
- Port Fast, for spanning tree [729](#)
- port ranges, defining [104, 106](#)
- ports, debugging [69](#)
- ports, protected [779](#)
- port security
  - aging [775](#)
  - debug messages, display [71](#)
  - enabling [770](#)
  - violation error recovery [165](#)
- port trust states for QoS [359](#)
- port types, MVR [369](#)
- power information, displaying [497](#)
- power inline command [397](#)
- power inline consumption command [400](#)
- power inline police command [402](#)
- Power over Ethernet
  - See PoE
- priority-queue command [405](#)
- priority value, stack member [658](#)
- privileged EXEC mode [2, 3](#)
- product identification information, displaying [524](#)
- protected ports, displaying [517](#)
- pruning
  - VLANs [781](#)
  - VTP
    - displaying interface information [512](#)
    - enabling [812](#)
- pruning-eligible VLAN list [782](#)
- PVST+
  - See STP

## Q

## QoS

## auto-QoS

- configuring 48
- debug messages, display 4
- displaying 449

## class maps

- creating 70
- defining the match criteria 316
- displaying 458

defining the CoS value for an incoming packet 327

displaying configuration information 449, 604

DSCP transparency 341

## DSCP trusted ports

- applying DSCP-to-DSCP-mutation map to 329
- defining DSCP-to-DSCP-mutation map 331

## egress queues

- allocating buffers 335
- defining the CoS output queue threshold map 355
- defining the DSCP output queue threshold map 357
- displaying buffer allocations 608
- displaying CoS output queue threshold map 611
- displaying DSCP output queue threshold map 611
- displaying queueing strategy 608
- displaying queue-set settings 614
- enabling bandwidth shaping and scheduling 741
- enabling bandwidth sharing and scheduling 743
- limiting the maximum output on a port 739
- mapping a port to a queue-set 407
- mapping CoS values to a queue and threshold 355
- mapping DSCP values to a queue and threshold 357
- setting maximum and reserved memory allocations 337
- setting WTD thresholds 337

enabling 323

## QoS (continued)

## ingress queues

- allocating buffers 345
- assigning SRR scheduling weights 343
- defining the CoS input queue threshold map 347
- defining the DSCP input queue threshold map 349
- displaying buffer allocations 608
- displaying CoS input queue threshold map 611
- displaying DSCP input queue threshold map 611
- displaying queueing strategy 608
- displaying settings for 606
- enabling the priority queue 351
- mapping CoS values to a queue and threshold 347
- mapping DSCP values to a queue and threshold 349
- setting WTD thresholds 353

## maps

- defining 331, 347, 349, 355, 357
- displaying 611

## policy maps

- applying an aggregate policer 391
- applying to an interface 428, 433
- creating 393
- defining policers 325, 389
- displaying policers 605
- displaying policy maps 634
- hierarchical 394
- policed-DSCP map 331
- setting DSCP or IP precedence values 431
- traffic classifications 68
- trust states 794

port trust states 359

queues, enabling the expedite 405

**QoS (continued)**

- statistics
  - in-profile and out-of-profile packets [608](#)
  - packets enqueued or dropped [608](#)
  - sent and received CoS values [608](#)
  - sent and received DSCP values [608](#)
- trusted boundary for IP phones [359](#)
- quality of service
  - See QoS
- querytime, MVR [366](#)
- queue-set command [407](#)

---

**R**

- radius-server dead-criteria command [408](#)
- radius-server host command [410](#)
- rapid per-VLAN spanning-tree plus
  - See STP
- rapid PVST+
  - See STP
- rcommand command [412](#)
- re-authenticating IEEE 802.1x-enabled ports [149](#)
- re-authentication
  - periodic [150](#)
  - time between attempts [154](#)
- receiver ports, MVR [369](#)
- receiving flow-control packets [171](#)
- recovery mechanism
  - causes [165](#)
  - display [74](#), [455](#), [499](#), [503](#)
  - timer interval [165](#)
- redundancy for cluster switches [101](#)
- reload command [414](#)
- remote command [416](#)
- remote-span command [418](#)
- Remote Switched Port Analyzer
  - See RSPAN
- rename (boot loader) command [16](#)
- renew ip dhcp snooping database command [420](#)

- reset (boot loader) command [17](#)
- resource templates, displaying [644](#)
- restricted VLAN
  - See dot1x auth-fail vlan
- rmdir (boot loader) command [18](#)
- rmon collection stats command [423](#)
- root guard, for spanning tree [702](#)
- RSPAN
  - configuring [361](#)
  - displaying [616](#)
  - filter RSPAN traffic [361](#)
  - remote-span command [418](#)
  - sessions
    - displaying [616](#)

---

**S**

- SDM mismatch mode [659](#)
- sdm prefer command [424](#)
- SDM templates
  - displaying [644](#)
  - dual IPv4 and IPv6 [424](#)
- secure ports, limitations [772](#)
- sending flow-control packets [171](#)
- service password-recovery command [426](#)
- service-policy command [428](#)
- session command [430](#)
- set (boot loader) command [19](#)
- set command [431](#)
- setup command [433](#)
- setup express command [436](#)
- shell trigger command [438](#)
- show access-lists command [440](#)
- show archive status command [443](#)
- show arp access-list command [444](#)
- show authentication command [445](#)
- show auto qos command [449](#)
- show boot command [453](#)
- show cable-diagnostics tdr command [455](#)

- show cisp command 457
- show class-map command 458
- show cluster candidates command 461
- show cluster command 459
- show cluster members command 463
- show controllers cpu-interface command 465
- show controllers ethernet-controller command 467
- show controllers power inline command 479
- show controllers tcam command 481
- show controller utilization command 483
- show dot1x command 488
- show dtp 492
- show eap command 494
- show env command 497
- show errdisable detect command 499
- show errdisable flap-values command 501
- show errdisable recovery command 503
- show etherchannel command 505
- show fallback profile command 508
- show flowcontrol command 510
- show interfaces command 512
- show interfaces counters command 521
- show inventory command 524
- show ip arp inspection command 525
- show ip dhcp snooping binding command 530
- show ip dhcp snooping command 529
- show ip dhcp snooping database command 532, 534
- show ip igmp profile command 537
- show ip igmp snooping address command 552
- show ip igmp snooping command 538, 550
- show ip igmp snooping groups command 541
- show ip igmp snooping mrouter command 543, 554
- show ip igmp snooping querier command 545, 556
- show ip source binding command 547
- show ipv6 route updated 558
- show ip verify source command 548
- show lacp command 560
- show link state group command 572
- show location 564
- show logging onboard command 567, 574
- show mac access-group command 579
- show mac address-table address command 583
- show mac address-table aging time command 585
- show mac address-table command 581
- show mac address-table count command 587
- show mac address-table dynamic command 589
- show mac address-table interface command 591
- show mac address-table learning command 593
- show mac address-table move update command 594
- show mac address-table notification command 83, 596, 27
- show mac address-table static command 598
- show mac address-table vlan command 600
- show macro auto command 602
- show mls qos aggregate-policer command 605
- show mls qos command 604
- show mls qos input-queue command 606
- show mls qos interface command 608
- show mls qos maps command 611
- show mls qos queue-set command 614
- show monitor command 616
- show mvr command 618
- show mvr interface command 620
- show mvr members command 622
- show network-policy profile command 624
- show nmosp command 626
- show pagp command 629
- show parser macro command 631
- show platform acl command 2
- show platform backup interface command 3
- show platform etherchannel command 4
- show platform forward command 5
- show platform frontend-controller command 7
- show platform igmp snooping command 8
- show platform layer4op command 10
- show platform mac-address-table command 11
- show platform messaging command 12
- show platform monitor command 13
- show platform mvr table command 14



show platform pm command [15](#)  
 show platform port-asic command [16](#)  
 show platform port-security command [21](#)  
 show platform qos command [22](#)  
 show platform resource-manager command [23](#)  
 show platform snmp counters command [25](#)  
 show platform spanning-tree command [26](#)  
 show platform stack manager command [28](#)  
 show platform stp-instance command [27](#)  
 show platform tb command [31](#)  
 show platform team command [33](#)  
 show platform vlan command [35](#)  
 show policy-map command [634](#)  
 show port security command [636](#)  
 show power inline command [639](#)  
 show sdm prefer command [644](#)  
 show setup express command [646](#)  
 show shell command [647](#)  
 show spanning-tree command [650](#)  
 show storm-control command [656](#)  
 show switch command [658](#)  
 show system mtu command [661](#)  
 show trust command [794](#)  
 show udd command [662](#)  
 show version command [665](#)  
 show vlan command [667](#)  
 show vlan command, fields [668](#)  
 show vmps command [670](#)  
 show vtp command [672](#)  
 shutdown command [677](#)  
 shutdown vlan command [678](#)  
 small violation-rate command [679](#)  
 Smartports macros  
     See macros  
 SNMP host, specifying [685](#)  
 SNMP informs, enabling the sending of [681](#)  
 snmp-server enable traps command [681](#)  
 snmp-server host command [685](#)  
 snmp trap mac-notification change command [689](#)

## SNMP traps

enabling MAC address notification trap [689](#)  
 enabling the MAC address notification feature [286](#)  
 enabling the sending of [681](#)

## SoftPhone

See Cisco SoftPhone

## software images

copying [6](#)  
 deleting [108](#)  
 downloading [9](#)  
 upgrading [6, 9](#)  
 uploading [16](#)

software version, displaying [665](#)

source ports, MVR [369](#)

## SPAN

configuring [361](#)  
 debug messages, display [28](#)  
 displaying [616](#)  
 filter SPAN traffic [361](#)  
 sessions  
     add interfaces to [361](#)  
     displaying [616](#)  
     start new [361](#)

spanning-tree backbonefast command [691](#)

spanning-tree bpduguard command [692](#)

spanning-tree bpduguard command [694](#)

spanning-tree cost command [696](#)

spanning-tree etherchannel command [698](#)

spanning-tree extend system-id command [700](#)

spanning-tree guard command [702](#)

spanning-tree link-type command [704](#)

spanning-tree loopguard default command [706](#)

spanning-tree mode command [708](#)

spanning-tree mst configuration command [710](#)

spanning-tree mst cost command [712](#)

spanning-tree mst forward-time command [714](#)

spanning-tree mst hello-time command [715](#)

spanning-tree mst max-age command [716](#)

spanning-tree mst max-hops command [717](#)

spanning-tree mst port-priority command [719](#)

spanning-tree mst pre-standard command [721](#)

spanning-tree mst priority command [722](#)

spanning-tree mst root command [723](#)

spanning-tree portfast (global configuration) command [727](#)

spanning-tree portfast (interface configuration) command [729](#)

spanning-tree port-priority command [725](#)

Spanning Tree Protocol

See STP

spanning-tree transmit hold-count command [731](#)

spanning-tree uplinkfast command [732](#)

spanning-tree vlan command [734](#)

speed command [737](#)

srr-queue bandwidth limit command [739](#)

srr-queue bandwidth share command [743](#)

SSH, configuring version [243](#)

stack-mac persistent timer command [745](#)

stack member

access [430](#)

number [658, 755](#)

provisioning [753](#)

reloading [414](#)

stacks, switch

disabling a member [751](#)

enabling a member [751](#)

MAC address [745](#)

provisioning a new member [753](#)

reloading [414](#)

stack member access [430](#)

stack member number [658, 755](#)

stack member priority value [658](#)

static-access ports, configuring [757](#)

statistics, Ethernet group [423](#)

sticky learning, enabling [770](#)

storm-control command [748](#)

STP

BackboneFast [691](#)

counters, clearing [88](#)

debug messages, display

BackboneFast events [75](#)

MSTP [78](#)

optimized BPDUs handling [77](#)

spanning-tree activity [73](#)

switch shim [80](#)

transmitted and received BPDUs [76](#)

UplinkFast [82](#)

detection of indirect link failures [691](#)

EtherChannel misconfiguration [698](#)

extended system ID [700](#)

path cost [696](#)

protocol modes [708](#)

root port

accelerating choice of new [732](#)

loop guard [702](#)

preventing from becoming designated [702](#)

restricting which can be root [702](#)

root guard [702](#)

UplinkFast [732](#)

root switch

affects of extended system ID [700, 735](#)

hello-time [734](#)

interval between BDPU messages [734](#)

interval between hello BPDU messages [734](#)

max-age [734](#)

port priority for selection of [725](#)

primary or secondary [734](#)

switch priority [734](#)

**STP (continued)**

## state changes

- blocking to forwarding state [729](#)
- enabling BPDU filtering [692, 727](#)
- enabling BPDU guard [694, 727](#)
- enabling Port Fast [727, 729](#)
- enabling timer to recover from error state [165](#)
- forward-delay time [734](#)
- length of listening and learning states [734](#)
- shutting down Port Fast-enabled ports [727](#)

state information display [650](#)VLAN options [722, 734](#)

## Switched Port Analyzer

## See SPAN

switchport access command [757](#)switchport backup interface command [759](#)switchport block command [763](#)switchport host command [765](#)switchport mode command [766](#)switchport nonegotiate command [768](#)switchport port-security aging command [775](#)switchport port-security command [770](#)switchport priority extend command [777](#)switchport protected command [779](#)switchports, displaying [512](#)switchport trunk command [781](#)switchport voice vlan command [784](#)switch priority command [751](#)switch provision command [753](#)switch renumber command [755](#)system message logging [272](#)system message logging, save message to flash [273](#)system mtu command [786](#)system resource templates [424](#)Telnet, using to communicate to cluster switches [412](#)temperature information, displaying [497](#)templates, SDM [425](#)templates, system resources [424](#)test cable-diagnostics tdr command [788](#)traceroute mac command [789](#)traceroute mac ip command [792](#)trunking, VLAN mode [766](#)trunk mode [766](#)trunk ports [766](#)trunks, to non-DTP device [767](#)trusted boundary for QoS [359](#)trusted port states for QoS [359](#)type (boot loader) command [22](#)

---

**U**

## UDLD

aggressive mode [796, 798](#)debug messages, display [90](#)enable globally [796](#)enable per interface [798](#)error recovery timer [165](#)message timer [796](#)normal mode [796, 798](#)reset a shutdown interface [800](#)status [662](#)udld command [796](#)udld port command [798](#)udld reset command [800](#)unicast storm control [748](#)

## UniDirectional Link Detection

## See UDLD

unknown multicast traffic, preventing [763](#)unknown unicast traffic, preventing [763](#)unset (boot loader) command [23](#)

---

**T**tar files, creating, listing, and extracting [13](#)TDR, running [788](#)

## upgrading

- software images
  - copying [6](#)
  - downloading [9](#)
  - monitoring status of [443](#)

UplinkFast, for STP [732](#)

usb-inactivity-timeout (console configuration)  
command [803](#)

user EXEC mode [2, 3](#)

## V

version (boot loader) command [25](#)

version mismatch mode [659, 29](#)

## VLAN configuration mode

- commands
  - VLAN [804](#)
  - VTP [817](#)
- description [5](#)
- entering [805](#)
- summary [3](#)

## VLAN Query Protocol

See VQP

## VLANs

- configuring [804](#)
- debug messages, display
  - ISL [86](#)
  - VLAN IOS file system error tests [85](#)
  - VLAN manager activity [83](#)
  - VTP [88](#)
- displaying configurations [667](#)
- enabling guest VLAN supplicant [124, 135, 170](#)
- MAC addresses
  - displaying [600](#)
  - number of [587](#)
- normal-range [804](#)
- restarting [678](#)
- shutting down [678](#)
- SNMP traps for VTP [683, 686](#)
- suspending [678](#)

## VLAN Trunking Protocol

See VTP

VM mode [659, 29](#)

## VMPS

- configuring servers [809](#)
- displaying [670](#)
- error recovery timer [165](#)
- reconfirming dynamic VLAN assignments [806](#)
- vmmps reconfirm (global configuration) command [807](#)
- vmmps reconfirm (privileged EXEC) command [806](#)
- vmmps retry command [808](#)
- vmmps server command [809](#)
- voice VLAN
  - configuring [784](#)
  - setting port priority [777](#)

## VQP

- and dynamic-access ports [758](#)
- clearing client statistics [90](#)
- displaying information [670](#)
- per-server retry count [808](#)
- reconfirmation interval [807](#)
- reconfirming dynamic VLAN assignments [806](#)

## VTP

- changing characteristics [811](#)
- clearing pruning counters [91](#)
- configuring
  - domain name [811](#)
  - file name [811](#)
  - mode [811](#)
  - password [812](#)
- counters display fields [673](#)
- displaying information [672](#)
- enabling
  - pruning [812](#)
  - Version 2 [812](#)

**VTP (continued)**

- enabling per port [816](#)
- mode [811](#)
- pruning [812](#)
- statistics [672](#)
- status [672](#)
- status display fields [675](#)
- vtp (global configuration) command [811](#)
- vtp interface configuration) command [816](#)
- vtp primary command [818](#)

