



Unsupported CLI Commands in Release 12.1(11)AX

This appendix lists some of the command-line interface (CLI) commands that are displayed when you enter the question mark (?) at the Catalyst 2970 switch prompt but are not supported in this release, either because they are not tested, or because of Catalyst 2970 hardware limitations. This is not a complete list. The unsupported commands are listed by software feature and command mode.

Access Control Lists

Unsupported Privileged EXEC Commands

`access-enable [host] [timeout minutes]`

`access-template [access-list-number | name] [dynamic-name] [source] [destination] [timeout minutes]`

`clear access-template [access-list-number | name] [dynamic-name] [source] [destination].`

Unsupported Global Configuration Commands

`access-list rate-limit acl-index {precedence | mask prec-mask}`

`access-list dynamic extended`

Unsupported Debug Commands

`debug platform cli-redirection main`

`debug platform configuration`

Interface Commands

Unsupported Privileged EXEC Commands

`show interfaces` [*interface-id* | `vlan` *vlan-id*] [`capabilities` | `crb` | `fair-queue` | `irb` | `mac-accounting` | `precedence` | `irb` | `random-detect` | `rate-limit` | `shape`]

Unsupported Global Configuration Commands

`interface tunnel`

Unsupported Interface Configuration Commands

`switchport broadcast` *level*

`switchport multicast` *level*

`switchport unicast` *level*



Note

These commands have been replaced by the `storm-control` {`broadcast` | `multicast` | `unicast`} `level` *level* [*level*] interface configuration command.

RADIUS

Unsupported Global Configuration Commands

`aaa nas port extended`

`radius-server attribute nas-port`

`radius-server configure`

`radius-server extended-portnames`

SNMP

Unsupported Global Configuration Commands

`snmp-server enable informs`

Spanning Tree

Unsupported Global Configuration Commands

```
spanning-tree etherchannel guard misconfig  
no spanning-tree mode  
spanning-tree pathcost method {long | short}
```

Unsupported Interface Configuration Commands

```
spanning-tree link-type {point-to-point | shared}  
spanning-tree stack-port
```

VLAN

Unsupported vlan-config Commands

```
private-vlan
```

Unsupported User EXEC Commands

```
show vlan ifindex  
show vlan private-vlan
```

VTP

Unsupported Privileged EXEC Commands

```
vtp {password password | pruning | version number}private-vlan
```

**Note**

This command has been replaced by the **vtp** global configuration command.
