



Unsupported Commands in Cisco IOS Release 12.2(25)SEA

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the Catalyst 3560 switch prompt but are not supported in this release, either because they are not tested or because of Catalyst 3560 hardware limitations. This is not a complete list. The unsupported commands are listed by software feature and command mode.

Access Control Lists

Unsupported Privileged EXEC Commands

access-enable [host] [timeout *minutes*]

access-template [access-list-number | name] [dynamic-name] [source] [destination] [timeout *minutes*]

clear access-template [access-list-number | name] [dynamic-name] [source] [destination].

Unsupported Global Configuration Commands

access-list rate-limit *acl-index* {*precedence* | **mask** *prec-mask*}

access-list dynamic extended

ARP Commands

Unsupported Global Configuration Commands

arp *ip-address hardware-address smds*

arp *ip-address hardware-address srp-a*

arp *ip-address hardware-address srp-b*

Unsupported Interface Configuration Commands

arp probe
ip probe proxy

Unsupported Debug Commands

debug platform cli-redirection main

FallBack Bridging

Unsupported Privileged EXEC Commands

clear bridge [*bridge-group*] **multicast** [**router-ports** | **groups** | **counts**] [*group-address*] [*interface-unit*] [**counts**]
clear vlan statistics
show bridge [*bridge-group*] **circuit-group** [*circuit-group*] [*src-mac-address*] [*dst-mac-address*]
show bridge [*bridge-group*] **multicast** [**router-ports** | **groups**] [*group-address*]
show bridge vlan
show interfaces crb
show interfaces {**ethernet** | **fastethernet**} [*interface* | *slot/port*] **irb**
show subscriber-policy *range*

Unsupported Global Configuration Commands

bridge *bridge-group* **acquire**
bridge *bridge-group* **address** *mac-address* {**forward** | **discard**} [*interface-id*]
bridge *bridge-group* **aging-time** *seconds*
bridge *bridge-group* **bitswap_l3_addresses**
bridge *bridge-group* **bridge ip**
bridge *bridge-group* **circuit-group** *circuit-group* **pause** *milliseconds*
bridge *bridge-group* **circuit-group** *circuit-group* **source-based**
bridge cmf
bridge crb
bridge *bridge-group* **domain** *domain-name*
bridge irb
bridge *bridge-group* **mac-address-table** **limit** *number*
bridge *bridge-group* **multicast-source**

bridge *bridge-group* **protocol** *dec*
bridge *bridge-group* **route** *protocol*
bridge *bridge-group* **subscriber** *policy* *policy*
subscriber-policy *policy* [[**no** | **default**] *packet* [**permit** | **deny**]]

Unsupported Interface Configuration Commands

bridge-group *bridge-group* **cbus-bridging**
bridge-group *bridge-group* **circuit-group** *circuit-number*
bridge-group *bridge-group* **input-address-list** *access-list-number*
bridge-group *bridge-group* **input-lat-service-deny** *group-list*
bridge-group *bridge-group* **input-lat-service-permit** *group-list*
bridge-group *bridge-group* **input-lsap-list** *access-list-number*
bridge-group *bridge-group* **input-pattern-list** *access-list-number*
bridge-group *bridge-group* **input-type-list** *access-list-number*
bridge-group *bridge-group* **lat-compression**
bridge-group *bridge-group* **output-address-list** *access-list-number*
bridge-group *bridge-group* **output-lat-service-deny** *group-list*
bridge-group *bridge-group* **output-lat-service-permit** *group-list*
bridge-group *bridge-group* **output-lsap-list** *access-list-number*
bridge-group *bridge-group* **output-pattern-list** *access-list-number*
bridge-group *bridge-group* **output-type-list** *access-list-number*
bridge-group *bridge-group* **sse**
bridge-group *bridge-group* **subscriber-loop-control**
bridge-group *bridge-group* **subscriber-trunk**
bridge *bridge-group* **lat-service-filtering**
frame-relay **map** **bridge** *dlci* **broadcast**
interface **bvi** *bridge-group*
x25 **map** **bridge** *x.121-address* **broadcast** [*options-keywords*]

HSRP

Unsupported Global Configuration Commands

interface **Async**
interface **BVI**
interface **Dialer**

```

interface Group-Async
interface Lex
interface Multilink
interface Virtual-Template
interface Virtual-Tokenring

```

Unsupported Interface Configuration Commands

```

mtu
standby mac-refresh seconds
standby use-bia

```

IGMP Snooping Commands

Unsupported Global Configuration Commands

```

ip igmp snooping source-only-learning
ip igmp snooping ten

```

Interface Commands

Unsupported Privileged EXEC Commands

```

show interfaces [interface-id | vlan vlan-id] [crb | fair-queue | irb | mac-accounting | precedence | irb
| random-detect | rate-limit | shape]

```

Unsupported Global Configuration Commands

```

interface tunnel

```

Unsupported Interface Configuration Commands

```

switchport broadcast level
switchport multicast level
switchport unicast level

```



Note

These commands have been replaced by the **storm-control {broadcast | multicast | unicast} level *level* [*level*]** interface configuration command.

IP Multicast Routing

Unsupported Global Configuration Commands

ip pim register-rate-limit

IP Multicast Routing

Unsupported Privileged EXEC Commands

clear ip rtp header-compression [*type number*]

The **debug ip packet** command displays packets received by the switch CPU. It does not display packets that are hardware-switched.

The **debug ip mcache** command affects packets received by the switch CPU. It does not display packets that are hardware-switched.

The **debug ip mpacket [detail] [access-list-number [group-name-or-address]]** command affects only packets received by the switch CPU. Because most multicast packets are hardware-switched, use this command only when you know that the route will forward the packet to the CPU.

debug ip pim atm

show frame-relay ip rtp header-compression [*interface type number*]

The **show ip mcache** command displays entries in the cache for those packets that are sent to the switch CPU. Because most multicast packets are switched in hardware without CPU involvement, you can use this command, but multicast packet information is not displayed.

The **show ip mpacket** commands are supported but are only useful for packets received at the switch CPU. If the route is hardware-switched, the command has no effect because the CPU does not receive the packet and cannot display it.

show ip pim vc [*group-address | name*] [*type number*]

show ip rtp header-compression [*type number*] [*detail*]

Unsupported Global Configuration Commands

ip pim accept-rp {*address | auto-rp*} [*group-access-list-number*]

ip pim message-interval *seconds*

Unsupported Interface Configuration Commands

frame-relay ip rtp header-compression [active | passive]
frame-relay map ip *ip-address dlc* [broadcast] compress
frame-relay map ip *ip-address dlc* rtp header-compression [active | passive]
ip igmp helper-address *ip-address*
ip multicast helper-map {*group-address* | broadcast} {*broadcast-address* | *multicast-address*}
extended-access-list-number
ip multicast rate-limit {in | out} [video | whiteboard] [group-list *access-list*] [source-list *access-list*]
kpps
ip multicast ttl-threshold *ttl-value* (instead, use the **ip multicast boundary** *access-list-number*
 interface configuration command)
ip multicast use-functional
ip pim minimum-vc-rate *pps*
ip pim multipoint-signalling
ip pim nbma-mode
ip pim vc-count *number*
ip rtp compression-connections *number*
ip rtp header-compression [passive]

IP Unicast Routing

Unsupported Privileged EXEC or User EXEC Commands

clear ip accounting [checkpoint]
clear ip bgp *address* flap-statistics
clear ip bgp prefix-list
debug ip cef stats
show cef [drop | not-cef-switched]
show ip accounting [checkpoint] [output-packets | access-violations]
show ip bgp dampened-paths
show ip bgp inconsistent-as
show ip bgp regexp *regular expression*
show ip prefix-list *regular expression*

Unsupported Global Configuration Commands

ip accounting-list *ip-address wildcard*
ip as-path access-list
ip accounting-transits *count*
ip cef accounting [*per-prefix*] [*non-recursive*]
ip cef traffic-statistics [*load-interval seconds*] [*update-rate seconds*]
ip flow-aggregation
ip flow-cache
ip flow-export
ip gratuitous-arps
ip local
ip prefix-list
ip reflexive-list
router egg
router-isis
router iso-igrp
router mobile
router odr
router static

Unsupported Interface Configuration Commands

ip accounting
ip load-sharing [*per-packet*]
ip mtu *bytes*
ip verify
ip unnumbered *type number*
All **ip security** commands

Unsupported BGP Router Configuration Commands

address-family vpnv4
default-information originate
neighbor advertise-map
neighbor allowas-in
neighbor default-originate
neighbor description
network backdoor
table-map

Unsupported VPN Configuration Commands

All

Unsupported Route Map Commands

match route-type
set as-path {tag | prepend *as-path-string*}
set automatic-tag
set dampening *half-life reuse suppress max-suppress-time*
set default interface *interface-id* [*interface-id*.....]
set interface *interface-id* [*interface-id*.....]
set ip default next-hop *ip-address* [*ip-address*.....]
set ip destination *ip-address mask*
set ip precedence *value*
set ip qos-group
set metric-type internal
set origin
set metric-type internal
set tag *tag-value*

MAC Address Commands

Unsupported Privileged EXEC Commands

show mac address-table multicast

**Note**

Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Miscellaneous

Unsupported Global Configuration Commands

errdisable detect cause dhcp-rate-limit

errdisable recovery cause dhcp-rate-limit

errdisable recovery cause unicast flood

service compress-config

MSDP

Unsupported Privileged EXEC Commands

show access-expression

show exception

show location

show pm LINE

show smf [*interface-id*]

show subscriber-policy [*policy-number*]

show template [*template-name*]

Unsupported Global Configuration Commands

ip msdp default-peer *ip-address* | *name* [**prefix-list** *list*] (Because BGP/MBGP is not supported, use the **ip msdp peer** command instead of this command.)

NetFlow Commands

Unsupported Global Configuration Commands

ip flow-aggregation cache
ip flow-cache entries
ip flow-export

Network Address Translation (NAT) Commands

Unsupported User EXEC Commands

clear ip nat translation
show ip nat statistics
show ip nat translations

Unsupported Global Configuration Commands

ip nat inside destination
ip nat inside source
ip nat outside source
ip nat pool

Unsupported Interface Configuration Commands

ip nat

QoS

Unsupported Global Configuration Commands

priority-list

Unsupported Interface Configuration Commands

priority-group

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended
radius-server attribute nas-port
radius-server configure
radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs
snmp-server ifindex persist

Spanning Tree

Unsupported Global Configuration Command

spanning-tree pathcost method {long | short}

Unsupported Interface Configuration Command

spanning-tree stack-port

VLAN

Unsupported User EXEC Commands

show running-config vlan
show vlan ifindex

VTP

Unsupported Privileged EXEC Commands

vtp {**password** *password* | **pruning** | **version** *number*}

**Note**

This command has been replaced by the **vtp** global configuration command.
