



Unsupported Commands in Cisco IOS Release 12.2(37)SE

This appendix lists some of the command-line interface (CLI) commands that appear when you enter the question mark (?) at the Catalyst 3750-E or 3560-E switch prompt but are not supported in this release, either because they are not tested or because of Catalyst 3750-E or 3560-E switch hardware limitations. This is not a complete list. The unsupported commands are listed by software feature and command mode.

Access Control Lists

Unsupported Privileged EXEC Commands

```
access-enable [host] [timeout minutes]  
access-template [access-list-number | name] [dynamic-name] [source] [destination] [timeout minutes]  
clear access-template [access-list-number | name] [dynamic-name] [source] [destination].  
show access-lists rate-limit [destination]  
show accounting  
show ip accounting [checkpoint] [output-packets | access violations]  
show ip cache [prefix-mask] [type number]
```

Unsupported Global Configuration Commands

```
access-list rate-limit acl-index {precedence | mask prec-mask}  
access-list dynamic extended
```

Unsupported Route-Map Configuration Commands

```
match ip address prefix-list prefix-list-name [prefix-list-name...]
```

Archive Commands

Unsupported Privileged EXEC Commands

archive config
show archive config
show archive log

ARP Commands

Unsupported Global Configuration Commands

arp *ip-address hardware-address* smds
arp *ip-address hardware-address* srp-a
arp *ip-address hardware-address* srp-b

Unsupported Interface Configuration Commands

arp probe
ip probe proxy

Boot Loader Commands

Unsupported Global Configuration Commands

boot buffersize

Debug Commands



Note

These commands are supported only on Catalyst 3750-E switches.

Unsupported Privileged EXEC Commands

debug platform cli-redirection main
debug platform configuration

Fallback Bridging

Unsupported Privileged EXEC Commands

clear bridge [*bridge-group*] **multicast** [**router-ports** | **groups** | **counts**] [*group-address*] [*interface-unit*] [**counts**]

clear vlan statistics

show bridge [*bridge-group*] **circuit-group** [*circuit-group*] [*src-mac-address*] [*dst-mac-address*]

show bridge [*bridge-group*] **multicast** [**router-ports** | **groups**] [*group-address*]

show bridge vlan

show interfaces crb

show interfaces {**ethernet** | **fastethernet**} [*interface* | *slot/port*] **irb**

show subscriber-policy range

Unsupported Global Configuration Commands

bridge *bridge-group* **acquire**

bridge *bridge-group* **address** *mac-address* {**forward** | **discard**} [*interface-id*]

bridge *bridge-group* **aging-time** *seconds*

bridge *bridge-group* **bitswap_13_addresses**

bridge *bridge-group* **bridge ip**

bridge *bridge-group* **circuit-group** *circuit-group* **pause** *milliseconds*

bridge *bridge-group* **circuit-group** *circuit-group* **source-based**

bridge cmf

bridge crb

bridge *bridge-group* **domain** *domain-name*

bridge irb

bridge *bridge-group* **mac-address-table** **limit** *number*

bridge *bridge-group* **multicast-source**

bridge *bridge-group* **protocol** **dec**

bridge *bridge-group* **route** *protocol*

bridge *bridge-group* **subscriber** **policy** *policy*

subscriber-policy *policy* [[**no** | **default**] *packet* [**permit** | **deny**]]

Unsupported Interface Configuration Commands

bridge-group *bridge-group* **cbus-bridging**

bridge-group *bridge-group* **circuit-group** *circuit-number*

bridge-group *bridge-group* **input-address-list** *access-list-number*
bridge-group *bridge-group* **input-lat-service-deny** *group-list*
bridge-group *bridge-group* **input-lat-service-permit** *group-list*
bridge-group *bridge-group* **input-lsap-list** *access-list-number*
bridge-group *bridge-group* **input-pattern-list** *access-list-number*
bridge-group *bridge-group* **input-type-list** *access-list-number*
bridge-group *bridge-group* **lat-compression**
bridge-group *bridge-group* **output-address-list** *access-list-number*
bridge-group *bridge-group* **output-lat-service-deny** *group-list*
bridge-group *bridge-group* **output-lat-service-permit** *group-list*
bridge-group *bridge-group* **output-lsap-list** *access-list-number*
bridge-group *bridge-group* **output-pattern-list** *access-list-number*
bridge-group *bridge-group* **output-type-list** *access-list-number*
bridge-group *bridge-group* **sse**
bridge-group *bridge-group* **subscriber-loop-control**
bridge-group *bridge-group* **subscriber-trunk**
bridge *bridge-group* **lat-service-filtering**
frame-relay map bridge *dlci* **broadcast**
interface bvi *bridge-group*
x25 map bridge *x.121-address* **broadcast** [*options-keywords*]

HSRP

Unsupported Global Configuration Commands

interface Async
interface BVI
interface Dialer
interface Group-Async
interface Lex
interface Multilink
interface Virtual-Template
interface Virtual-Tokenring

Unsupported Interface Configuration Commands

mtu
standby mac-refresh *seconds*
standby use-bia

IGMP Snooping Commands

Unsupported Global Configuration Commands

ip igmp snooping ten

Interface Commands

Unsupported Privileged EXEC Commands

show interfaces [*interface-id* | *vlan* *vlan-id*] [*crb* | *fair-queue* | *irb* | *mac-accounting* | *precedence* | *irb* | *random-detect* | *rate-limit* | *shape*]

Unsupported Global Configuration Commands

interface tunnel

Unsupported Interface Configuration Commands

transmit-interface *type number*

IP Multicast Routing

Unsupported Privileged EXEC Commands

clear ip rtp header-compression [*type number*]

The **debug ip packet** command displays packets received by the switch CPU. It does not display packets that are hardware-switched.

The **debug ip mcache** command affects packets received by the switch CPU. It does not display packets that are hardware-switched.

The **debug ip mpacket** [**detail**] [*access-list-number*] [*group-name-or-address*] command affects only packets received by the switch CPU. Because most multicast packets are hardware-switched, use this command only when you know that the route will forward the packet to the CPU.

debug ip pim atm

show frame-relay ip rtp header-compression [**interface** *type number*]

The **show ip mcache** command displays entries in the cache for those packets that are sent to the switch CPU. Because most multicast packets are switched in hardware without CPU involvement, you can use this command, but multicast packet information is not displayed.

The **show ip mpacket** commands are supported but are only useful for packets received at the switch CPU. If the route is hardware-switched, the command has no effect because the CPU does not receive the packet and cannot display it.

show ip pim vc [*group-address* | *name*] [*type number*]

show ip rtp header-compression [*type number*] [**detail**]

Unsupported Global Configuration Commands

ip multicast-routing vrf *vrf-name*

ip pim accept-rp {*address* | **auto-rp**} [*group-access-list-number*]

ip pim message-interval *seconds*

Unsupported Interface Configuration Commands

frame-relay ip rtp header-compression [**active** | **passive**]

frame-relay map ip *ip-address dlc* [**broadcast**] **compress**

frame-relay map ip *ip-address dlc* **rtp header-compression** [**active** | **passive**]

ip igmp helper-address *ip-address*

ip multicast helper-map {*group-address* | **broadcast**} {*broadcast-address* | *multicast-address*}
extended-access-list-number

ip multicast rate-limit {**in** | **out**} [**video** | **whiteboard**] [**group-list** *access-list*] [**source-list** *access-list*]
kbps

ip multicast ttl-threshold *ttl-value* (instead, use the **ip multicast boundary** *access-list-number* interface configuration command)

ip multicast use-functional

ip pim minimum-vc-rate *pps*

ip pim multipoint-signalling

ip pim nbma-mode

ip pim vc-count *number*

ip rtp compression-connections *number*

ip rtp header-compression [**passive**]

IP Unicast Routing

Unsupported Privileged EXEC or User EXEC Commands

```
clear ip accounting [checkpoint]
clear ip bgp address flap-statistics
clear ip bgp prefix-list
debug ip cef stats
show cef [drop | not-cef-switched]
show ip accounting [checkpoint] [output-packets | access-violations]
show ip bgp dampened-paths
show ip bgp inconsistent-as
show ip bgp regexp regular expression
show ip prefix-list regular expression
```

Unsupported Global Configuration Commands

```
ip accounting precedence {input | output}
ip accounting-list ip-address wildcard
ip as-path access-list
ip accounting-transits count
ip cef accounting [per-prefix] [non-recursive]
ip cef traffic-statistics [load-interval seconds] [update-rate seconds]
ip flow-aggregation
ip flow-cache
ip flow-export
ip gratuitous-arps
ip local
ip prefix-list
ip reflexive-list
router egp
router isis
router iso-igrp
router mobile
router odr
router static
```

Unsupported Interface Configuration Commands

ip accounting
ip load-sharing [*per-packet*]
ip mtu *bytes*
ip verify
ip unnumbered *type number*
 All **ip security** commands

Unsupported BGP Router Configuration Commands

address-family *vpn4*
default-information *originate*
neighbor *advertise-map*
neighbor *allowas-in*
neighbor *default-originate*
neighbor *description*
network *backdoor*
table-map

Unsupported VPN Configuration Commands

All

Unsupported Route Map Commands

match *route-type*
set as-path {*tag* | **prepend** *as-path-string*}
set automatic-tag
set dampening *half-life reuse suppress max-suppress-time*
set default interface *interface-id* [*interface-id.....*]
set interface *interface-id* [*interface-id.....*]
set ip default next-hop *ip-address* [*ip-address.....*]
set ip destination *ip-address mask*
set ip next-hop *verify-availability*
set ip precedence *value*
set ip qos-group
set metric-type *internal*
set origin

```
set metric-type internal
set tag tag-value
```

MAC Address Commands

Unsupported Privileged EXEC Commands

```
show mac-address-table
show mac-address-table address
show mac-address-table aging-time
show mac-address-table count
show mac-address-table dynamic
show mac-address-table interface
show mac-address-table multicast
show mac-address-table notification
show mac-address-table static
show mac-address-table vlan
show mac address-table multicast
```



Note Use the **show ip igmp snooping groups** privileged EXEC command to display Layer 2 multicast address-table entries for a VLAN.

Unsupported Global Configuration Commands

```
mac-address-table aging-time
mac-address-table notification
mac-address-table static
```

Miscellaneous

Unsupported Privileged EXEC Commands

```
file verify auto
remote command (supported on Catalyst 3750-E switches only)
show cable-diagnostics prbs
test cable-diagnostics prbs
```

Unsupported Global Configuration Commands

`errdisable recovery cause unicast flood`
`l2protocol-tunnel global drop-threshold`
`service compress-config`
`stack-mac persistent timer` (supported on Catalyst 3750-E switches only)
`track object-number rtr`

MSDP

Unsupported Privileged EXEC Commands

`show access-expression`
`show exception`
`show location`
`show pm LINE`
`show smf [interface-id]`
`show subscriber-policy [policy-number]`
`show template [template-name]`

Unsupported Global Configuration Commands

`ip msdp default-peer ip-address | name [prefix-list list]` (Because BGP/MBGP is not supported, use the `ip msdp peer` command instead of this command.)

NetFlow Commands

Unsupported Global Configuration Commands

`ip flow-aggregation cache`
`ip flow-cache entries`
`ip flow-export`

Network Address Translation (NAT) Commands

Unsupported Privileged EXEC Commands

show ip nat statistics
show ip nat translations

QoS

Unsupported Global Configuration Command

priority-list

Unsupported Interface Configuration Commands

priority-group
rate-limit

Unsupported Policy-Map Configuration Command

class class-default where **class-default** is the *class-map-name*.

RADIUS

Unsupported Global Configuration Commands

aaa nas port extended
aaa authentication *feature* default enable
aaa authentication *feature* default line
radius-server attribute nas-port
radius-server configure
radius-server extended-portnames

SNMP

Unsupported Global Configuration Commands

snmp-server enable informs
snmp-server ifindex persist

Spanning Tree

Unsupported Global Configuration Command

spanning-tree pathcost method {long | short}

Unsupported Interface Configuration Command

spanning-tree stack-port

VLAN

Unsupported Global Configuration Command

vlan internal allocation policy {ascending | descending}

Unsupported User EXEC Commands

show running-config vlan
show vlan ifindex

VTP

Unsupported Privileged EXEC Command

vtp {password *password* | pruning | version *number*}



Note

This command has been replaced by the **vtp** global configuration command.
