



Configuring Supervisor Engine Redundancy on the Catalyst 4507R

This chapter describes how to configure supervisor engine redundancy on the Catalyst 4507R.

This chapter consists of the following major sections:

- [Overview of Supervisor Engine Redundancy, page 26-1](#)
- [Understanding Supervisor Engine Redundancy, page 26-2](#)
- [Supervisor Engine Redundancy Guidelines and Restrictions, page 26-3](#)
- [Configuring Supervisor Engine Redundancy, page 26-4](#)
- [Synchronizing the Supervisor Engine Configurations, page 26-4](#)
- [Performing a Software Upgrade, page 26-5](#)
- [Copying Files to the Standby Supervisor Engine, page 26-7](#)



Note

For complete syntax and usage information for the commands used in this chapter, refer to the *Cisco IOS Command Reference for the Catalyst 4000 Family Switch* and related publications at <http://www.cisco.com/univercd/cc/td/doc/product/software/ios121/121cgcr/index.htm>

Overview of Supervisor Engine Redundancy

Catalyst 4507R switches allow a standby supervisor engine to take over if the primary supervisor engine fails, thereby allowing the switch to resume operation quickly and efficiently in the event of a supervisor engine failure. This capability is called supervisor engine redundancy. In software, this capability is enabled by route processor redundancy (RPR) operating mode. RPR is a generic term for the feature.

The standby supervisor engine runs in RPR mode. When RPR mode is used, the standby supervisor engine partially boots and keeps synchronized copies of the active configuration, which shortens the time needed to bring up the standby supervisor engine and have it start handling traffic from 1.5 minutes (for a cold boot on the standby) to 30 seconds (to finish the boot and re establish links).

In addition to the reduced switchover time, supervisor engine redundancy supports the following:

- Online insertion and removal (OIR) of the standby supervisor engine,
- Software upgrade (See the [“Performing a Software Upgrade”](#) section on page 26-5)
- Auto-startup and bootvar synchronization

- Hardware signals that detect and decide the active or standby status of supervisor engines
- Clock synchronization every 60 seconds from the active to the standby supervisor engine
- Automatic switchover to the standby supervisor engine if the active supervisor engine ever fails

When the switch is powered on, the two supervisor engines automatically determine between themselves which will serve as the primary and which will be the standby. Usually, the supervisor engine that boots first, either in slot 1 or 2, becomes the active supervisor engine.

A switchover will occur when:

- The active supervisor engine fails or is removed
- A user forces a switchover
- A user reloads the active supervisor engine
- A core dump occurs


Note

In a switchover, there is a disruption of traffic because some address states are lost and then restored after they are dynamically redetermined.

Understanding Supervisor Engine Redundancy

These sections describe supervisor engine redundancy:

- [Operation, page 26-2](#)
- [Supervisor Engine Synchronization, page 26-3](#)

Operation

With supervisor engine redundancy enabled, the standby supervisor engine automatically takes over for the primary supervisor engine if the active supervisor engine fails or if a manual switchover is performed. The standby supervisor engine has already been automatically initialized and configured, shortening the switchover time. Supervisor engine redundancy provides the following additional benefits:

- Online insertion and removal (OIR) of the standby supervisor engine

Supervisor engine redundancy allows OIR of the standby supervisor engine for maintenance. When the standby supervisor engine is inserted, the active supervisor engine detects its presence and begins to transition the standby supervisor engine to the fully initialized state.
- Software upgrade

To minimize software upgrade and downgrade times, you can preload the standby supervisor engine with the software version you want to upgrade or downgrade to and then configure the system to switch over to the standby supervisor engine.

Supervisor engine redundancy also supports manual user-initiated switchover. You can initiate a switchover with the **redundancy force-switchover** command.

Supervisor Engine Synchronization

Because the standby supervisor engine is not fully initialized, it interacts with the active supervisor engine only to receive configuration changes as they occur, keeping the configuration information on both supervisor engines identical. This synchronization of the startup configuration file is enabled by default in RPR mode. You cannot enter CLI commands on the standby supervisor engine.

When a standby supervisor engine is running in RPR mode, the following operations trigger synchronization of the configuration information:

- When a standby supervisor engine first comes online, the configuration information is synchronized from the active supervisor engine to the standby supervisor engine. This synchronization overwrites any existing startup configuration file on the standby supervisor engine.
- If the **auto-synch** command is enabled, changes to the startup configuration on the active supervisor engine are automatically synchronized on the standby supervisor.

Supervisor Engine Redundancy Guidelines and Restrictions

The following guidelines and restrictions apply to supervisor engine redundancy:

- Supervisor engine redundancy does not provide supervisor engine load balancing or any other feature requiring two active supervisor engines. Only one supervisor engine is active. Network services are disrupted until the standby supervisor engine takes over and the switch recovers.
- The two Gigabit Ethernet interfaces available in RPR mode are the first Gigabit Ethernet ports on each supervisor. That is, only Gig 1/1 and Gig 2/1 are available. The other two ports, Gig 1/2 and Gig 2/2, are not available.
- With supervisor engine redundancy enabled, the supervisor engines may run different versions of the Cisco IOS software, if both are Cisco IOS Release 12.1(12c)EW or later releases.
- The Forwarding Information Base (FIB) tables are cleared on a switchover. As a result, routed traffic is interrupted until route tables reconverge.
- Static IP routes are maintained across a switchover because they are configured from entries in the configuration file.
- Information about dynamic states maintained on the active supervisor engine is not synchronized to the standby supervisor engine and is lost on switchover. Dynamic state information like border gateway protocol (BGP) session info is lost at switchover.
- The Catalyst 4507R is the only Catalyst 4000 family switch that supports supervisor engine redundancy.
- The active and standby supervisor engines must be in slots 1 and 2.
- Both the active and standby supervisor engines must be Supervisor Engine IV modules. Earlier versions are not supported.
- Each supervisor engine must have the resources to run the switch on its own, which means all supervisor engine resources are duplicated. In other words, each supervisor engine has its own Flash device and console port connections.
- Make separate console connections to each supervisor engine. Do not connect a Y cable to the console ports.
- You must set the configuration register in the startup-config to autoboot (see the [“Modifying the Boot Field”](#) section on page 3-15).

**Note**

There is no support for booting from the network.

If these requirements are met, the switch functions in RPR mode by default.

Configuring Supervisor Engine Redundancy

Supervisor engine redundancy is configured by default when a second supervisor engine is detected.

This example shows how to display the redundancy state:

```
Switch#show redundancy states
  my state = 13 -ACTIVE
  peer state = 4  -STANDBY COLD
    Mode = Duplex
    Unit = Primary
    Unit ID = 1

Redundancy Mode (Operational) = RPR
Redundancy Mode (Configured)  = RPR
  Split Mode = Disabled
  Manual Swact = Enabled
  Communications = Up

  client count = 4
  client_notification_TMR = 30000 milliseconds
    keep_alive TMR = 4000 milliseconds
    keep_alive count = 1
  keep_alive threshold = 7
    RF debug mask = 0x0
Switch#
```

Synchronizing the Supervisor Engine Configurations

During normal operation, the startup-config, boot variables, config-registers, and VLAN database configuration are synchronized by default between the two supervisor engines. In a switchover, the new active supervisor engine uses the current configuration.

To manually synchronize the configurations used by the two supervisor engines, perform this procedure on the active supervisor engine:

	Task	Command
Step 1	Enter redundancy configuration mode.	Switch(config)# redundancy
Step 2	Enter main-cpu configuration submode.	Switch(config-red)# main-cpu
Step 3	Synchronize the configuration elements.	Switch(config-r-mc)# auto-sync {startup-config config-register bootvar standard}

	Task	Command
Step 4	Return to privileged EXEC mode.	Switch(config-r-mc)# end
Step 5	Force a manual synchronization of the configuration files in NVRAM.	Switch# copy running-config startup-config
	Note This step is not required to synchronize the running configuration file in dynamic random-access memory (DRAM).	



Note The **auto-sync standard** command does not synchronize the calendar and VLAN databases.

This example shows how to reenable the default automatic synchronization feature using the **auto-sync standard** command to synchronize the **startup-config** and **config-register** configuration of the active supervisor engine with the standby supervisor engine: Updates for the boot variables are automatic and cannot be disabled.

```
Switch(config)# redundancy
Switch(config-red)# main-cpu
Switch(config-r-mc)# auto-sync standard
Switch(config-r-mc)# end
Switch# copy running-config startup-config
```



Note To manually synchronize only individual elements of the standard auto-sync configuration, disable the default automatic synchronization feature.

This example shows how to disable default automatic synchronization and allow only automatic synchronization of the config-registers of the active supervisor engine to the standby supervisor engine while disallowing synchronization of the startup configuration:

```
Switch(config)# redundancy
Switch(config-red)# main-cpu
Switch(config-r-mc)# no auto-sync standard
Switch(config-r-mc)# auto-sync config-register
Switch(config-r-mc)# end
```

Performing a Software Upgrade

The software upgrade procedure supported by supervisor engine redundancy allows you to upgrade the Cisco IOS software image on the supervisor engines without reloading the system.

To perform a software upgrade, perform this procedure:

Task	Command
Step 1 Copy the new Cisco IOS software image to bootflash on both supervisor engines.	<pre>Switch# copy source_device:source_filename slot0:target_filename Or: Switch# copy source_device:source_filename bootflash:target_filename Or: Switch# copy source_device:source_filename slaveslot0:target_filename Or: Switch# copy source_device:source_filename slavebootflash:target_filename</pre>
Step 1 Configure the supervisor engines to boot the new image.	<pre>Switch# config terminal Switch(config)# config-register 0x2 Switch(config)# boot system flash device:file_name</pre>
Step 2 Save the configuration.	<pre>Switch# copy running-config start-config</pre>
Step 3 Reload the standby supervisor engine and bring it back online (running the new version of the Cisco IOS software). Note Before reloading the standby supervisor engine, make sure you wait long enough to ensure that all configuration synchronization changes have completed.	<pre>Switch# redundancy reload peer</pre>
Step 4 Conduct a manual switchover to the standby supervisor engine. The standby supervisor engine becomes the new active supervisor engine running the new Cisco IOS software image. The modules reload and the module software downloads from the new active supervisor engine. The old active supervisor engine reboots with the new image and becomes the standby supervisor engine.	<pre>Switch# redundancy force-switchover</pre>

This example shows how to perform a software upgrade:

```
Switch# config terminal
Switch(config)# config-register 0x2
Switch(config)# boot system flash slot0: c6sup22-jsv-mz.121-11.E
Switch# copy running-config start-config
Switch# hw-module reset
Switch# redundancy force-switchover
Switch#
```

Copying Files to the Standby Supervisor Engine

If you want to manually copy a file from the active supervisor engine to the **slot0:** device on the standby supervisor engine, use the following command:

```
Switch# copy source_device:source_filename slaveslot0:target_filename
```

Use the following command to copy a file to the **bootflash:** device on a standby supervisor engine:

```
Switch# copy source_device:source_filename slavebootflash:target_filename
```

