

About This Guide

This preface describes the audience, organization, and conventions of the *System Message Guide—Catalyst 5000, 4000, 2948G, 2926G, and 2926 Series Switches*, and provides information on how to obtain related documentation.

Audience

This guide is designed for the installer and user with a working knowledge of the Catalyst 5000, Catalyst 4000, Catalyst 2948G, Catalyst 2926G, and Catalyst 2926 series switch system software. Users of this guide might also include network administrators and other people responsible for setting up and maintaining these switches.

Organization

This guide is organized as follows:

Chapter	Title	Description
Chapter 1	Message Format	Describes how to read a system or error message.
Chapter 2	Message and Recovery Procedures	Contains the message descriptions and recovery procedures.

Related Documentation

Other documents in the Catalyst 5000, 4000, 2948G, 2926G, and 2926 series documentation set include:

- *Quick Software Configuration—Catalyst 5000, 4000, 2948G, 2926G, and 2926 Series Switches*
- *Catalyst 5000 Series Installation Guide*
- *Catalyst 5000 Series Module Installation Guide*
- *Catalyst 5000 Series Supervisor Engine Installation Guide*
- *Software Configuration Guide—Catalyst 5000, 4000, 2948G, 2926G, and 2926 Series Switches*
- *Command Reference—Catalyst 5000, 4000, 2948G, 2926G, and 2926 Series Switches*

Conventions

This document uses the following conventions:

Convention	Description
boldface font	Commands and keywords are in boldface .
<i>italic</i> font	Arguments for which you supply values are in <i>italics</i> .
[]	Elements in square brackets are optional.
{ x y z }	Alternative keywords are grouped in braces and separated by vertical bars.
[x y z]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
screen font	Terminal sessions and information the system displays are in <i>screen font</i> .
boldface screen font	Information you must enter is in boldface screen font.
<i>italic screen</i> font	Arguments for which you supply values are in <i>italic screen</i> font.

Convention	Description
→	This pointer highlights an important line of text in an example.
^	The symbol ^ represents the key labeled Control—for example, the key combination ^D in a screen display means hold down the Control key while you press the D key.
< >	Nonprinting characters, such as passwords are in angle brackets.

Notes use the following conventions:

Note Means *reader take note*. Notes contain helpful suggestions or references to material Cisco Connection Online

Cisco Connection Online

Cisco Connection Online (CCO) is Cisco Systems' primary, real-time support channel. Maintenance customers and partners can self-register on CCO to obtain additional information and services.

Available 24 hours a day, 7 days a week, CCO provides a wealth of standard and value-added services to Cisco's customers and business partners. CCO services include product information, product documentation, software updates, release notes, technical tips, the Bug Navigator, configuration notes, brochures, descriptions of service offerings, and download access to public and authorized files.

CCO serves a wide variety of users through two interfaces that are updated and enhanced simultaneously: a character-based version and a multimedia version that resides on the World Wide Web (WWW). The character-based CCO supports Zmodem, Kermit, Xmodem, FTP, and Internet e-mail, and it is excellent for quick access to information over lower bandwidths. The WWW version of CCO provides richly formatted documents with photographs, figures, graphics, and video, as well as hyperlinks to related information.

You can access CCO in the following ways:

- WWW: <http://www.cisco.com>
- WWW: <http://www-europe.cisco.com>
- WWW: <http://www-china.cisco.com>
- Telnet: cco.cisco.com
- Modem: From North America, 408 526-8070; from Europe, 33 1 64 46 40 82. Use the following terminal settings: VT100 emulation; databits: 8; parity: none; stop bits: 1; and connection rates up to 28.8 kbps.

For a copy of CCO's Frequently Asked Questions (FAQ), contact cco-help@cisco.com. For additional information, contact cco-team@cisco.com.

Note If you are a network administrator and need personal technical assistance with a Cisco product that is under warranty or covered by a maintenance contract, contact Cisco's Technical Assistance Center (TAC) at 800 553-2447, 408 526-7209, or tac@cisco.com. To obtain general information about Cisco Systems, Cisco products, or upgrades, contact 800 553-6387, 408 526-7208, or cs-rep@cisco.com.

Documentation CD-ROM

Cisco documentation and additional literature are available in a CD-ROM package, which ships with your product. The Documentation CD-ROM, a member of the Cisco Connection Family, is updated monthly. Therefore, it might be more current than printed documentation. To order additional copies of the Documentation CD-ROM, contact your local sales representative or call customer service. The CD-ROM package is available as a single package or as an annual subscription. You can also access Cisco documentation on the World Wide Web at <http://www.cisco.com>, <http://www-china.cisco.com>, or <http://www-europe.cisco.com>.

If you are reading Cisco product documentation on the World Wide Web, you can submit comments electronically. Click **Feedback** in the toolbar and select **Documentation**. After you complete the form, click **Submit** to send it to Cisco. We appreciate your comments.