



Symbols

- ? (help)
- switch CLI [1-7](#)

Numerics

- 802.1x
 - configuring on a port [2-295](#)
 - displaying authenticator information [2-612](#)
 - displaying backend authenticator information [2-612](#)
 - displaying system capabilities and protocol version [2-506](#)
 - displaying timer values [2-506](#)
 - initializing on port [2-295](#)
 - manually initiating reauthentication [2-295](#)
 - setting number of frame [2-190](#)
 - setting retransmission authentication time [2-190](#)
 - setting retransmission time [2-190](#)
 - specifying port control type
 - auto [2-295](#)
 - force-authorized [2-295](#)
 - force-unauthorized [2-295](#)

A

- accessing CLI of intelligent module [2-136](#)
- accounting
 - RADIUS
 - disabling accounting of normal login session [2-142](#)
 - disabling accounting of system events [2-145](#)
 - enabling accounting of normal login session [2-142](#)
 - enabling accounting of system events [2-145](#)

TACACS+

- disabling accounting of normal login session [2-142](#)
- disabling accounting of system events [2-145](#)
- disabling suppression of accounting information [2-144](#)
- enabling accounting of normal login session [2-142](#)
- enabling accounting of outbound connection events [2-140](#)
- enabling accounting of system events [2-145](#)
- enabling command event accounting [2-138](#)
- enabling suppression of accounting information [2-144](#)
- setting accounting update frequency [2-147](#)
- adding to permit list [2-232](#)
- alias
 - defining [2-148](#)
 - displaying [2-462](#)
- ARP table
 - adding entries [2-149](#)
 - adding IP address-to-MAC address mapping entries [2-149](#)
 - clearing entries [2-6](#)
 - displaying [2-462](#)
 - displaying table [2-462](#)
 - setting aging time [2-149](#)
 - setting ARP agingtime [2-149](#)

ATM

- accessing CLI [2-136](#)
- authentication
 - Kerberos
 - enabling [2-151](#)
 - RADIUS
 - enabling [2-151](#)
 - specifying lockout time [2-151](#)
 - specifying login lockout time [2-153](#)

specifying number of connection attempts [2-151](#)
 specifying number of login connection attempts [2-153](#)
 specifying primary login method [2-153](#)
 specifying primary method [2-151](#)
 TACACS+
 enabling [2-151](#)
 authorization
 TACACS+
 disabling [2-155](#)
 disabling authorization of privileged mode events [2-157](#)
 enabling [2-155](#)
 enabling authorization of EXEC mode events [2-159](#)
 enabling authorization of normal login mode [2-159](#)
 enabling authorization of privileged mode events [2-157](#)
 enabling authorization of session events [2-159](#)
 auto-config
 synchronizing [2-167](#)
 auto-config file
 configuring [2-167](#)
 auxiliary VLAN
 configuring ports [2-287](#)
 displaying port status [2-597](#)

B

banner
 clearing MOTD banner [2-7](#)
 configuring message-of-the-day banner [2-161](#)
 baud rate
 setting console port baud rate [2-405](#)
 boot
 synchronizing auto-config file [2-167](#)
 boot configuration register
 setting [2-164](#)
 BOOT environment variable
 clearing [2-8](#)
 displaying contents [2-466](#)

 setting [2-168](#)
 bootflash
 displaying information [2-517](#)
 bridge
 displaying information [2-467](#)
 broadcast/multicast suppression
 disabling [2-54](#)
 displaying information [2-598](#)
 broadcast suppression
 setting [2-289](#)

C

CAM table
 adding entries [2-175](#)
 clearing entries [2-9](#)
 configuring traffic filtering [2-175](#)
 deleting entry [2-9](#)
 displaying
 aging time information [2-470](#)
 displaying entries [2-468](#)
 setting
 aging time [2-175](#)
 setting agingtime [2-175](#)
 CDP
 configuring [2-177](#)
 configuring hold time [2-178](#)
 disabling [2-177](#)
 displaying information [2-472](#)
 displaying port CDP state and message interval [2-601](#)
 enabling [2-177](#)
 selecting version [2-180](#)
 set cdp interval [2-179](#)
 setting message interval [2-179](#)
 CGMP
 clearing statistics information [2-10](#)
 disabling [2-181](#)
 disabling leave processing [2-182](#)
 displaying CGMP leave status [2-475](#)

- displaying statistics [2-476](#)
- enabling [2-181](#)
- enabling leave processing [2-182](#)
- set cgmp [2-181](#)
- set cgmp leave [2-182](#)
- show cgmp leave [2-475](#)
- channel
 - displaying EtherChannel group status information [2-483](#)
 - displaying port or module information [2-603](#)
 - setting channel path cost [2-183](#)
 - setting channel VLAN cost [2-184](#)
- clearing MAC addresses [2-55](#)
- clearing protocol filters [2-55](#)
- CLI
 - exiting session [2-128](#)
 - pausing CLI for specified number of seconds [776](#)
 - ROM monitor CLI
 - accessing [1-9](#)
 - operating [1-10](#)
 - switch CLI
 - accessing [1-1](#)
 - command aliases [1-5](#)
 - command help [1-7](#)
 - command modes [1-3](#)
 - console port [1-2](#)
 - history substitution [1-4](#)
 - operating [1-3](#)
 - starting Telnet [1-2](#)
 - Telnet [1-2](#)
- clock
 - displaying summertime status [2-713](#)
 - setting [2-283, 2-403](#)
- closing active console [2-110](#)
- command accounting
 - clearing command log entries [2-36](#)
 - displaying command log entries [2-549](#)
- command alias
 - clearing [2-5](#)
 - displaying [2-2](#)
 - removing alias name and value [769](#)
 - setting [2-2](#)
 - using [1-5](#)
- command help
 - switch CLI [1-7](#)
- command history
 - switch CLI [1-4](#)
- command history log
 - clearing [2-36](#)
 - displaying [2-549](#)
- command-line editing
 - scrolling to specified text [1-5](#)
- command logging
 - clearing log entry table [2-36](#)
 - displaying command log entries [2-549](#)
- command modes
 - switch CLI
 - normal mode [1-3](#)
 - privileged mode [1-3](#)
- command shorthands
 - clearing [2-5](#)
 - displaying [2-2](#)
 - setting [2-2](#)
- common access policy
 - displaying group name [2-669](#)
 - displaying user collection [2-669](#)
- Common Open Policy Server
 - See COPS
- community and associated access types
 - defining [2-351](#)
- configuration files
 - clearing contents [2-8](#)
 - deleting [2-104](#)
 - downloading rcp configuration [2-96](#)
 - specifying file to use [2-162](#)
- configuration mode
 - changing binary model and text model [2-185](#)
 - displaying [2-493](#)

configuration register setting

displaying [2-466](#)

setting [2-8](#)

configuration register utility

configuring [2-98](#)

console

setting port baud rate [2-405](#)

contact person

identifying [2-406](#)

COPS

clearing COPS configuration [2-14](#)

clearing domain name [2-14](#)

clearing roles [2-14](#)

clearing servers [2-14](#)

configuring

domain name [2-187](#)

policy server names [2-187](#)

displaying COPS information for RSVP+ [2-494](#)

displaying the policy tree information [2-494](#)

displaying the ports assigned to each role [2-494](#)

set cops [2-187](#)

setting

connection retry interval [2-187](#)

memory usage [2-187](#)

core dump file

disabling [2-407](#)

enabling [2-407](#)

naming [2-409](#)

counters

clearing

MAC counters [2-16](#)

port counters [2-16](#)

clearing station [2-83](#)

displaying port counters [2-609](#)

resetting soft error statistics [2-83](#)

country code

setting [2-410](#)

CPU

displaying information [2-634](#)

D

daylight saving time

displaying clock [2-713](#)

setting clock [2-283, 2-403](#)

default IP gateway

specifying [2-235](#)

default port status

displaying [2-505](#)

setting [2-189](#)

defining Ethertype protocol filters [2-300](#)

defining protocol classes, SAPs [2-299](#)

defining protocol filters, Ethertype [2-300](#)

deleted file

recovering [770](#)

DES key

defining [2-246](#)

removing [2-34](#)

DHCP

configuring interfaces [2-222](#)

diagnostic tests

errors [2-720](#)

level [2-720](#)

module [2-720](#)

setting level [2-419](#)

system [2-720](#)

disabling UDLD information display [2-441](#)

displaying configuration information [777, 782](#)

displaying configuration information currently in running memory [785](#)

displaying current cd command setting [2-127](#)

displaying Layer 2 path [2-121](#)

displaying system information [2-714](#)

DNS

defining IP address of DNS server [2-228](#)

defining server as primary [2-228](#)

disabling [2-226](#)

enabling [2-226](#)

setting default DNS domain name [2-227](#)

domain naming service
 See DNS

dot1x

- clearing configuration [2-17](#)
- configuring on a port [2-295](#)
- configuring on a system [2-190](#)
- disabling authentication [2-190](#)
- disabling reauthentication [2-190](#)
- displaying authenticator information [2-612](#)
- displaying backend authenticator information [2-612](#)
- displaying system capabilities and protocol version [2-506](#)
- displaying timer values [2-506](#)
- enabling authentication [2-190](#)
- enabling reauthentication [2-190](#)
- initializing on port [2-295](#)
- manually initiating reauthentication [2-295](#)
- setting idle time [2-190](#)
- setting number of frame retransmissions [2-190](#)
- setting retransmission authentication time [2-190](#)
- setting retransmission time [2-190](#)
- specifying port control type
 - auto [2-295](#)
 - force-authorized [2-295](#)
 - force-unauthorized [2-295](#)

downloading

- forcing module to accept SCP download [2-130](#)
- image [2-111](#)
- rcp configuration file [2-96](#)

downloading image [2-111](#)

DRiP

- clearing DRiP statistical information [2-18](#)
- displaying statistics [2-507](#)

dump log

- clearing [2-35](#)
- displaying [2-546](#)

DVLAN

- displaying statistics [2-508](#)

E

EAP

- configuring dot1x [2-190](#)

error detection

- disabling [2-196](#)
- displaying settings [2-510](#)
- enabling [2-196](#)
- inband [2-196](#)
- memory [2-196](#)
- port counter [2-196](#)

error disable

- configuring timeout for ports in errdisable state [2-194](#)
- displaying configuration and status information [2-509](#)

EtherChannel

- displaying channel information [2-478](#)

Ethertype, protocol filters [2-300](#)

exiting CLI session [2-128](#)

Extensible Authentication Protocol

- See EAP

F

FDDI

- changing TNotify timer value for FDDI module. [2-203](#)
- changing TRequest value for FDDI module [2-204](#)
- configuring user-data string in SMT MIB of FDDI module [2-205](#)
- disabling APaRT [2-170](#)
- disabling relearning of MAC address [2-171](#)
- displaying FDDI CAM table [2-513](#)
- displaying settings [2-511](#)
- enabling APaRT [2-170](#)
- enabling relearning of MAC address [2-171](#)
- setting default method for translating IPX packets from Ethernet to FDDI [2-173](#)
- setting default method for translating IPX packets from FDDI to Ethernet [2-172](#)
- setting default method for translating translating IPX FDDI SNAP frames to Ethernet frames [2-174](#)

- specifying LER-alarm value for FDDI port [2-200](#)
- specifying LER-cutoff value for FDDI port [2-201](#)
- feature
 - disabling port disable for duplex mismatch [2-197](#)
 - enabling
 - port disable for duplex mismatch [2-197](#)
 - MDG
 - disabling [2-198](#)
 - enabling [2-198](#)
 - no ISL entry [2-199](#)
- Flash device
 - confirming checksum of file [775](#)
 - recovering deleted file [770](#)
 - setting system default Flash device [2-4](#)
- Flash files
 - deleting [759](#)
- Flash memory
 - copying image from host [2-111](#)
 - displaying contents of file that have been saved to Flash memory [2-515](#)
- Flash PC card
 - displaying information [2-517](#)
 - formatting [2-117](#)
- flow control
 - configuring ports [2-302](#)

G

- GARP
 - setting timers [2-206](#)
- GMRP
 - clearing statistics information [2-19](#)
 - disabling Forward All [2-209](#)
 - disabling on ports [2-305](#)
 - disabling on VLANs [2-208](#)
 - displaying complete GMRP-related configuration information [2-521](#)
 - displaying GMRP-related statistics [2-522](#)
 - displaying timer values [2-523](#)

- enabling Forward All [2-209](#)
- enabling on ports [2-305](#)
- enabling on VLANs [2-210](#)
- setting registration type [2-210](#)
- setting timers [2-211](#)
- GVRP
 - clearing statistics information [2-20](#)
 - disabling dynamic VLAN creation [2-214](#)
 - disabling globally [2-212](#)
 - disabling ports [2-306](#)
 - displaying configuration information [2-524](#)
 - displaying statistics [2-526](#)
 - enabling dynamic VLAN creation [2-214](#)
 - enabling globally [2-212](#)
 - enabling ports [2-306](#)
 - setting administrative control [2-215](#)
 - setting timers [2-217](#)
 - VLAN declaration [2-213](#)

H

- hardware
 - displaying versions [2-742](#)
- history substitution
 - switch CLI [1-4](#)
- hop-by-hop path
 - displaying [766](#)

I

- ICMP
 - disabling redirect messages [2-234](#)
 - disabling unreachable messages [2-237](#)
 - enabling redirect messages [2-234](#)
 - enabling unreachable messages [2-237](#)
 - sending echo-request packets
 - configuring ping [2-124](#)
- idle session timeout

- setting [2-258](#)
- idling
 - timeout [2-258](#)
- ifIndex
 - displaying [2-618](#)
 - displaying information [2-528](#)
- IGMP
 - clearing statistics information [2-21](#)
 - disabling fastleave processing [2-220](#)
 - disabling snooping [2-219](#)
 - displaying IGMP mode [2-529](#)
 - displaying IGMP statistics [2-530](#)
 - enabling fastleave processing [2-220](#)
 - enabling snooping [2-219](#)
 - setting IGMP snooping mode [2-221](#)
- in-band interfaces
 - configuring [2-222](#)
- instances
 - displaying BPDU skew status [2-689](#)
- IP addresses [2-232](#)
 - clearing [2-25](#)
- IP alias
 - adding [2-225](#)
 - clearing [2-22](#)
 - displaying [2-535](#)
- IP DNS
 - clearing default DNS domain name [2-23](#)
 - defining IP address of DNS server [2-228](#)
 - displaying DNS domain name [2-536](#)
 - displaying DNS name server [2-536](#)
 - displaying DNS name servers [2-535](#)
 - removing DNS server [2-24](#)
- IP fragmentation
 - disabling [2-229](#)
 - enabling [2-229](#)
- IP permit list
 - clearing IP address and mask [2-25](#)
 - disabling [2-232](#)
 - displaying [2-540](#)

- enabling [2-232](#)
- IP routing table
 - adding IP addresses [2-235](#)
 - adding IP aliases [2-235](#)
 - deleting entries [2-27](#)
 - displaying entries [2-542](#)
 - specifying default IP gateway [2-235](#)
- ISL entry
 - disabling [2-199](#)
 - enabling [2-199](#)

J

- jumbo frames
 - displaying settings [2-619](#)
 - enabling [2-309](#)
 - port guidelines [2-309](#)

K

- Kerberos
 - authenticating users [2-240](#)
 - clearing Kerberos realm to DNS domain name map [2-31](#)
 - clearing secret key [2-34](#)
 - clearing specific Kerberos entry [2-32](#)
 - defining secret key [2-246](#)
 - deleting all Kerberos credentials [2-30](#)
 - disabling credentials forwarding [2-29](#)
 - disabling mandatory authentication [2-28](#)
 - displaying configuration information [2-544](#)
 - displaying credentials information [2-545](#)
 - enabling as primary authentication method for login [2-153](#)
 - enabling authentication [2-151](#)
 - enabling mandatory authentication [2-238](#)
 - entering SRVTAB file from command line [2-243](#)
 - forwarding user credentials [2-239](#)
 - mapping realm to DNS domain name [2-241](#)

- providing file containing secret key [2-245](#)
- specifying which KDC to use [2-242](#)
- key pair
 - defining authentication pair [2-281](#)

L

- link negotiation protocol
 - disabling on port [2-314](#)
 - displaying setting [2-622](#)
- listing Flash memory device files [2-107](#)
- local command accounting
 - clearing command log entries [2-36](#)
 - displaying command log entries [2-549](#)
- local engine ID
 - displaying [2-668](#)
- login password
 - changing [2-286](#)
- loop guard
 - disabling [2-379](#)
 - enabling [2-379](#)

M

- MAC addresses
 - clearing addresses [2-55](#)
 - clearing from secure MAC addresses list [2-58](#)
 - clearing MAC address from list of secure MAC addresses [2-58](#)
 - displaying port MAC counter information [2-620](#)
- MAC counters
 - displaying [2-554](#)
- MDG
 - disabling feature [2-198](#)
 - enabling feature [2-198](#)
- membership assignments
 - reconfirming [2-129](#)
- memory allocation
 - displaying information [2-634](#)

- message log
 - limiting number of system logging messages buffered [2-248](#)
 - setting size of syslog table [2-250](#)
- message-of-the-day banner
 - clearing [2-7](#)
- messages
 - disabling logging [2-256](#)
 - enabling logging [2-256](#)
 - sending logging messages to current login session [2-256](#)
- MIB
 - displaying CISCO-IMAGE-MIB information [2-532](#)
 - removing view entry [2-76](#)
- microcode
 - displaying version [2-557](#)
- MLS
 - adding protocols to protocol statistics list [2-272](#)
 - adding routers to MLS-RP include list [2-265](#)
 - adding routers to MMLS-RP include list [2-268](#)
 - clearing IP MLS cache entries [2-41](#)
 - clearing IP MLS statistics [2-49](#)
 - clearing IP multicast MLS statistics for all MMLS-RPs [2-47](#)
 - clearing IPX MLS cache entries [2-43](#)
 - clearing IPX MLS statistics [2-49](#)
 - clearing manually configured multicast router ports [2-50](#)
 - clearing MLS NDE flow filter [2-48](#)
 - configuring NDE flow [2-269](#)
 - disabling IP multicast [2-267](#)
 - disabling NDE [2-269](#)
 - disabling on switch [2-259](#)
 - displaying IP MLS state information [2-562](#)
 - displaying IP MLS statistics information [2-572](#)
 - displaying IP multicast MLS statistics for MMLS-RPs [2-569](#)
 - displaying IPX MLS statistics information [2-572](#)
 - displaying IPX state information [2-562](#)
 - displaying list of all MLS-related debug information [2-561](#)

- displaying MLS Layer 3 packet information [2-559](#)
- displaying MLS-RP information [2-571](#)
- displaying MLS state information [2-562](#)
- displaying MLS statistics information [2-572](#)
- displaying MSFC MLS statistics information [2-572](#)
- displaying NDE configuration and status information [2-570](#)
- displaying NDE information [2-559](#)
- displaying router information in IP MLS-RP include list [2-565](#)
- displaying router information in IP multicast MLS-RP include list [2-568](#)
- displaying router information in IPX MLS-RP include list [2-565](#)
- displaying router processor MLS information [2-562](#)
- display IP multicast MLS cache entries [2-566](#)
- enabling IP multicast [2-267](#)
- enabling NDE [2-269](#)
- enabling on switch [2-259](#)
- removing router from IP multicast MLS-RP include list [2-46](#)
- removing routers from IP MLS-RP include list [2-44](#)
- removing routers from IPX MLS-RP include list [2-45](#)
- setting MLS aging time [2-260](#)
- setting MLS fast aging time [2-261](#)
- specifying collector [2-269](#)
- specifying minimum flow mask used [2-263](#)
- MLS-RP
 - displaying router entries in forwarding table [2-471](#)
- module configuration
 - displaying the nondefault configuration [2-488](#)
- module error log
 - clearing [2-35](#)
- modules
 - disabling [2-273](#)
 - displaying information stored in system module initiation log [2-577](#)
 - displaying status and information [2-575](#)
 - enabling [2-274](#)
 - naming [2-275](#)

- monitoring traffic
 - configuring threshold [2-437](#)
- multicast
 - clearing manually configured router ports [2-50](#)
 - configuring port as multicast router port [2-276](#)
 - displaying multicast protocols status [2-582](#)
- multicast group
 - displaying configuration [2-579](#)
 - displaying total count of multicast addresses (groups) in VLAN [2-581](#)
- multicast router
 - displaying ports with CGMP-capable routers [2-583](#)
- multicast suppression
 - setting [2-289](#)

N

- NAM
 - disabling SNMP extended RMON support [2-353](#)
 - enabling SNMP extended RMON support [2-353](#)
- naming module [2-275](#)
- naming your system [2-413](#)
- network interfaces
 - displaying information [2-533](#)
- network statistics
 - displaying [2-585](#)
- normal mode
 - returning from privileged mode [2-109](#)
- NTP
 - configuring IP address of NTP server [2-282](#)
 - configuring server authentication key [2-282](#)
 - configuring time-adjustment factor [2-279](#)
 - defining authentication key pair [2-281](#)
 - disabling NTP authentication [2-277](#)
 - disabling switch as NTP client [2-280](#)
 - displaying current status [2-591](#)
 - enabling NTP authentication [2-277](#)
 - enabling switch as NTP client [2-280](#)
 - removing authentication keys [2-51](#)

- removing servers [2-52](#)
 - set ntp authentication [2-277](#)
 - setting daylight saving time [2-283](#)
 - ntp
 - time zone
 - returning to default, UTC [2-53](#)
 - NVRAM
 - changing configuration mode [2-185](#)
 - clearing stored module configuration information [2-12](#)
 - clearing stored system configuration information [2-12](#)
 - displaying startup configuration [2-703](#)
-
- O**
- oops
 - recovering deleted file [770](#)
-
- P**
- PAgP
 - clearing statistical information [2-11](#)
 - configuring ports [2-291](#)
 - displaying port or module information [2-603](#)
 - displaying port statistics [2-478](#)
 - password
 - changing [2-286](#)
 - setting password for privileged level [2-193](#)
 - peak
 - displaying information [2-735](#)
 - port name
 - setting [2-313](#)
 - ports
 - clearing MAC addresses from secure MAC addresses list [2-58](#)
 - clearing port configuration for optimizing host connection [2-56](#)
 - configuring access port on Cisco IP phone [2-321](#)
 - configuring duplex type [2-297](#)
 - configuring flow control
 - pause frames [2-302](#)
 - configuring port security [2-322](#)
 - configuring speed [2-324](#)
 - creating EtherChannel port bundles [2-291](#)
 - defining EtherChannel administrative groups [2-291](#)
 - disabling [2-294](#)
 - disabling link negotiation protocol [2-314](#)
 - disabling operation of standard SNMP link trap [2-326](#)
 - disabling protocol membership [2-315](#)
 - disabling standby ports feature [2-400](#)
 - displaying flow control information [2-616](#)
 - displaying information [2-632](#)
 - displaying link negotiation protocol setting [2-622](#)
 - displaying MAC counter information [2-620](#)
 - displaying port capabilities [2-599](#)
 - displaying port security configuration [2-626](#)
 - displaying port security configuration statistics [2-628](#)
 - displaying port status [2-593](#)
 - displaying protocol filters configured [2-623](#)
 - displaying standby port status [2-702](#)
 - displaying status [2-629](#)
 - displaying trap status information [2-631](#)
 - enabling [2-298](#)
 - enabling jumbo frames [2-309](#)
 - enabling link negotiation protocol [2-314](#)
 - enabling operation of standard SNMP link trap [2-326](#)
 - enabling or disabling GMRP [2-305](#)
 - enabling or disabling GVRP [2-306](#)
 - enabling protocol membership [2-315](#)
 - enabling standby ports feature [2-400](#)
 - optimizing port configuration for host connection [2-308](#)
 - returning to factory-set default for all packets arriving through untrusted port [2-57](#)
 - setting default value for packets arriving through untrusted port [2-319](#)
 - setting interface interpretation as physical port [2-317](#)
 - setting interface interpretation as VLAN [2-317](#)
 - setting port name [2-313](#)
 - setting priority level [2-310](#)

- setting trusted state [2-320](#)
 - setting VLAN membership assignment [2-311](#)
 - specifying frame-distribution method for switch [2-291](#)
 - port security
 - clearing MAC addresses from secure MAC addresses list [2-58](#)
 - configuring [2-322](#)
 - port speed
 - configuring [2-324](#)
 - privileged level
 - setting password [2-193](#)
 - privileged mode
 - activating [2-116](#)
 - returning to normal mode [2-109](#)
 - process utilization
 - displaying information [2-634](#)
 - prompt
 - changing [2-327](#)
 - protocol filtering
 - activating [2-328](#)
 - deactivating [2-328](#)
 - displaying status [2-637](#)
 - protocol filters
 - clearing [2-55](#)
 - protocol membership
 - disabling on port [2-315](#)
 - enabling on port [2-315](#)
-
- Q**
- QoS
- clearing mac-cos values [2-61](#)
 - clearing map values [2-62](#)
 - clear qos ip-filter [2-60](#)
 - configuring access port [2-321](#)
 - deleting CoS assigned to MAC addresses [2-59](#)
 - deleting entries from ACE list [2-60](#)
 - displaying ACL [2-640](#)
 - displaying counters [2-646](#)
 - displaying current information for MAC address/VLAN pair [2-642](#)
 - displaying information for MAC address and VLAN pair [2-642](#)
 - displaying information on per-port basis [2-624](#)
 - displaying policy source information [2-644](#)
 - displaying QoS status [2-647](#)
 - displaying related information [2-638](#)
 - displaying router information for MAC/VLAN pair [2-645](#)
 - mapping CoS values [2-334](#)
 - removing entries from router MAC address-to-VLAN mappings [2-63](#)
 - returning to factory-set default for all packets arriving through untrusted port [2-57](#)
 - returning to factory-set default values [2-59](#)
 - returning to factory-set queue defaultsQoS
 - returning to factory-set threshold map defaults [2-59](#)
 - returning to factory-set threshold defaults [2-59](#)
 - setting CoS values [2-333](#)
 - setting default for all packets arriving through untrusted port [2-319](#)
 - setting packet value [2-319](#)
 - setting policy source to COPS [2-336](#)
 - setting policy source to local NVRAM [2-336](#)
 - setting port policy source [2-317](#)
 - setting QoS CoS to IP filter [2-330](#)
 - setting trusted state [2-320](#)
 - show qos ip [2-640](#)
 - show qos router-macs [2-645](#)
 - specifying interface as port or VLAN [2-317](#)
 - specifying router MAC addresses [2-338](#)
 - specifying WRED threshold [2-339](#)
 - turning off [2-329](#)
 - turning on [2-329](#)
-
- R**
- RADIUS
- clearing RADIUS server [2-65](#)

- clear radius key [2-64](#)
- disabling accounting of normal login session [2-142](#)
- disabling accounting of system events [2-145](#)
- displaying RADIUS configuration parameters [2-648](#),
[2-650](#)
- enabling accounting of normal login session [2-142](#)
- enabling accounting of system events [2-145](#)
- enabling as primary authentication method for
login [2-153](#)
- enabling authentication [2-151](#)
- setting deadtime [2-341](#)
- setting encryption and authentication [2-342](#)
- setting time between retransmissions [2-345](#)
- setting up RADIUS server [2-344](#)
- specifying RADIUS retransmit times [2-343](#)

rcp

- clearing information [2-66](#)
- copying software image to Flash memory [2-111](#)
- downloading configuration file [2-96](#)
- downloading Flash image or switch configuration [2-100](#)
- setting username [2-346](#)
- uploading Flash image or switch configuration [2-100](#)

relearning MAC addresses from Ethernet interface [2-171](#)

Remote Copy Protocol

- See rcp

repeating command [2-131](#)

reset

- cancel [2-134](#)
- module [2-134](#)
- schedule reset [2-134](#)
- switch [2-134](#)

restoring factory-set defaults [2-81](#)

RGMP

- clearing statistics information [2-67](#)
- disabling [2-347](#)
- displaying multicast group count [2-650](#)
- displaying multicast groups [2-650](#)
- displaying statistics information [2-651](#)
- enabling [2-347](#)

RIF

- displaying information [2-652](#)

ROM monitor

- booting up external process [2-3](#)
- configuring configuration register utility [2-98](#)
- displaying command aliases [2-2](#)
- displaying main memory information [2-123](#)
- displaying NVRAM information [2-123](#)
- displaying packet memory information [2-123](#)
- displaying supported DRAM configurations [2-123](#)
- displaying variable names [2-137](#)
- listing available device IDs [2-105](#)
- repeating command [2-131](#)
- setting ROM monitor variable name values [2-137](#)
- writing environment variables and aliases to
NVRAM [761](#)

ROM monitor CLI

- accessing [1-9](#)
- operating [1-10](#)

root guard

- disabling [2-379](#)
- enabling [2-379](#)

RSFC

- accessing CLI [2-136](#)

RSM

- accessing CLI [2-136](#)
- disabling line protocol state [2-348](#)
- displaying current status of line protocol state
determination of RSMs [2-653](#)
- enabling line protocol state [2-348](#)

running configuration

- displaying [2-654](#)

S

Saint

- packet buffer
 - set test diaglevel [2-419](#)
 - set test packetbuffer [2-421](#)

- test packetbuffer [763](#)
- SAPs
 - IBM protocol class [2-299](#)
 - IEEE protocol class [2-299](#)
- session, ending [2-128](#)
- setting default method for translating IPX packets from Ethernet to FDDI [2-173](#)
- setting default method for translating IPX packets from FDDI to Ethernet [2-172](#)
- setting default method for translating translating IPX FDDI SNAP frames to Ethernet frames [2-174](#)
- setting VARNAME variable [774](#)
- SLIP
 - attaching [758](#)
 - configuring interfaces [2-222](#)
 - detaching [758](#)
- SNMP
 - adding trap receiver table entry [2-364](#)
 - clearing SNMP trap receiver entry [2-74](#)
 - clearing target parameters [2-73](#)
 - configuring MIB view [2-368](#)
 - configuring new user [2-366](#)
 - configuring target address entry [2-360](#)
 - configuring target parameters [2-362](#)
 - defining community and associated access types [2-351](#)
 - defining group access rights [2-349](#)
 - disabling extendedrmon [2-352](#)
 - disabling NDE stream [2-353](#)
 - disabling operation of standard SNMP link trap [2-326](#)
 - disabling RMON support [2-358](#)
 - disabling VLANagent option [2-354](#)
 - disabling VLAN monitor option [2-355](#)
 - displaying access information [2-658](#)
 - displaying community information [2-660](#)
 - displaying counter information [2-662](#)
 - displaying group or users with common access policy [2-669](#)
 - displaying information [2-656](#)
 - displaying information for specific user [2-679](#)
 - displaying local engine ID [2-668](#)
 - displaying MIB view configuration [2-681](#)
 - displaying snmpNotifyTable configuration [2-672](#)
 - displaying target address entries [2-675](#)
 - displaying target parameter entries [2-677](#)
 - enabling extendedrmon [2-352](#)
 - enabling NDE stream [2-353](#)
 - enabling operation of standard SNMP link trap [2-326](#)
 - enabling RMON support [2-358](#)
 - enabling VLANagent option [2-354](#)
 - enabling VLAN monitor option [2-355](#)
 - establishing relationship between group and user [2-356](#)
 - removing group access rights [2-68](#)
 - removing individual user [2-75](#)
 - removing mappings between community strings and security modes [2-69](#)
 - removing MIB view entry [2-76](#)
 - removing notifyname [2-71](#)
 - removing SNMP user from SNMP group [2-70](#)
 - removing target address entry [2-72](#)
 - set snmp extendedrmon vlanagent [2-354](#)
 - set snmp targetaddr [2-360](#)
 - setting notifyname entry [2-357](#)
 - setting notifytag entry [2-357](#)
 - show snmp engineid [2-668](#)
 - show snmp group [2-669](#)
 - show snmp notify [2-672](#)
 - show snmp view [2-681](#)
- SNMP engineid
 - show engineid [2-668](#)
- SNMP group
 - group/users with common access policy [2-669](#)
 - removing group access rights [2-68](#)
 - removing user [2-70](#)
- SNMP notify
 - show snmpNotifyTable [2-672](#)
- SNMP permit list
 - adding [2-232](#)
 - clearing [2-25](#)
- SNMP target address

- set target address information in TargetAddressTable [2-360](#)
- SNMP trap receiver table
 - removing entry [2-74](#)
 - sending message [765](#)
- soft error
 - configuring [2-401](#)
 - disabling [2-401](#)
 - displaying monitoring configuration [2-709](#)
 - displaying softerror counters [2-711](#)
 - enabling [2-401](#)
- software
 - displaying versions [2-742](#)
 - uploading software image to network host [772](#)
- SPAN
 - configuring [2-370](#)
 - displaying [2-370](#)
 - displaying information [2-683](#)
- spanning tree
 - assigning path cost [2-392](#)
 - clearing statistics [2-80](#)
 - disabling [2-376](#)
 - disabling BackboneFast [2-374](#)
 - disabling BPDU packet filtering [2-388](#)
 - disabling BPDU skewing [2-375](#)
 - disabling MAC address reduction [2-382](#)
 - disabling PortFast BPDU guard feature [2-389](#)
 - disabling PortFast-start feature [2-387](#)
 - disabling UplinkFast [2-398](#)
 - display BackboneFast convergence status [2-687](#)
 - displaying BPDU skew status [2-689](#)
 - displaying current state of Token Ring port [2-692](#)
 - displaying information summary [2-699](#)
 - displaying only blocked ports [2-688](#)
 - displaying port information [2-684](#)
 - displaying statistics information [2-694](#)
 - displaying UplinkFast settings [2-701](#)
 - displaying VLAN information [2-684](#)
 - displaying VLAN path cost [2-693](#)
 - displaying VLAN root guard information [2-691](#)
 - enabling [2-377](#)
 - enabling BackboneFast [2-374](#)
 - enabling BPDU skewing [2-375](#)
 - enabling enabling BPDU packet filtering [2-388](#)
 - enabling MAC address reduction [2-382](#)
 - enabling PortFast BPDU guard feature [2-389](#)
 - enabling PortFast-start feature [2-387](#)
 - enabling UplinkFast [2-398](#)
 - loop guard
 - disabling [2-379](#)
 - enabling [2-379](#)
 - resetting port VLAN priority [2-78](#)
 - restoring default bridge priority [2-79](#)
 - restoring default forward delay [2-79](#)
 - restoring default hello time [2-79](#)
 - restoring default maxage [2-79](#)
 - restoring default path cost [2-77](#)
 - restoring factory-set defaults [2-79](#)
 - root guard
 - disabling [2-379](#)
 - enabling [2-379](#)
 - setting bridge forward delay [2-378](#)
 - setting bridge hello time [2-381](#)
 - setting bridge maximum aging time [2-383](#)
 - setting bridge priority [2-390, 2-395](#)
 - setting port path cost [2-385](#)
 - setting port priority [2-394](#)
 - setting primary root [2-396](#)
 - setting secondary root [2-396](#)
 - setting state of TrCRF [2-391](#)
 - specifying bridge functional address [2-384](#)
 - turning off UplinkFast [2-81](#)
- SSH permit list
 - adding [2-232](#)
 - clearing [2-25](#)
- standby ports
 - displaying status [2-702](#)
- startup configuration

- displaying [2-703](#)
- summertime
 - displaying status [2-713](#)
 - setting daylight saving time [2-283, 2-403](#)
- switch CLI
 - accessing [1-1](#)
 - command aliases [1-5](#)
 - command help [1-7](#)
 - command modes [1-3](#)
 - console port [1-2](#)
 - history substitution [1-4](#)
 - operating [1-3](#)
 - starting Telnet [1-2](#)
 - Telnet [1-2](#)
- switching
 - from active supervisor engine to standby supervisor engine [760](#)
 - from supervisor engine clock to internal clock [760](#)
- syslog server
 - adding [2-254](#)
- system
 - displaying information [2-714](#)
- system clock
 - changing [2-423](#)
 - displaying current time of day [2-727](#)
- system configuration
 - displaying the nondefault configuration [2-488](#)
- system contact
 - identifying [2-406](#)
- system disconnect
 - idle session timeout [2-258](#)
- system error log
 - clearing [2-35](#)
- system location
 - identifying [2-411](#)
 - setting [2-410](#)
- system log
 - clearing buffer [2-37](#)
 - displaying [2-546](#)

- displaying logging buffer [2-552](#)
- system logging messages
 - disabling [2-254](#)
 - disabling timestamp display [2-257](#)
 - enabling [2-254](#)
 - enabling timestamp display [2-257](#)
 - sending to console [2-249](#)
- system logging server
 - deleting [2-40](#)
 - displaying [2-550](#)
- system messages
 - clearing logging level [2-38](#)
 - setting facility level [2-251](#)
 - setting severity level [2-251](#)
- system modem
 - disabling [2-412](#)
 - enabling [2-412](#)
- system name
 - configuring [2-413](#)

T

TAC

- displaying system and configuration information [2-718](#)

TACACS+

- configuring maximum number of login attempts [2-414](#)
- defining TACACS+ server [2-417](#)
- disabling accounting of normal login session [2-142](#)
- disabling accounting of system events [2-145](#)
- disabling authorization [2-155](#)
- disabling authorization of privileged mode events [2-157](#)
- disabling suppression of accounting information [2-144](#)
- disabling TACACS+ directed-request option [2-415](#)
- displaying accounting information [2-460](#)
- displaying authorization information [2-465](#)
- displaying protocol configuration [2-716](#)
- enabling accounting of normal login session [2-142](#)
- enabling accounting of outbound connection events [2-140](#)

- enabling accounting of system events [2-145](#)
- enabling as primary authentication method for login [2-153](#)
- enabling authentication [2-151](#)
- enabling authorization [2-155](#)
- enabling authorization of EXEC mode events [2-159](#)
- enabling authorization of normal login mode [2-159](#)
- enabling authorization of privileged mode events [2-157](#)
- enabling authorization of session events [2-159](#)
- enabling command event accounting [2-138](#)
- enabling suppression of accounting information [2-144](#)
- enabling TACACS+ directed-request option [2-415](#)
- removing host [2-85](#)
- removing key setting [2-84](#)
- setting accounting update frequency [2-147](#)
- setting authentication and encryption key [2-416](#)
- setting response timeout interval [2-418](#)
- TACACS, RADIUS, KERBEROS, HTTP
 - displaying authentication information [2-463](#)
- target address entry
 - removing [2-72](#)
- technical support
 - displaying system and configuration information [2-718](#)
- Telnet
 - accessing switch [1-2](#)
 - closing session [2-110](#)
 - connecting [762](#)
 - disconnecting [2-110](#)
 - listing all active Telnet sessions [2-741](#)
 - specifying authentication method
 - disabling authentication [2-151](#)
 - specifying authentication method for login
 - disabling authentication [2-153](#)
- Telnet permit list
 - adding [2-232](#)
 - clearing [2-25](#)
- terminal display
 - setting default number of lines on screen [2-247](#)
 - setting number of lines on screen [2-247](#)
- timestamp display
 - disabling on system logging messages [2-257](#)
 - enabling on system logging messages [2-257](#)
- time zone
 - displaying [2-728](#)
 - returning to default, UTC [2-53](#)
 - returning to its default, UTC [2-86](#)
 - setting [2-424](#)
- Token Ring
 - configuring fast port aging [2-432](#)
 - configuring MAC address filter [2-299](#)
 - configuring protocol filter [2-299](#)
 - disabling broadcast storm reduction [2-436](#)
 - disabling distribution of TRCRF VLANs [2-428](#)
 - disabling early token release [2-429](#)
 - disabling local MAC address learning [2-431](#)
 - displaying collection of statistics and status information [2-706](#)
 - displaying current values [2-729](#)
 - displaying MAC addresses and protocol filters [2-614](#)
 - displaying order listing of stations on monitored rings [2-708](#)
 - enabling broadcast storm reduction [2-436](#)
 - enabling distribution of TRCRF VLANs [2-428](#)
 - enabling early token release [2-429](#)
 - enabling local MAC address learning [2-431](#)
 - removing station [2-82](#)
 - setting thresholds [2-427](#)
 - specifying AC bits condition [2-425](#)
 - specifying access protocol [2-434](#)
 - specifying connection type [2-434](#)
 - specifying frame priority [2-435](#)
 - specifying number of incoming explorer frames [2-430](#)
- TopN
 - clear top [2-87](#)
 - displaying all TopN processes and specific TopN reports [2-733](#)
 - starting [2-731](#)
 - stopping process [2-87](#)
- traffic

- displaying information [2-735](#)
- traffic log
 - configuring threshold [2-437](#)
- traps
 - displaying status information [2-631](#)
- trunk
 - clearing VLAN from allowed VLAN list [2-89](#)
 - displaying information [2-736](#)
 - displaying port information [2-632](#)
 - restoring trunk port to default trunk type and mode [2-89](#)
- trunk ports
 - adding VLANs [2-438](#)
 - configuring [2-438](#)

U

- UDLD
 - disabling aggressive mode [2-443](#)
 - displaying information [2-739](#)
 - enabling aggressive mode [2-443](#)
 - enabling UDLD information display [2-441](#)
 - setting message interval [2-445](#)
- UplinkFast
 - displaying settings [2-701](#)
- uploading current configuration [777](#)
- uploading current configuration to file [782](#)

V

- variable name
 - removing [771](#)
- VLAN
 - deleting [2-90](#)
 - deleting reserved mapping [2-91](#)
 - deleting VLAN-mapped pairs [2-91](#)
 - displaying nontrunk port information [2-745](#)
 - displaying trunk port information [2-745](#)
 - displaying VLAN information [2-745](#)

- displaying VLAN mapping table information [2-747](#)
- grouping ports [2-446](#)
- mapping 802.1Q VLANs to ISL VLANs [2-449](#)
- VLAN membership
 - setting assignment to port [2-311](#)
- VLAN path cost
 - displaying [2-693](#)
- VMPS
 - configuring server [2-453](#)
 - deleting server [2-92](#)
 - deleting statistics [2-93](#)
 - disabling [2-455](#)
 - displaying configuration information [2-748](#)
 - displaying MAC addresses in VLAN [2-752](#)
 - displaying MAC-address-to-VLAN mapping table [2-750](#)
 - displaying ports belonging to restricted VLAN [753](#)
 - displaying statistics [2-751](#)
 - downloading database [2-115](#)
 - enabling [2-455](#)
 - reconfirming membership assignments [2-129](#)
 - show vmps vlanports [753](#)
 - specifying download method [2-451](#)
 - specifying server [2-452](#)
- voice
 - configuring access port on Cisco IP phone [2-321](#)
- VTP
 - defining password [2-456](#)
 - deleted VTP statistics [2-95](#)
 - disabling pruning [2-456](#)
 - displaying VTP domain information [754](#)
 - displaying VTP statistics [756](#)
 - enabling pruning [2-456](#)
 - setting domain name [2-456](#)
 - setting mode [2-456](#)
 - setting options [2-456](#)
 - setting version 2 mode [2-456](#)
 - specifying pruning-eligible VTP domain VLANs [2-458](#)
 - specifying pruning ineligibility [2-94](#)

W

web interface

- configuring TCP port number [2-230](#)
- disabling HTTP server [2-231](#)
- displaying HTTP configuration [2-538](#)
- enabling HTTP server [2-231](#)

WRED threshold

- specifying [2-339](#)