



Symbols

? (help)

switch CLI **1-8**

A

ACL

displaying the ACL management information **2-630**

acronyms, list of **A-1**

Address Recognition Protocol

See ARP table

alias

clearing **2-6**

defining **2-150**

displaying **2-448**

ARP table

adding entries **2-151**

clearing entries **2-7**

displaying table **2-449**

setting ARP agingtime **2-151**

ASLB

configuring ASLB information **2-235**

displaying ASLB information **2-520**

removing ASLB entries **2-35**

saving ASLB configuration to NVRAM **2-98**

auxiliary VLAN

configuring ports **2-271**

displaying port status **2-576**

B

boot

clearing the NAM boot string **2-10**

displaying the NAM boot string **2-453**

setting the boot environment **2-171**

boot configuration register, setting **2-166**

BOOT environment variable, setting **2-173**

broadcast/multicast suppression

disabling **2-49**

displaying information **2-578**

setting **2-273**

C

CAM table

adding **2-175**

deleting an entry **2-12**

displaying aging time information **2-456**

displaying the table **2-453**

setting the agingtime **2-175**

CDP

configuring **2-177**

displaying **2-459**

displaying port CDP state and message interval **2-583**

channel

setting the channel path cost **2-179**

setting the channel VLAN cost **2-180**

CLI

ROM monitor CLI

accessing **1-12**

operating **1-13**

switch CLI

accessing **1-1**

command aliases **1-7**

command completion **1-11**

- command help 1-8
- command-line processing 1-3
- command modes 1-3
- console port 1-2
- ending a session 2-130
- IP addresses 1-11
- IP aliases 1-11
- IPX addresses 1-11
- MAC addresses 1-11
- operating 1-3
- Telnet 1-2
- command history, switch CLI 1-8
- command-line editing 1-4
 - controlling capitalization 1-7
 - deleting entries 1-6
 - designating keystroke as command entry 1-7
 - editing wrapping command lines 1-5
 - moving around 1-4
 - pasting in buffer entries 1-5
 - redisplaying the current command line 1-6
 - scrolling down a line or screen 1-6
 - transposing mistyped characters 1-7
- command-line-interface
 - See CLI
- command modes
 - switch CLI, normal mode 1-3
 - switch CLI, privileged mode 1-3
 - top-level, normal mode 1-8
 - top-level, privileged mode 1-9
- Commands
 - ROM Monitor Commands
 - alias 2-2
 - confreg 2-101
 - context 2-103
 - dev 2-111
 - dir--ROM monitor 2-112
 - frame 2-123
 - history 2-124
 - history--ROM monitor 2-124
 - meminfo 2-126
 - repeat 2-132
 - reset 2-134
 - reset--ROM monitor 2-134
 - set ROM monitor variable names/values 2-140
 - stack 2-735
 - sync 2-738
 - sysret 2-739
 - unalias 2-740
 - varname= 2-749
 - Switch Commands
 - ? (help) 1-8
 - cd 2-5
 - clear alias 2-6
 - clear arp 2-7
 - clear banner motd 2-8
 - clear boot auto-config 2-9
 - clear boot device 2-10
 - clear boot system 2-11
 - clear cam 2-12
 - clear channel statistics 2-13
 - clear config pvlan 2-16
 - clear cops 2-17
 - clear counters 2-19
 - clear gmrp statistics 2-20
 - clear gvrp statistics 2-21
 - clear igmp statistics 2-22
 - clear ip alias 2-23
 - clear ip dns domain 2-24
 - clear ip dns server 2-25
 - clear ip permit 2-26
 - clear ip route 2-28
 - clear kerberos clients mandatory 2-29
 - clear kerberos credentials forward 2-30
 - clear kerberos creds 2-31
 - clear kerberos realm 2-32
 - clear kerberos server 2-33
 - clear key config-key 2-34
 - clear lda 2-35

- clear log **2-37**
- clear logging buffer **2-38**
- clear logging server **2-39**
- clear mls **2-40**
- clear mls multicast statistics **2-44**
- clear mls nde flow **2-45**
- clear module password **2-46**
- clear multicast router **2-47**
- clear ntp server **2-48**
- clear port broadcast **2-49**
- clear port cops **2-50**
- clear port qos cos **2-51**
- clear port security **2-52**
- clear pvlan mapping **2-53**
- clear qos acl **2-54**
- clear qos config **2-56**
- clear qos cos-dscp-map **2-57**
- clear qos dscp-cos-map **2-58**
- clear qos ipprec-dscp-map **2-59**
- clear qos mac-cos **2-60**
- clear qos map **2-61**
- clear qos policed-dscp-map **2-63**
- clear qos policer **2-64**
- clear radius key **2-67**
- clear radius server **2-67**
- clear rgmp statistics **2-68**
- clear security acl **2-69**
- clear security acl capture-ports **2-70**
- clear security acl map **2-71**
- clear snmp access **2-73**
- clear snmp group **2-74**
- clear snmp notify **2-75**
- clear snmp targetaddress **2-76**
- clear snmp targetparams **2-77**
- clear snmp trap **2-78**
- clear snmp user **2-79**
- clear snmp view **2-80**
- clear spantree portvlancost **2-81**
- clear spantree portvlanpri **2-82**
- clear spantree root **2-83**
- clear spantree statistics **2-84**
- clear spantree uplinkfast **2-85**
- clear tacacs server **2-87**
- clear timezone **2-88**
- clear top **2-89**
- clear trunk **2-90**
- clear vlan **2-91**
- clear vlan mapping **2-93**
- clear voicevlan **2-94**
- clear vtp pruneeligible **2-95**
- clear vtp statistics **2-96**
- commit **2-97**
- commit lda **2-98**
- configure **2-99**
- copy **2-105**
- delete **2-110**
- dir--switch **2-113**
- disable **2-115**
- disconnect **2-116**
- download **2-117**
- enable **2-120**
- format **2-121**
- help **1-8**
- history--switch **2-125**
- ping **2-127**
- pwd **2-129**
- quit **2-130**
- reload **2-131**
- reset **2-135**
- rollback **2-138**
- session **2-139**
- set accounting commands **2-141**
- set accounting connect **2-142**
- set accounting exec **2-144**
- set accounting suppress **2-146**
- set accounting system **2-147**
- set accounting update **2-149**
- set alias **2-150**

- set arp **2-151**
- set arp agingtime **2-151**
- set authentication enable **2-153**
- set authentication login **2-155**
- set authorization commands **2-157**
- set authorization enable **2-159**
- set authorization exec **2-161**
- set banner motd **2-163**
- set boot auto-config **2-164**
- set boot config-register **2-166**
- set boot config-register auto-config **2-168**
- set boot device **2-171**
- set boot system flash **2-173**
- set cam **2-175**
- set cdp **2-177**
- set channel cost **2-179**
- set channel vlancost **2-180**
- set config acl **2-181**
- set cops **2-183**
- set default portstatus **2-185**
- set enablepass **2-186**
- set errdisable-timeout **2-187**
- set feature mdg **2-190**
- set garp timer **2-191**
- set gmrp **2-193**
- set gmrp fwdall **2-194**
- set gmrp registration **2-195**
- set gmrp timer **2-196**
- set gvrp **2-198**
- set gvrp applicant **2-199**
- set gvrp dynamic-vlan-creation **2-200**
- set gvrp registration **2-201**
- set igmp **2-205**
- set igmp fastleave **2-206**
- set inlinepower defaultallocation **2-208**
- set interface **2-209**
- set ip alias **2-212**
- set ip dns **2-213**
- set ip dns domain **2-214**
- set ip dns server **2-215**
- set ip fragmentation **2-216**
- set ip http port **2-217**
- set ip http server **2-218**
- set ip permit **2-219**
- set ip redirect **2-221**
- set ip route **2-222**
- set ip unreachable **2-224**
- set kerberos clients mandatory **2-225**
- set kerberos credentials forward **2-226**
- set kerberos local-realm **2-227**
- set kerberos realm **2-228**
- set kerberos server **2-229**
- set kerberos srvtab entry **2-230**
- set kerberos srvtab remote **2-232**
- set key config-key **2-233**
- set lda **2-235**
- set length **2-238**
- set logging console **2-239**
- set logging history **2-240**
- set logging level **2-241**
- set logging server **2-244**
- set logging session **2-247**
- set mls agingtime **2-249**
- set mls agingtime fast **2-249**
- set mls exclude protocol **2-251**
- set mls multicast disable **2-253**
- set mls multicast enable **2-253**
- set mls nde **2-255**
- set mls nde disable **2-255**
- set mls nde enable **2-255**
- set mls nde flow **2-255**
- set mls nde flow exclude **2-255**
- set mls nde flow include **2-255**
- set mls nde version **2-255**
- set mls statistics protocol **2-258**
- set module disable **2-259**
- set module enable **2-259**
- set module name **2-261**

- set module power **2-262**
- set msmautostate **2-264**
- set multicast router **2-265**
- set ntp broadcastclient **2-266**
- set ntp broadcastdelay **2-267**
- set ntp client **2-268**
- set ntp server **2-269**
- set password **2-270**
- set port auxiliaryvlan **2-271**
- set port broadcast **2-273**
- set port cops **2-277**
- set port disable **2-278**
- set port duplex **2-279**
- set port enable **2-280**
- set port flowcontrol **2-281**
- set port gmrp **2-283**
- set port gvrp **2-284**
- set port host **2-286**
- set port inlinepower **2-287**
- set port jumbo **2-288**
- set port membership **2-290**
- set port name **2-291**
- set port negotiation **2-292**
- set port protocol **2-293**
- set port qos **2-295, 2-297**
- set port qos cos **2-297**
- set port qos trust **2-298**
- set port qos trust-ext **2-300**
- set port rsvp+ dsbm-election **2-301**
- set port security **2-302**
- set port speed **2-304**
- set port trap **2-305**
- set port voice interface **2-306**
- set power redundancy **2-308**
- set prompt **2-309**
- set protocolfilter **2-310**
- set pvlan **2-311**
- set pvlan mapping **2-313**
- set qos **2-314**
- set qos acl default-action **2-315**
- set qos acl ip **2-317**
- set qos acl ipx **2-322**
- set qos acl mac **2-325**
- set qos acl map **2-327**
- set qos bridged-microflow-policing **2-328**
- set qos cos-dscp-map **2-329**
- set qos drop-threshold **2-330**
- set qos dscp-cos-map **2-332**
- set qos ipprec-dscp-map **2-333**
- set qos ip-precmap **2-333**
- set qos mac-cos **2-335**
- set qos map **2-336**
- set qos policed-dscp-map **2-338**
- set qos policer **2-339**
- set qos policy-source **2-341**
- set qos rsvp **2-342**
- set qos rsvp+ **2-342**
- set qos txq-ratio **2-344**
- set qos wred-threshold **2-345**
- set qos wrr **2-346**
- set radius deadtime **2-348**
- set radius key **2-349**
- set radius retransmit **2-350**
- set radius server **2-351**
- set radius timeout **2-352**
- set rcp username **2-353**
- set rgmp **2-354**
- set rspan **2-355**
- set security acl capture-ports **2-358**
- set security acl ip **2-359**
- set security acl ipx **2-364**
- set security acl mac **2-367**
- set security acl map **2-369**
- set snmp access **2-371**
- set snmp community **2-373**
- set snmp extendedrmon netflow **2-374**
- set snmp group **2-375**
- set snmp notify **2-376**

- set snmp rmon **2-378**
- set snmp targetaddr **2-379**
- set snmp targetparams **2-381**
- set snmp trap **2-383**
- set snmp user **2-385**
- set snmp view **2-387**
- set span **2-389**
- set spantree backbonefast **2-392**
- set spantree disable **2-393**
- set spantree enable **2-394**
- set spantree fwddelay **2-395**
- set spantree hello **2-396**
- set spantree maxage **2-397**
- set spantree portcost **2-398**
- set spantree portfast **2-399**
- set spantree portfast bpdu-guard **2-400**
- set spantree portpri **2-401**
- set spantree portstate **2-402**
- set spantree portvlancost **2-403**
- set spantree portvlanpri **2-405**
- set spantree priority **2-406**
- set spantree root **2-407**
- set spantree uplinkfast **2-409**
- set summertime **2-411**
- set system baud **2-413**
- set system contact **2-414**
- set system highavailability **2-416**
- set system highavailability versioning **2-417**
- set system location **2-419**
- set system modem **2-420**
- set system name **2-421**
- set tacacs attempts **2-422**
- set tacacs directedrequest **2-423**
- set tacacs key **2-424**
- set tacacs server **2-425**
- set tacacs timeout **2-426**
- set time **2-428**
- set timezone **2-429**
- set trunk **2-430**
- set uddl **2-433**
- set uddl aggressive-mode **2-435**
- set uddl interval **2-436**
- set vlan **2-437**
- set vlan mapping **2-440**
- set vtp **2-442**
- set vtp pruneligible **2-444**
- show accounting **2-445**
- show alias **2-448**
- show arp **2-449**
- show authentication **2-450**
- show authorization **2-451**
- show boot **2-452**
- show boot device **2-453**
- show cam **2-454**
- show cam agingtime **2-456**
- show cam count **2-457**
- show cam msfc **2-458**
- show cdp **2-459**
- show channel **2-462**
- show channel group **2-469**
- show config **2-473**
- show config qos acl **2-479**
- show cops **2-480**
- show default **2-483**
- show environment **2-484**
- show environment powerr **2-486**
- show errdisable-timeout **2-488**
- show file **2-490**
- show flash **2-491**
- show gmrp configuration **2-494**
- show gmrp statistics **2-496**
- show gmrp timer **2-497**
- show gvrp configuration **2-498**
- show gvrp statistics **2-500**
- show ifindex **2-502**
- show igmp statistics **2-504**
- show imagemib **2-506**
- show interface **2-507**

- show ip alias **2-509**
- show ip dns **2-510**
- show ip http **2-511**
- show ip permit **2-513**
- show ip route **2-515**
- show kerberos **2-516**
- show kerberos creds **2-518**
- show lda **2-520**
- show log **2-524**
- show logging **2-527**
- show logging buffer **2-529**
- show mac **2-530**
- show microcode **2-533**
- show mls **2-534**
- show mls entry **2-536**
- show mls exclude protocol **2-541**
- show mls multicast **2-542**
- show mls multicast entry **2-542**
- show mls multicast statistics **2-542**
- show mls nde **2-534**
- show mls statistics **2-545**
- show mls statistics entry **2-545**
- show mls statistics protocol **2-545**
- show module **2-548**
- show moduleinit **2-551**
- show msautostate **2-553**
- show multicast group **2-554**
- show multicast group count **2-556**
- show multicast protocols status **2-557**
- show multicast router **2-558**
- show netstat **2-560**
- show ntp **2-567**
- show port **2-569**
- show port auxiliaryvlan **2-576**
- show port broadcast **2-578**
- show port capabilities **2-579**
- show port cdp **2-583**
- show port channel **2-584**
- show port cops **2-590**
- show port counters **2-592**
- show port flowcontrol **2-594**
- show port inlinpower **2-596**
- show port jumbo **2-597**
- show port negotiation **2-598**
- show port protocol **2-599**
- show port qos **2-600**
- show port security **2-603**
- show port status **2-605**
- show port voice **2-606**
- show port voice active **2-610**
- show port voice fdl **2-614**
- show port voice interface **2-616**
- show proc **2-617**
- show protocolfilter **2-620**
- show pvlan **2-621**
- show pvlan mapping **2-623**
- show qos acl editbuffer **2-625**
- show qos acl map **2-628**
- show qos acl resource-usage **2-630**
- show qos bridged-packet-policing **2-631**
- show qos info **2-632**
- show qos mac-cos **2-637**
- show qos maps **2-639**
- show qos policer **2-642**
- show qos policier **2-642**
- show qos policy-source **2-644**
- show qos rsvp **2-645**
- show qos rsvp+ info **2-645**
- show qos statistics **2-646**
- show radius **2-648**
- show reset **2-649**
- show rgmp group **2-650**
- show rgmp statistics **2-651**
- show rspan **2-652**
- show security acl **2-654**
- show security acl capture-ports **2-656**
- show security acl map **2-657**
- show security acl resource-usage **2-658**

show snmp **2-659**
 show snmp access **2-661**
 show snmp counters **2-662**
 show snmp engineid **2-666**
 show snmp group **2-667**
 show snmp notify **2-669**
 show snmp targetaddr **2-671**
 show snmp targetparams **2-673**
 show snmp user **2-675**
 show snmp view **2-677**
 show span **2-679**
 show spantree **2-681**
 show spantree backbonefast **2-684**
 show spantree blockedports **2-685**
 show spantree portvlancost **2-686**
 show spantree statistics **2-687**
 show spantree summary **2-692**
 show spantree uplinkfast **2-693**
 show summertime **2-694**
 show system **2-695**
 show system highavailability **2-697**
 show tacacs **2-698**
 show tech-support **2-700**
 show test **2-702**
 show time **2-707**
 show timezone **2-708**
 show top **2-709**
 show top report **2-711**
 show trace **2-713**
 show trunk **2-715**
 show udd **2-718**
 show users **2-720**
 show version **2-721**
 show vlan **2-724**
 show voicevlan **2-728**
 show vtp domain **2-729**
 show vtp statistics **2-731**
 slip **2-733**
 squeeze **2-734**

switch **2-736**
 switch console **2-737**
 telnet **2-740**
 test snmp trap **2-741**
 traceroute **2-742**
 undelete **2-746**
 upload **2-748**
 verify **2-750**
 wait **2-751**
 whichboot **2-752**
 write network **2-753**
 write terminal **2-753**

Common Open Policy Service

See COPS

content-addressable memory

See CAM table

context-sensitive help **1-10**

COPS

clearing domain name **2-17**

clearing roles **2-17**

clearing servers **2-17**

configuring COPS domain name **2-183**

configuring the policy server names **2-183**

creating port roles **2-277**

displaying COPS information **2-590**

displaying COPS information for RSVP+ **2-480**

displaying the policy tree information **2-480**

displaying the ports assigned to each role **2-480**

setting connection retry interval **2-183**

setting memory usage **2-183**

country code

setting **2-415**

D

designating ports **1-10**

designating VLANs **1-10**

diagnostic tests

setting level **2-427**

disabling ports **2-278**
 disabling UDLD information display **2-433**
 displaying configuration information **2-753**
 documentation
 audience **xix**
 conventions **xx**
 organization **xix**
 downloading an image **2-117**
 dump log
 clearing **2-37**
 displaying **2-524**

E

enabling ports **2-280**
 error detection
 disabling **2-189**
 displaying settings **2-489**
 enabling **2-189**
 inband **2-189**
 memory **2-189**
 port counter **2-189**

F

Flash configuration file
 appending **2-168**
 overwriting **2-168**
 recurrence **2-168**

G

GARP, setting timers **2-191**
 GARP Multicast Registration Protocol
 See GMRP
 GARP VLAN Registration Protocol
 See GVRP
 General Attribute Registration Protocol

See GARP, setting timers

GMRP

clearing statistics information **2-20**
 displaying GMRP-related statistics **2-496**
 displaying timer values **2-497**

GVRP

clearing statistics information **2-21**
 disabling dynamic VLAN creation **2-200**
 displaying configuration information **2-498**
 displaying statistics **2-500**
 enabling dynamic VLAN creation **2-200**

I

ifIndex, displaying **2-502**

IGMP

clearing statistics information **2-22**
 displaying IGMP mode **2-503**
 displaying IGMP statistics **2-504**
 setting IGMP snooping mode **2-207**

Internet Group Management Protocol

See IGMP

Internet Protocol

See IP addresses

IP addresses

clearing **2-26**
 designating in CLI **1-11**

IP alias

adding **2-212**
 clearing **2-23**
 designating in CLI **1-11**
 displaying **2-509**

IP DNS

clearing the default DNS domain name **2-24**
 defining the IP address of a DNS server **2-215**
 displaying DNS domain name **2-510**
 displaying DNS name server **2-510**
 displaying DNS name servers **2-509**
 removing a DNS server **2-25**

IPX addresses, designating in CLI **1-11**

J

jumbo frames

- displaying settings **2-597**
- enabling feature **2-288**

K

Kerberos

- authenticating users **2-227**
- clearing Kerberos realm to DNS domain name map **2-32**
- clearing secret key **2-34**
- clearing specific Kerberos entry **2-33**
- defining the secret key **2-233**
- deleting all Kerberos credentials **2-31**
- disabling credentials forwarding **2-30**
- disabling mandatory authentication **2-29**
- displaying configuration information **2-516**
- displaying credentials information **2-518**
- enabling mandatory authentication **2-225**
- entering SRVTAB file from command line **2-230**
- forwarding user credentials **2-226**
- mapping realm to DNS domain name **2-228**
- providing file containing secret key **2-232**
- specifying which KDC to use **2-229**

L

LCP

- configuring error detection **2-234**
- displaying error detection **2-519**

local director

See LDA

M

MAC addresses

- clearing MAC address from list of secure MAC addresses **2-52**
- designating in CLI **1-11**

MAC counters, displaying **2-530**

message log

- setting size of syslog table **2-240**

message-of-the-day banner

- clearing **2-8**
- programming **2-163**

MLS

- adding protocols to the protocol statistics list **2-258**
- clearing IP, IPX MLS, or NDE filter features **2-40**
- clearing mls exclude protocol **2-43**
- clearing MLS statistics from MSFC **2-44**
- clearing the NDE filter features **2-45**
- disabling the IP multicast MLS **2-253**
- displaying excluded protocols **2-541**
- displaying IP MLS state information **2-536**
- displaying IP MLS statistics information **2-545**
- displaying IP multicast MLS information **2-542**
- displaying IPX MLS statistics information **2-545**
- displaying IPX state information **2-536**
- displaying MLS Layer 3 packet information **2-534**
- displaying MLS state information **2-536**
- displaying MLS statistics information **2-545**
- displaying MSFC MLS statistics information **2-545**
- displaying NDE information **2-534**
- displaying router processor MLS information **2-536**
- enabling the IP multicast MLS **2-253**
- setting MLS aging time **2-249**
- setting MLS fast aging time **2-249**
- setting the MLS NDE feature **2-255**
- specifying a protocol port to be excluded from being shortcut **2-251**

modules

- shutting down the NAM and IDS modules **2-263**

MSM

- accessing the MSM **2-139**
 - disabling line protocol state **2-264**
 - displaying line protocol state **2-553**
 - enabling line protocol state **2-264**
- multicast router
- clearing **2-47**
 - configuring a port **2-265**
 - displaying ports with IGMP-capable routers **2-558**
- Multilayer Switch Module
- See MSM **A-3**

N**NAM**

- clearing the NAM boot string **2-10**
 - clearing the password **2-46**
 - disabling SNMP extended RMON support **2-374**
 - displaying the NAM boot string **2-453**
 - enabling SNMP extended RMON support **2-374**
 - setting the boot environment **2-171**
 - shutting down the module **2-263**
- network interfaces, displaying information on **2-507**
- NTP
- configuring the IP address of the NTP server **2-269**
 - configuring time-adjustment factor **2-267**
 - disabling the switch as an NTP client **2-268**
 - displaying the current NTP status **2-567**
 - enabling the switch as an NTP client **2-268**
 - removing servers from table **2-48**

O

- open session with module **2-139**

P**PAGP**

- clearing PAgP statistical information **2-13**
 - configuring ports **2-274**
 - displaying port or module information **2-584**
 - displaying port statistics **2-462**
- password
- set enablepass **2-186**
- Port Aggregation Protocol
- See PAgP
- ports
- creating EtherChannel port bundles **2-274**
 - defining EtherChannel administrative groups **2-274**
 - specifying frame-distribution method for switch **2-274**
- PVLAN
- binding port to private VLAN **2-311**
 - binding VLAN to primary VLAN **2-311**
 - clearing configuration **2-16**
 - deleting mapping **2-53**
 - displaying configuration **2-621**
 - displaying mapping configuration **2-623**
 - mapping VLAN to primary VLAN **2-313**

Q**QoS**

- allocating packet memory buffer **2-344**
- clearing changes from the edit buffer **2-138**
- clearing mac-cos values **2-60**
- clearing map values **2-61**
- clearing statistic counters **2-66**
- clearing the CoS-to-DSCP map **2-57**
- clearing the DSCP-to-CoS map **2-58**
- clearing the IP precedence-to-DSCP map **2-59**
- configuring the access port **2-300**
- configuring transmit and drop thresholds **2-330**
- displaying counters **2-646**
- displaying current information for the MAC address/VLAN pair **2-637**
- displaying information for the MAC address and VLAN pair **2-637**

- displaying information on a per-port basis **2-600**
 - displaying map information **2-639**
 - displaying policy source information **2-644**
 - displaying related information **2-632**
 - enabling microflow policing
 - disabling microflow policing **2-328**
 - mapping CoS values **2-336**
 - mapping IP precedence-to-DSCP **2-333**
 - returning to factory-set CoS defaults **2-51**
 - returning to factory-set threshold, queue, and threshold map defaults **2-56**
 - setting CoS values **2-335**
 - setting default for all packets arriving through an untrusted port **2-297**
 - setting packet buffer memory **2-344**
 - setting packet value **2-297**
 - setting policy source to COPS **2-341**
 - setting policy source to local NVRAM **2-341**
 - setting the DSCP-to-CoS map **2-332**
 - setting the switch to participate in the DSBM election **2-301**
 - setting trusted state **2-298**
 - specifying interface as port or VLAN **2-295, 2-297**
 - specifying the CoS-to-DSCP map **2-329**
 - specifying WRED threshold **2-345**
 - specifying WRR weights **2-346**
 - turning QoS off **2-314**
 - turning QoS on **2-314**
 - turning QoS RSVP+ off **2-342**
 - turning QoS RSVP+ on **2-342**
- QoS ACL**
- attaching an ACL to an interface **2-327**
 - clearing changes to ACL edit buffer **2-138**
 - defining default action **2-315**
 - defining IP access lists **2-317**
 - defining IPX access lists **2-322**
 - defining MAC access lists **2-325**
 - displaying ACL names in edit buffer **2-625**
 - displaying configured ACE information **2-626**
 - displaying default action **2-626**
 - displaying QoS ACL mapping **2-628**
 - displaying runtime ACE information **2-626**
 - displaying VLAN-bridged packet-policing status **2-631**
 - removing an ACE **2-54**
- QoS policing**
- clearing the aggregate rate limit **2-64**
 - clearing the microflow policing rule **2-64**
 - displaying policing information **2-642**
 - mapping in-profile DSCPs changes when policed **2-338**
 - resetting the policed-dscp table to the default **2-63**
 - specifying a microflow policing rule **2-339**
-
- R**
- RADIUS**
- accounting of privileged mode events **2-144**
 - accounting of system events **2-147**
 - clearing the RADIUS server table **2-67**
 - clearing the RADIUS shared key **2-67**
 - displaying RADIUS configuration parameters **2-648, 2-650**
 - enabling authentication **2-153**
 - setting the encryption and authentication **2-349**
 - setting the RADIUS deadtime **2-348**
 - setting the time between retransmissions **2-352**
 - setting up the RADIUS server **2-351**
 - specifying the RADIUS retransmit times **2-350**
- rcp**
- copying a software image to Flash memory **2-117**
 - downloading configuration file **2-99**
 - downloading Flash image or switch configuration **2-105**
 - setting username **2-353**
 - uploading Flash image or switch configuration **2-105**
- Remote Control Protocol**
- See rcp
- remote span**
- creating remote SPAN sessions **2-355**
 - displaying remote SPAN configuration **2-652**

reset

- cancel **2-135**
- module **2-135**
- schedule reset **2-135**
- switch **2-135**

restoring factory-set defaults **2-85**

RGMP

- clearing statistics information **2-68**
- disabling **2-354**
- displaying multicast group count **2-650**
- displaying multicast groups **2-650**
- displaying statistics information **2-651**
- enabling **2-354**

ROM monitor CLI

- accessing **1-12**
- operating **1-13**

ROM monitor variable names, displaying **2-140**

RSVP+

- displaying COPS information for RSVP+ **2-480**
- displaying RSVP+ information **2-645**
- setting the switch to participate in the DSBM election **2-301**

S

security ACL

- clearing changes from the edit buffer **2-138**
- creating new entry in a non-IP or non-IPX protocol VACL **2-367**
- creating new entry in standard IPX VACL **2-364**
- displaying the ACL management information **2-658**
- displaying the committed ACL **2-654**
- displaying the current configuration **2-654**
- displaying the mapped ACL **2-657**
- mapping an existing VACL to a VLAN **2-369**
- removing all ACEs from an ACL and removing the ACL from the editbuffer **2-69**
- removing VACL to VLAN mapping **2-71**
- setting security ACL **2-359**

security ACL capture

- displaying capture port list entries **2-656**
- removing entry from the capture port list **2-70**
- setting ports to capture traffic **2-358**

SNMP

- adding a trap receiver table entry **2-383**
- clearing an SNMP trap receiver entry **2-78**
- clearing target parameters **2-77**
- configuring a new user **2-385**
- configuring target parameters **2-381**
- configuring the MIB view **2-387**
- configuring the target address entry **2-379**
- defining community and associated access types **2-373**
- defining group access rights **2-371**
- disabling extendedrmon **2-374**
- disabling RMON support **2-378**
- displaying access information **2-661**
- displaying counter information **2-662**
- displaying group or users with common access policy **2-667**
- displaying information for a specific user **2-675**
- displaying MIB view configuration **2-677**
- displaying snmpNotifyTable configuration **2-669**
- displaying target address entries **2-671**
- displaying target parameter entries **2-673**
- displaying the local engine ID **2-666**
- enabling extendedrmon **2-374**
- enabling RMON support **2-378**
- establishing the relationship between group and user **2-375**
- removing an individual user **2-79**
- removing a notifyname **2-75**
- removing an SNMP user from an SNMP group **2-74**
- removing a target address entry **2-76**
- removing group access rights **2-73**
- removing the MIB view entry **2-80**
- setting the notifyname entry **2-376**
- setting the notifytag entry **2-376**

SNMP trap receiver table

- adding an entry **2-383**
- disabling traps **2-383**
- enabling traps **2-383**
- sending message **2-741**
- spanning tree
 - clearing statistics **2-84**
 - resetting port VLAN priority **2-82**
 - restoring default path cost **2-81**
 - restoring factory-set defaults **2-83**
 - turning off UplinkFast **2-85**
- switch CLI
 - accessing **1-1**
 - aliases **1-7**
 - categories, definition **1-10**
 - command aliases **1-7**
 - command completion **1-11**
 - command help **1-8**
 - command-line editing features **1-4**
 - command-line processing **1-3**
 - command modes **1-3**
 - completion
 - keyword lookup **1-11**
 - partial keyword lookup **1-11**
 - self-repeat **1-11**
 - console port **1-2**
 - designating modules **1-10**
 - help
 - switch CLI **1-8**
 - history substitution **1-8**
 - IP addresses **1-11**
 - IP aliases **1-11**
 - MAC addresses **1-11**
 - operating **1-3**
 - Telnet **1-2**
- system location
 - setting **2-415**
- system log
 - clearing buffer **2-38**
 - deleting entries **2-37**

- disabling **2-244**
- displaying **2-524**
- displaying logging buffer **2-529**
- displaying system log configuration **2-524**
- enabling **2-244**
- system logging server
 - deleting **2-39**
 - displaying **2-527**

T

- TACACS+
 - accounting for commands **2-141**
 - accounting of connection events **2-142**
 - accounting of privileged mode events **2-144**
 - accounting of system events **2-147**
 - configuring maximum number of login attempts **2-422**
 - controlling switch access **2-146**
 - defining a TACACS+ server **2-425**
 - disable authorization **2-157**
 - disabling TACACS+ directed-request option **2-423**
 - displaying accounting information **2-445**
 - displaying authorization information **2-451**
 - displaying protocol configuration **2-698**
 - enable authorization **2-157**
 - enable authorization of EXEC mode events **2-161**
 - enable authorization of privileged mode events **2-159**
 - enabling TACACS+ directed-request option **2-423**
 - removing a host **2-87**
 - removing key setting **2-86**
 - setting accounting update frequency **2-149**
 - setting authentication and encryption key **2-424**
 - setting response timeout interval **2-426**
- TACACS, RADIUS, KERBEROS
 - enabling as the primary authentication method for login **2-155**
- TACACS, RADIUS, KERBEROS, HTTP
 - displaying authentication information **2-450**
- Telnet

- connecting **2-740**
- disconnecting **2-116**
- listing all active Telnet sessions **2-720**
- Terminal Access Controller Access Control System Plus
 - See TACACS+
- TopN
 - displaying all TopN processes and specific TopN reports **2-711**
 - starting **2-709**
 - stopping **2-89**

U

- UDLD
 - disabling aggressive mode **2-435**
 - displaying information **2-718**
 - enabling aggressive mode **2-435**
 - enabling UDLD information display **2-433**
 - setting message interval **2-436**
- UniDirectional Link Detection Protocol
 - See UDLD
- uploading current configuration to the network **2-753**

V

- variable name, removing **2-747**
- variable VARNAME, setting **2-749**
- VLAN
 - deleting **2-91**
 - deleting VLAN-mapped pairs **2-93**
 - displaying VLAN information **2-724**
 - grouping ports into a VLAN **2-437**
 - mapping 802.1Q VLANs to ISL VLANs **2-440**
- voice
 - displaying active call information **2-610**
 - displaying FDL information **2-614**
 - displaying inline power status **2-486**
 - displaying port voice configuration information **2-606**
 - displaying port voice interface **2-616**

- displaying power administration statusr **2-596**
- displaying power operational status **2-596**
- setting default power allocation **2-208**
- setting inline power mode **2-287**
- setting port voice interface
 - DHCP server **2-306**
 - DNS server **2-306**
 - TFTP server **2-306**

VTP

- defining the VTP password **2-442**
- disabling VTP pruning **2-442**
- displaying VTP domain information **2-729**
- displaying VTP statistics **2-731**
- enabling VTP pruning **2-442**
- setting the options for VTP **2-442**
- setting the version 2 mode **2-442**
- setting the VTP domain name **2-442**
- setting the VTP mode **2-442**
- specifying pruning-eligible VTP domain VLANs **2-444**
- specifying pruning-ineligible VTP domain VLANs **2-95**

W

- web interface
 - configuring TCP port number **2-217**
 - disabling the HTTP server **2-218**
 - displaying HTTP configuration **2-511**
 - displaying trace category and level information **2-713**
 - displaying version information **2-721**
 - enabling the HTTP server **2-218**

