



## Configuring System Message Logging

This chapter describes how to configure system message logging on the Catalyst 6000 family switches.



**Note**

For complete syntax and usage information for the commands used in this chapter, refer to the *Catalyst 6000 Family Command Reference* publication.



**Note**

For more information on system messages, refer to the *System Message Guide—Catalyst 6000 Family, Catalyst 5000 Family, and Catalyst 4000 Family, Catalyst 2926G Series, Catalyst 2948G, and Catalyst 2980G* publication.

This chapter consists of these sections:

- Understanding How System Message Logging Works, page 21-1
- System Log Message Format, page 21-3
- Default System Message Logging Configuration, page 21-4
- Configuring System Message Logging, page 21-4

## Understanding How System Message Logging Works

The system message logging software can save messages in a log file or direct the messages to other devices. The system message logging facility has these features:

- Provides you with logging information for monitoring and troubleshooting
- Allows you to select the types of logging information captured
- Allows you to select the destination of captured logging information

By default, the switch logs normal but significant system messages to its internal buffer and sends these messages to the system console. You can specify which system messages should be saved based on the type of facility (see Table 21-1) and the severity level (see Table 21-2). Messages are time-stamped to enhance real-time debugging and management.

You can access logged system messages using the switch command-line interface (CLI) or by saving them to a properly configured syslog server. The switch software saves syslog messages in an internal buffer that can store up to 500 messages. You can monitor system messages remotely by accessing the switch through Telnet or the console port, or by viewing the logs on a syslog server.

**Note**

When the switch first initializes, the network is not connected until the initialization completes. Therefore, messages redirected to a syslog server are delayed up to 90 seconds.

Table 21-1 describes the facility types supported by the system message logs.

**Table 21-1 System Message Log Facilities**

Facility Name	Definition
cdp	Cisco Discovery Protocol
cops	Common Open Policy Service
dtp	Dynamic Trunking Protocol
earl	Enhanced Address Recognition Logic
gvrp	GARP VLAN Registration Protocol
ip	Internet Protocol
kernel	Kernel
mcast	Multicast
mgmt	Management
mls	Multilayer Switching
pagp	Port Aggregation Protocol
protfilt	Protocol Filter
pruning	VTP pruning
qos	Quality of Service
radius	Remote Access Dial-In User Service
security	Security
snmp	Simple Network Management Protocol
spanntree	Spanning Tree Protocol
sys	System
tac	Terminal Access Controller
tcp	Transmission Control Protocol
telnet	Terminal Emulation Protocol
tftp	Trivial File Transfer Protocol
udld	User Datagram Protocol
vtp	VLAN Trunking Protocol

Table 21-2 describes the severity levels supported by the system message logs.

**Table 21-2 Severity Level Definitions**

Severity Level	Description
0—emergencies	System unusable
1—alerts	Immediate action required
2—critical	Critical condition
3—errors	Error conditions
4—warnings	Warning conditions
5—notifications	Normal bug significant condition
6—informational	Informational messages
7—debugging	Debugging messages

## System Log Message Format

System log messages begin with a percent sign (%) and can contain up to 80 characters. Messages are displayed in the following format:

*mm/dd/yyyy:hh/mm/ss:facility-severity-MNEMONIC:description*

Table 21-3 describes the elements of syslog messages.

**Table 21-3 System Log Message Elements**

Element	Description
<i>mm/dd/yyyy:hh/mm/ss</i>	Date and time of the error or event. This information appears only if configured using the <b>set logging timestamp enable</b> command.
<i>facility</i>	Indicates the facility to which the message refers (for example, SNMP, SYS, etc.).
<i>severity</i>	Single-digit code from 0 to 7 that indicates the severity of the message.
<i>MNEMONIC</i>	Text string that uniquely describes the error message.
<i>description</i>	Text string containing detailed information about the event being reported.

This example shows typical switch system messages (at system startup):

```
1999 Apr 16 10:01:26 %MLS-5-MLSEENABLED:IP Multilayer switching is enabled
1999 Apr 16 10:01:26 %MLS-5-NDEDISABLED:Netflow Data Export disabled
1999 Apr 16 10:01:26 %SYS-5-MOD_OK:Module 1 is online
1999 Apr 16 10:01:47 %SYS-5-MOD_OK:Module 3 is online
1999 Apr 16 10:01:42 %SYS-5-MOD_OK:Module 6 is online
1999 Apr 16 10:02:27 %PAGP-5-PORTTOSTP:Port 3/1 joined bridge port 3/1
1999 Apr 16 10:02:28 %PAGP-5-PORTTOSTP:Port 3/2 joined bridge port 3/2
```

# Default System Message Logging Configuration

Table 21-4 describes the default system message logging configuration.

**Table 21-4 Default System Message Logging Configuration**

Configuration Parameter	Default Setting
System message logging to the console	Enabled
System message logging to Telnet sessions	Enabled
Logging buffer size	500 (default and maximum setting)
Logging history size	1
Timestamp option	Enabled
Logging server	Disabled
Syslog server IP address	None configured
Server facility	LOCAL7
Server severity	Warnings (4)
Facility/severity level for system messages	sys/5 dtp/5 pagp/5 mgmt/5 mls/5 cdp/4 udld/4 all other facilities/2

## Configuring System Message Logging

These sections describe how to configure system message logging on the switch:

- Enabling and Disabling Session Logging Settings, page 21-4
- Setting the System Message Logging Levels, page 21-5
- Enabling and Disabling the Logging Time Stamp Enable State, page 21-6
- Setting the Logging Buffer Size, page 21-6
- Configuring the syslog Daemon on a UNIX syslog Server, page 21-7
- Configuring syslog Servers, page 21-7
- Displaying the Logging Configuration, page 21-8
- Displaying System Messages, page 21-9

## Enabling and Disabling Session Logging Settings

By default, system logging messages are sent to console and Telnet sessions based on the default logging facility and severity values. If desired, you can disable logging to the console or logging to a given Telnet session.

When you disable or enable logging to console sessions, the enable state is applied to all future console sessions. For example, if you disable logging to the console, disconnect from the console port, and later reconnect, logging is still disabled for the console.

In contrast, when you disable or enable logging to a Telnet session, the enable state is applied only to that session. If you disable logging to a Telnet session, disconnect the session, and later reconnect, logging is enabled for the new session.

**Note**

If you enter the **set logging session** command while connected through the console port, the command has the same effect as entering the **set logging console** command. However, if you enter the **set logging console** command while connected through a Telnet session, the default console logging enable state is changed.

To enable or disable the logging state for console sessions, perform this task in privileged mode:

	Task	Command
Step 1	Enable or disable the default logging state for console sessions.	<b>set logging console {enable   disable}</b>
Step 2	Verify the logging configuration.	<b>show logging [noalias]</b>

This example shows how to disable logging to the current and future console sessions:

```
Console> (enable) set logging console disable
System logging messages will not be sent to the console.
Console> (enable)
```

To enable or disable the logging state for the current Telnet session, perform this task in privileged mode:

	Task	Command
Step 1	Enable or disable the logging state for a Telnet session.	<b>set logging session {enable   disable}</b>
Step 2	Verify the logging configuration.	<b>show logging [noalias]</b>

This example shows how to disable logging to the current Telnet session:

```
Console> (enable) set logging session disable
System logging messages will not be sent to the current login session.
Console> (enable)
```

## Setting the System Message Logging Levels

You can set the severity level for each logging facility using the **set logging level** command. Use the **all** keyword to specify all facilities. Use the **default** keyword to make the specified severity level the default for the specified facilities. If you do not use the **default** keyword, the specified severity level applies only to the current session.

To set the system message logging severity level setting for a logging facility, perform this task in privileged mode:

	Task	Command
Step 1	Set the severity level for logging facilities.	<b>set logging level {all   facility} severity [default]</b>
Step 2	Verify the system message logging configuration.	<b>show logging [noalias]</b>

This example shows how to set the logging severity level to 5 for all facilities (for the current session only):

```
Console> (enable) set logging level all 5
All system logging facilities for this session set to severity 5(notifications)
Console> (enable)
```

This example shows how to set the default logging severity level to 3 for the **cdp** facility:

```
Console> (enable) set logging level cdp 3 default
System logging facility <cdp> set to severity 3(errors)
Console> (enable)
```

## Enabling and Disabling the Logging Time Stamp Enable State

To enable or disable the logging time stamp, perform this task in privileged mode:

	Task	Command
Step 1	Enable or disable the logging time stamp state.	<b>set logging timestamp {enable   disable}</b>
Step 2	Verify the logging time stamp state.	<b>show logging [noalias]</b>

This example shows how to enable the time stamp display on system logging messages:

```
Console> (enable) set logging timestamp enable
System logging messages timestamp will be enabled.
Console> (enable)
```

## Setting the Logging Buffer Size

To set the number of messages to log to the logging buffer, perform this task in privileged mode:

	Task	Command
Step 1	Set the number of messages to log to the logging buffer.	<b>set logging buffer <i>buffer_size</i></b>
Step 2	Verify the system message logging configuration.	<b>show logging [noalias]</b>

This example shows how to set the logging buffer size to 200 messages:

```
Console> (enable) set logging buffer 200
System logging buffer size set to <200>
Console> (enable)
```

## Configuring the syslog Daemon on a UNIX syslog Server

Before you can send system log messages to a UNIX syslog server, you must configure the syslog daemon on a UNIX server. Log in as root, and perform these steps:

**Step 1** Add a line such as the following to the file `/etc/syslog.conf`:

```
user.debug                /var/log/myfile.log
```



**Note** There must be five tab characters between `user.debug` and `/var/log/myfile.log`. Refer to entries in the `/etc/syslog.conf` file for further examples.

The switch sends messages according to specified facility types and severity levels. The `user` keyword specifies the UNIX logging facility used. The messages from the switch are generated by user processes. The `debug` keyword specifies the severity level of the condition being logged. You can set UNIX systems to receive all messages from the switch.

**Step 2** Create the log file by entering these commands at the UNIX shell prompt:

```
$ touch /var/log/myfile.log
$ chmod 666 /var/log/myfile.log
```

**Step 3** Make sure the syslog daemon reads the new changes by entering this command:

```
$ kill -HUP `cat /etc/syslog.pid`
```

## Configuring syslog Servers



**Note** Before you can send system log messages to a UNIX syslog server, you must configure the syslog daemon on the UNIX server as described in the “Configuring the syslog Daemon on a UNIX syslog Server” section on page 21-7.

To configure the switch to log messages to a syslog server, perform this task in privileged mode:

	Task	Command
<b>Step 1</b>	Specify the IP address of one or more syslog servers <sup>1</sup> .	<code>set logging server ip_addr</code>
<b>Step 2</b>	Set the facility and severity levels for syslog server messages.	<code>set logging server facility server_facility_parameter</code> <code>set logging server severity server_severity_level</code>
<b>Step 3</b>	Enable system message logging to configured syslog servers.	<code>set logging server enable</code>
<b>Step 4</b>	Verify the configuration.	<code>show logging [noalias]</code>

1. You can configure a maximum of three syslog servers.

This example shows how to specify a syslog server, set the facility and severity levels, and enable logging to the server:

```

Console> (enable) set logging server 10.10.10.100
10.10.10.100 added to System logging server table.
Console> (enable) set logging server facility local5
System logging server facility set to <local5>
Console> (enable) set logging server severity 5
System logging server severity set to <5>
Console> (enable) set logging server enable
System logging messages will be sent to the configured syslog servers.
Console> (enable)

```

To delete a syslog server from the syslog server table, perform this task in privileged mode:

Task	Command
Delete a syslog server from the syslog server table.	<b>clear logging server <i>ip_addr</i></b>

This example shows how to delete a syslog server from the syslog server table:

```

Console> (enable) clear logging server 10.10.10.100
System logging server 10.10.10.100 removed from system logging server table.
Console> (enable)

```

To disable logging to the syslog server, perform this task in privileged mode:

Task	Command
Disable system message logging to configured syslog servers.	<b>set logging server disable</b>

This example shows how to disable logging to syslog servers:

```

Console> (enable) set logging server disable
System logging messages will not be sent to the configured syslog servers.
Console> (enable)

```

## Displaying the Logging Configuration

Use the **show logging** command to display the current system message logging configuration. Use the **noalias** keyword to display the IP addresses instead of the host names of the configured syslog servers.

To display the current system message logging configuration, perform this task:

Task	Command
Display the current system message logging configuration.	<b>show logging [noalias]</b>

This example shows how to display the current system message logging configuration:

```
Console> (enable) show logging
Logging buffered size:      500
      timestamp option:    enabled
Logging history size:      1
Logging console:           enabled
Logging server:            disabled
      server facility:     LOCAL7
      server severity:     warnings(4)
```

Facility	Default Severity	Current Session Severity
acl	2	2
cdp	4	4
cops	2	2
dtp	5	5
dvlan	2	2
earl	2	2
fileSYS	2	2
gvrp	2	2
ip	2	2
kernel	2	2
ld	2	2
mcast	2	2
mgmt	5	5
mls	5	5
pagp	5	5
protfilt	2	2
pruning	2	2
privatevlan	2	2
qos	2	2
radius	2	2
rsvp	2	2
security	2	2
snmp	2	2
spantree	2	2
sys	5	5
tac	2	2
tcp	2	2
telnet	2	2
tftp	2	2
udld	4	4
vtp	2	2
0 (emergencies)	1 (alerts)	2 (critical)
3 (errors)	4 (warnings)	5 (notifications)
6 (information)	7 (debugging)	

```
Console> (enable)
```

## Displaying System Messages

Use the **show logging buffer** command to display the messages in the switch logging buffer. If you do not specify *number\_of\_messages*, the default is to display the last 20 messages in the buffer (-20).

To display the messages in the switch logging buffer, perform one of these tasks:

Task	Command
<ul style="list-style-type: none"> <li>Display the first <i>number_of_messages</i> messages in the buffer.</li> </ul>	<b>show logging buffer</b> [ <i>number_of_messages</i> ]
<ul style="list-style-type: none"> <li>Display the last <i>number_of_messages</i> messages in the buffer.</li> </ul>	<b>show logging buffer -</b> [ <i>number_of_messages</i> ]

This example shows how to display the first five messages in the buffer:

```
Console> (enable) show logging buffer 5
1999 Apr 16 08:40:11 %SYS-5-MOD_OK:Module 1 is online
1999 Apr 16 08:40:14 %SYS-5-MOD_OK:Module 3 is online
1999 Apr 16 08:40:14 %SYS-5-MOD_OK:Module 2 is online
1999 Apr 16 08:41:15 %PAGP-5-PORTTOSTP:Port 2/1 joined bridge port 2/1
1999 Apr 16 08:41:15 %PAGP-5-PORTTOSTP:Port 2/2 joined bridge port 2/2
```

This example shows how to display the last five messages in the buffer:

```
Console> (enable) show logging buffer -5
%PAGP-5-PORTFROMSTP:Port 3/1 left bridge port 3/1
%SPANTREE-5-PORTDEL_SUCCESS:3/2 deleted from vlan 1 (PAGP_Group_Rx)
%PAGP-5-PORTFROMSTP:Port 3/2 left bridge port 3/2
%PAGP-5-PORTTOSTP:Port 3/1 joined bridge port 3/1-2
%PAGP-5-PORTTOSTP:Port 3/2 joined bridge port 3/1-2
Console> (enable)
```