

show ip device-tracking

To show the IP device-tracking status, use the **show ip device-tracking** command.

show ip device-tracking

Syntax Description This command has no arguments or keywords.

Defaults This command has no default settings.

Command Types Switch command.

Command Modes Normal.

Examples This example shows how to display the IP device-tracking status:

```
Console> (enable) show ip device-tracking
Device tracking mode    : Enabled
Device tracking count   : 3
Device tracking timeout : 30
Console> (enable)
```

Related Commands [set ip device-tracking](#)

show ip dns

To show the DNS name servers and the default DNS domain name, use the **show ip dns** command.

show ip dns

Syntax Description This command has no arguments or keywords.

Defaults This command has no default settings.

Command Types Switch command.

Command Modes Normal.

Examples This example shows how to display the DNS name servers and the default DNS domain name:

```
Console> show ip dns
DNS is currently enabled.
The default DNS domain name is: cisco.com

DNS name server          status
-----
172.16.30.32
192.168.2.132           primary
172.31.128.70
Console>
```

[Table 2-41](#) describes the fields in the **show ip dns** command output.

Table 2-41 *show ip dns Command Output Fields*

Field	Description
DNS is currently enabled	Status of whether DNS is enabled or disabled.
default DNS domain name	Default DNS domain name.
DNS name server	IP addresses or IP aliases of the configured DNS servers.
status	Primary DNS server.

Related Commands

clear ip dns domain
clear ip dns server
set ip device-tracking
set ip dns domain
set ip dns server

show ip http

To view the HTTP configuration and the switch web interface information, use the **show ip http** command.

show ip http

Syntax Description This command has no arguments or keywords.

Defaults This command has no default settings.

Command Types Switch command.

Command Modes Normal.

Examples This example shows how to display the HTTP configuration and web interface information if the web interface is supported:

```
Console> show ip http
HTTP Configuration Information:
-----
HTTP Server: enabled
HTTP port: 80
Web Interface: Supported

Switch Information:
-----
File:  applet.html
      size: 912 bytes
      version: 5.0(0.26)
      date: 10/9/99
File:  cvembopt.jar
      size: 3500000 bytes
      version: 5.0(0.26)
      date: 10/9/99

Active Web Interface Session: 1
-----
Client IP Address: 192.20.20.45
Request Type: GET
Request URI: /all-engine.jar
Console>
```

This example shows the HTTP configuration and web interface information if the web interface is not supported:

```
Console> show ip http  
HTTP Configuration Information:  
-----  
HTTP Server: disabled  
HTTP port: 80  
Web Interface: Not Supported  
Console>
```

Related Commands

[set ip http port](#)
[set ip http server](#)

show ip permit

To display the IP permit list information, use the **show ip permit** command.

show ip permit [noalias]

Syntax Description	noalias (Optional) Forces the display to show IP addresses, not IP aliases.
---------------------------	--

Defaults	This command has no default value.
-----------------	------------------------------------

Command Types	Switch command.
----------------------	-----------------

Command Modes	Normal.
----------------------	---------

Examples	This example shows how to display the IP permit list information:
-----------------	---

```
Console> (enable) show ip permit
Telnet permit list feature enabled.
Ssh permit list enabled.
Snmp permit list feature disabled.
```

```
Permit List           Mask           Access-Type
-----
172.16.0.0            255.255.0.0   telnet
172.20.52.3          255.255.255.224 snmp telnet
172.20.52.32         255.255.255.224 snmp
```

```
Denied IP Address    Last Accessed Time Type
-----
172.100.101.104     01/20/97,07:45:20 SNMP
172.187.206.222     01/21/97,14:23:05 Telnet
```

```
Console> (enable)
```

[Table 2-42](#) describes the fields in the **show ip permit** command output.

Table 2-42 *show ip permit Command Output Fields*

Field	Description
IP permit list feature enabled	Status of whether the IP permit list feature is enabled or disabled.
Permit List	IP addresses and IP aliases that are allowed to access the switch.
Mask	Subnet masks of permitted IP addresses.
Denied IP Address	IP addresses and IP aliases that are not allowed to access the switch.

Table 2-42 *show ip permit Command Output Fields (continued)*

Field	Description
Last Accessed Time	Date and time of the last attempt to log in to the switch from the address.
Type	Login-attempt type.

Related Commands

[clear ip permit](#)
[set ip permit](#)
[set snmp trap](#)