



CHAPTER 19

Configuring Dynamic Port VLAN Membership with VMPS

This chapter describes how to configure dynamic port VLAN membership using the VLAN Management Policy Server (VMPS) on the Catalyst 6500 series switches.



Note

For complete syntax and usage information for the commands that are used in this chapter, refer to the *Catalyst 6500 Series Switch Command Reference* publication.

This chapter consists of these sections:

- [Understanding How VMPS Works, page 19-1](#)
- [Default VMPS and Dynamic Port Configuration, page 19-2](#)
- [Dynamic Port VLAN Membership and VMPS Configuration Guidelines, page 19-3](#)
- [Configuring VMPS and Dynamic Port VLAN Membership on the Switch, page 19-3](#)
- [Backing up the VMPS Configuration File, page 19-8](#)
- [Troubleshooting VMPS and Dynamic Port VLAN Membership, page 19-9](#)
- [Dynamic Port VLAN Membership with VMPS Configuration Examples, page 19-10](#)
- [Dynamic Port VLAN Membership with Auxiliary VLANs, page 19-14](#)

Understanding How VMPS Works

With VMPS, you can assign the switch ports to the VLANs dynamically, based on the source Media Access Control (MAC) address of the device that is connected to the port. When you move a host from a port on one switch in the network to a port on another switch in the network, the switch assigns the new port to the proper VLAN for that host dynamically.

When you enable VMPS, a MAC address-to-VLAN mapping database downloads from a Trivial File Transfer Protocol (TFTP) server and VMPS begins to accept the client requests. If you reset or power cycle the switch, the VMPS database downloads from the TFTP server automatically and VMPS is reenabled.

VMPS opens a User Datagram Protocol (UDP) socket to communicate and listen to the client requests. When the VMPS server receives a valid request from a client, it searches its database for a MAC address-to-VLAN mapping.

If the assigned VLAN is restricted to a group of ports, VMPS verifies the requesting port against this group. If the VLAN is allowed on the port, the VLAN name is returned to the client. If the VLAN is not allowed on the port and VMPS is not in secure mode, the host receives an “access denied” response. If VMPS is in secure mode, the port is shut down.

If a VLAN in the database does not match the current VLAN on the port and active hosts are on the port, VMPS sends an access denied or a port shutdown response that is based on the VMPS secure mode.

You can configure a fallback VLAN name. If you connect a device with a MAC address that is not in the database, VMPS sends the fallback VLAN name to the client. If you do not configure a fallback VLAN and the MAC address does not exist in the database, VMPS sends an access denied response. If VMPS is in secure mode, it sends a port shutdown response.

You can also make an explicit entry in the configuration table to deny access to specific MAC addresses for security reasons by specifying a **--NONE--** keyword for the VLAN name. In this case, VMPS sends an access denied or port shutdown response.

A dynamic port can belong to only one *native* VLAN in software releases prior to release 6.2(1)—with software release 6.2(1), a port can belong to a native VLAN and an auxiliary VLAN. See the “[Dynamic Port VLAN Membership with Auxiliary VLANs](#)” section on page 19-14 for complete details.

When the link comes up, a dynamic port is isolated from its static VLAN. The source MAC address from the first packet of a new host on the dynamic port is sent to VMPS, which attempts to match the MAC address to a VLAN in the VMPS database. If there is a match, VMPS provides the VLAN number to assign to the port. If there is no match, VMPS either denies the request or shuts down the port (depending on the VMPS secure mode setting).

Multiple hosts (MAC addresses) can be active on a dynamic port if they are all in the same VLAN. If the link goes down on a dynamic port, the port returns to an isolated state. Any hosts that come online through the port are checked again with VMPS before the port is assigned to a VLAN.

Default VMPS and Dynamic Port Configuration

Table 19-1 shows the default VMPS and dynamic port configuration.

Table 19-1 Default VMPS and Dynamic Port Configuration

| Feature | Default Configuration |
|--------------------------------------|--------------------------------|
| VMPS server | |
| VMPS enable state | Disabled |
| VMPS management domain | Null |
| VMPS TFTP server | None |
| VMPS database configuration filename | <i>vmpls-config-database.1</i> |
| VMPS fallback VLAN | Null |
| VMPS secure mode | Open |
| VMPS no domain requests | Allow |

Table 19-1 Default VMPS and Dynamic Port Configuration (continued)

| Feature | Default Configuration |
|-------------------------|-----------------------------|
| VMPS Client | |
| VMPS domain server | None |
| VMPS reconfirm interval | 60 minutes |
| VMPS server retry count | 3 |
| Dynamic ports | No dynamic ports configured |

Dynamic Port VLAN Membership and VMPS Configuration Guidelines

This section describes the guidelines for dynamic port VLAN membership:

- You must configure VMPS before you configure the ports as dynamic.
- When you configure a port as dynamic, spanning-tree PortFast is enabled automatically for that port. Automatic enabling of spanning-tree PortFast prevents the applications on the host from timing out and entering loops that are caused by incorrect configurations. You can disable spanning-tree PortFast mode on a dynamic port.
- If you reconfigure a port from a static port to a dynamic port on the same VLAN, the port connects immediately to that VLAN. However, VMPS checks the legality of the specific host on the dynamic port after a certain period.
- The static secure ports cannot become dynamic ports. You must turn off security on the static secure port before it can become dynamic.
- The static ports that are trunking cannot become dynamic ports. You must turn off trunking on the trunk port before changing it from static to dynamic.



Note

The VLAN Trunking Protocol (VTP) management domain and the management VLAN of the VMPS clients and the VMPS server must be the same. For more information, see [Chapter 10, “Configuring VTP,”](#) and [Chapter 11, “Configuring VLANs.”](#)

Configuring VMPS and Dynamic Port VLAN Membership on the Switch

These sections describe how to configure VMPS and define the dynamic ports on the clients:

- [Creating the VMPS Database, page 19-4](#)
- [Configuring VMPS, page 19-5](#)
- [Configuring Dynamic Ports on VMPS Clients, page 19-5](#)
- [Administering and Monitoring VMPS, page 19-6](#)
- [Configuring Static VLAN Port Membership, page 19-7](#)

Creating the VMPS Database

To use VMPS, you must create a VMPS database and store it on a TFTP server. The VMPS parser is line based. Start each entry in the file on a new line. Ranges are not allowed for the port numbers.



Note

For an example ASCII text VMPS database configuration file, see the [“VMPS Database Configuration File Example” section on page 19-10](#).

Follow these guidelines for creating the VMPS database file:

- Begin the configuration file with the word “VMPS,” to prevent other types of configuration files from incorrectly being read by the VMPS server.
- Define the VMPS domain—The VMPS domain should correspond to the VTP domain name that is configured on the switch.
- Define the security mode—VMPS can operate in open or secure mode.
- (Optional) Define a fallback VLAN—The fallback VLAN is assigned if the MAC addresses of the connected host is not defined in the database.
- Define the MAC address-to-VLAN name mappings—Enter the MAC address of each host and the VLAN to which each should belong. Use the **--NONE--** keyword as the VLAN name to deny the specified host network connectivity. A port is identified by the IP address of the switch and the module/port number of the port in the form *mod/port*.
- Define port groups—A port group is a logical group of ports. You can apply VMPS policies to individual ports or to port groups. The keyword **all-ports** specifies all the ports in the specified switch.
- Define VLAN groups—A VLAN group defines a logical group of VLANs. These logical groups define the VLAN port policies.
- Define VLAN port policies—The VLAN port policies define the ports that are associated with a restricted VLAN. You can configure a restricted VLAN by defining the set of dynamic ports on which it can exist.

To create a VMPS database, perform this task:

| | Task | Command |
|--------|---|-----------------|
| Step 1 | Determine the MAC addresses of the hosts that you want to be assigned to VLANs dynamically. | show cam |
| Step 2 | Create an ASCII text file on your workstation or PC that contains the MAC address-to-VLAN mappings. | – |
| Step 3 | Move the ASCII text file to a TFTP server so that it can be downloaded to the switch. | – |

Configuring VMPS

When you enable VMPS, the switch downloads the VMPS database from the TFTP or rcp server and begins accepting VMPS requests.

To configure VMPS, perform this task in privileged mode:

| | Task | Command |
|--------|--|--|
| Step 1 | Specify the download method. | set vmps downloadmethod rcp tftp [username] |
| Step 2 | Configure the IP address of the TFTP or rcp server on which the ASCII text VMPS database configuration file resides. | set vmps downloadserver ip_addr [filename] |
| Step 3 | Enable VMPS. | set vmps state enable |
| Step 4 | Verify the VMPS configuration. | show vmps |

This example shows how to enable VMPS on the switch:

```
Console> (enable) set vmps state enable
Vlan Membership Policy Server enable is in progress.
Console> (enable)
```

To disable VMPS, perform this task in privileged mode:

| | Task | Command |
|--------|-------------------------------|-------------------------------|
| Step 1 | Disable VMPS. | set vmps state disable |
| Step 2 | Verify that VMPS is disabled. | show vmps |

This example shows how to disable VMPS on the switch:

```
Console> (enable) set vmps state disable
All the VMPS configuration information will be lost and the resources released on disable.
Do you want to continue (y/n[n]): y
Vlan Membership Policy Server disabled.
Console> (enable)
```

Configuring Dynamic Ports on VMPS Clients

To configure dynamic ports on VMPS client switches, perform this task in privileged mode:

| | Task | Command |
|--------|---|---|
| Step 1 | Specify the IP address of the VMPS server (the switch with VMPS enabled). | set vmps server ip_addr [primary] |
| Step 2 | Verify the VMPS server specification. | show vmps server |
| Step 3 | Configure the dynamic port VLAN membership assignments to a port. | set port membership mod/port dynamic |
| Step 4 | Verify the dynamic port assignments. | show port [mod[/port]] |

This example shows how to specify the VMPS server, verify the VMPS server specification, assign the dynamic ports, and verify the configuration:

```

Console> (enable) show vmps server
VMPS domain server VMPS Status
-----
192.0.0.6
192.0.0.1      primary
192.0.0.9
Console> (enable) set port membership 3/1-3 dynamic
Ports 3/1-3 vlan assignment set to dynamic.
Spantree port fast start option enabled for ports 3/1-3.
Console> (enable) set port membership 1/2 dynamic
Trunking port 1/2 vlan assignment cannot be set to dynamic.
Console> (enable) set port membership 2/1 dynamic
ATM LANE port 2/1 vlan assignment can not be set to dynamic.
Console> show port
Port  Name      Status  Vlan   Level  Duplex  Speed  Type
1/1      connect  dyn-3  normal full    100    100 BASE-TX
1/2      connect  trunk  normal half    100    100 BASE-TX
2/1      connect  trunk  normal full    155    OC3 MMF ATM
3/1      connect  dyn-5  normal half    10     10 BASE-T
3/2      connect  dyn-5  normal half    10     10 BASE-T
3/3      connect  dyn-5  normal half    10     10 BASE-T
Console> (enable)

```

**Note**

The **show port** command displays *dyn-* under the Vlan column of the display when it has not yet been assigned a VLAN for a port.

Administering and Monitoring VMPS

To show information about the MAC address-to-VLAN mappings, perform one of these tasks in privileged mode:

| Task | Command |
|---|---|
| Show the VLAN to which a MAC address is mapped in the database. | show vmps mac [<i>mac_address</i>] |
| Show the MAC addresses that are mapped to a VLAN in the database. | show vmps vlan [<i>vlan_name</i>] |
| Show the ports belonging to a restricted VLAN. | show vmps vlanports [<i>vlan_name</i>] |

To show the VMPS statistics, perform this task in privileged mode:

| Task | Command |
|---------------------------|-----------------------------|
| Show the VMPS statistics. | show vmps statistics |

To clear the VMPS statistics, perform this task in privileged mode:

| Task | Command |
|----------------------------|------------------------------|
| Clear the VMPS statistics. | clear vmps statistics |

To clear a VMPS server entry, perform this task in privileged mode:

| Task | Command |
|----------------------------|---|
| Clear a VMPS server entry. | clear vmps server <i>ip_addr</i> |

To reconfirm the dynamic port VLAN membership assignments, perform this task in privileged mode:

| | Task | Command |
|---------------|---|------------------------------|
| Step 1 | Reconfirm the dynamic port VLAN membership assignments. | reconfirm vmps |
| Step 2 | Verify the dynamic VLAN reconfirmation status. | show dvlan statistics |

This example shows how to reconfirm dynamic port VLAN membership assignments:

```
Console> (enable) reconfirm vmps
reconfirm process started
Use 'show dvlan statistics' to see reconfirm status
Console> (enable)
```

To download the VMPS database manually (to download a changed database configuration file or retry after a failed download attempt), perform this task in privileged mode:

| | Task | Command |
|---------------|---|----------------------|
| Step 1 | Download the VMPS database from the TFTP server, or specify a different VMPS database configuration file. | download vmps |
| Step 2 | Verify the VMPS database configuration file. | show vmps |

Configuring Static VLAN Port Membership

To return a port to static VLAN port membership, perform this task in privileged mode:

| | Task | Command |
|---------------|--|---|
| Step 1 | Configure the static port VLAN membership assignments to a port. | set port membership <i>mod/port</i> static |
| Step 2 | Verify the static port assignments. | show port [<i>mod/port</i>] |

This example shows how to return a port to static VLAN port membership:

```
Console> (enable) set port membership 3/1 static
Port 3/1 vlan assignment set to static.
Console> (enable)
```

Backing up the VMPS Configuration File

Use the VMPS configuration file backup feature to prevent delays after a power shutdown when the VMPS clients and servers are coming back online. After a power shutdown, the VMPS requests that are sent by the clients are queued by the TFTP server until the VMPS server downloads the VMPS configuration file from the VMPS server. To ensure that the client access is not delayed during a system reboot, you can configure the switch to back up the VMPS configuration file locally and use this file until it has downloaded the current VMPS configuration file from the remote TFTP server.

To configure the switch to back up the VMPS configuration file, perform this task in privileged mode:

| | Task | Command |
|--------|--|---|
| Step 1 | Manually back up the VMPS configuration file. Note If you do not specify the filename, the system will save the VMPS configuration file as vmpls-backup-config-database.1 . | set vmpls config-file device: [filename] |
| Step 2 | Enable an automatic backup of the VMPS configuration file. | set vmpls config-file auto-save enable disable |
| Step 3 | Verify the configuration. | show vmpls |

This example shows how to manually back up the VMPS configuration file:

```
Console> (enable) set vmpls config-file disk0:
Vlan Membership Policy Server back-up file name is set to disk0:vmpls-backup-config-database.1.
Console> (enable)
```

This example shows how to configure the system to automatically back up the VMPS configuration file:

```
Console> (enable) set vmpls config-file auto-save enable
Auto save to store Vlan Membership Policy Server configuration file is enabled.
Console> (enable)
```

This example shows how to verify the configuration:

```
Console> show vmpls
VMPS Server Status:
-----
Management Domain      (null)
State                  disabled
Operational Status     inactive
TFTP Server            default
TFTP File              vmpls-config-database.1
Fallback VLAN          (null)
Secure Mode            open
VMPS No Domain Req     allow
VMPS Backup file name  disk0:vmpls-backup-config-database.1
VMPS Auto-Save state  enabled
```

```

VMPS Client Status:
-----
VMPS VQP Version:      1
Reconfirm Interval:    60 min
Server Retry Count:    3
VMPS domain server:

No dynamic ports configured.
Console>

```

Troubleshooting VMPS and Dynamic Port VLAN Membership

These sections describe how to troubleshoot VMPS and dynamic port VLAN membership:

- [Troubleshooting VMPS, page 19-9](#)
- [Troubleshooting Dynamic Port VLAN Membership, page 19-10](#)

Troubleshooting VMPS

Table 19-2 shows the VMPS error messages that you might see when you enter the `set vmps state enable` or the `download vmps` command.

Table 19-2 VMPS Error Messages

| VMPS Error Message | Recommended Action |
|---|--|
| TFTP server IP address is not configured. | Specify the TFTP server address using the <code>set vmps tftpserver ip_addr [filename]</code> command. |
| Unable to contact the TFTP server 172.16.254.222. | Enter a static route (using the <code>set ip route</code> command) to the TFTP server. |
| File "vmps_configuration.db" not found on the TFTP server 172.16.254.222. | Check the filename of the VMPS database configuration file on the TFTP server. Make sure that the permissions are set correctly. |
| Enable failed due to insufficient resources. | The switch does not have sufficient resources to run the database. You can fix this problem by increasing the dynamic random-access memory (DRAM). |

After VMPS successfully downloads the VMPS database configuration file, it parses the file and builds a database. When the parsing is complete, VMPS outputs statistics about the total number of lines that are parsed and the number of parsing errors.

To obtain more information on the VMPS parsing errors, set the syslog level for VMPS to 3 using the `set logging level vmps 3` command.

Troubleshooting Dynamic Port VLAN Membership

A dynamic port might shut down under these circumstances:

- VMPS is in secure mode and it is illegal for the host to connect to the port. The port shuts down to prevent the host from connecting to the network.
- More than 50 active hosts reside on a dynamic port.

To reenable a shut-down dynamic port, enter the **set port enable** *mod/port* command.

Dynamic Port VLAN Membership with VMPS Configuration Examples

These sections provide examples of how to configure VMPS and dynamic ports:

- [VMPS Database Configuration File Example, page 19-10](#)
- [Dynamic Port VLAN Membership Configuration Example, page 19-12](#)

VMPS Database Configuration File Example

This example shows a sample VMPS database configuration file. A VMPS database configuration file is an ASCII text file that is stored on a TFTP server accessible to the switch configured as the VMPS server. A summary of the configuration example follows:

- The security mode is open.
- The default is used for the fallback VLAN.
- MAC address-to-VLAN name mappings—The MAC address of each host and the VLAN to which each host belongs is defined.
- Port groups are defined.
- VLAN groups are defined.
- VLAN port policies are defined for the ports that are associated with restricted VLANs.

```
!VMPS File Format, version 1.1
! Always begin the configuration file with
! the word "VMPS"
!
!vmps domain <domain-name>
! The VMPS domain must be defined.
!vmps mode {open | secure}
! The default mode is open.
!vmps fallback <vlan-name>
!vmps no-domain-req { allow | deny }
!
! The default value is allow.
vmps domain WBU
vmps mode open
vmps fallback default
vmps no-domain-req deny
!
!
!MAC Addresses
!
```

```

vmps-mac-addr
!
! address <addr> vlan-name <vlan_name>
!
address 0012.2233.4455 vlan-name hardware
address 0000.6509.a080 vlan-name hardware
address aabb.ccdd.eeff vlan-name Green
address 1223.5678.9abc vlan-name ExecStaff
address fedc.ba98.7654 vlan-name --NONE--
address fedc.ba23.1245 vlan-name Purple
!
!Port Groups
!
!vmps-port-group <group-name>
! device <device-id> { port <port-name> | all-ports }
!
vmps-port-group WiringCloset1
  device 198.92.30.32 port 3/2
  device 172.20.26.141 port 2/8
vmps-port-group "Executive Row"
  device 198.4.254.222 port 1/2
  device 198.4.254.222 port 1/3
  device 198.4.254.223 all-ports
!
!
!VLAN groups
!
!vmps-vlan-group <group-name>
! vlan-name <vlan-name>
!
vmps-vlan-group Engineering
vlan-name hardware
vlan-name software
!
!
!VLAN port Policies
!
!vmps-port-policies {vlan-name <vlan_name> | vlan-group <group-name> }
! { port-group <group-name> | device <device-id> port <port-name> }
!
vmps-port-policies vlan-group Engineering
  port-group WiringCloset1
vmps-port-policies vlan-name Green
  device 198.92.30.32 port 4/8
vmps-port-policies vlan-name Purple
  device 198.4.254.22 port 1/2
  port-group "Executive Row"

```

Dynamic Port VLAN Membership Configuration Example

Figure 19-1 shows a network with a VMPS server switch and VMPS client switches with dynamic ports. In this example, these assumptions apply:

- The VMPS server and the VMPS client are separate switches.
- Switch 1 is the primary VMPS server.
- Switch 3 and Switch 10 are secondary VMPS servers.
- End stations are connected to these clients:
 - Switch 2
 - Switch 9
- The database configuration file is called Bldg-G.db and is stored on a TFTP server with IP address 172.20.22.7.

To configure VMPS and dynamic ports, perform these steps:

Step 1 Configure Switch 1 as the primary VMPS server.

- a. Configure the IP address of the TFTP server on which the ASCII file resides:

```
Console> (enable) set vmps tftpserver 172.20.22.7 Bldg-G.db
```

- b. Enable VMPS:

```
Console> (enable) set vmps state enable
```

After entering these commands, the file Bldg-G.db is downloaded to Switch 1. Switch 1 becomes the VMPS server.

Step 2 Configure the VMPS server addresses on each VMPS client.

- a. Configure the primary VMPS server IP address:

```
Console> (enable) set vmps server 172.20.26.150 primary
```

- b. Configure the secondary VMPS server IP addresses:

```
Console> (enable) set vmps server 172.20.26.152
```

```
Console> (enable) set vmps server 172.20.26.159
```

- c. Verify the VMPS server addresses:

```
Console> (enable) show vmps server
```


Step 3 Configure port 3/1 on Switch 2 as dynamic.

```
Console> (enable) set port membership 3/1 dynamic
```

Step 4 Connect End Station 2 on port 3/1. When End Station 2 sends a packet, Switch 2 sends a query to the primary VMPS server, Switch 1. Switch 1 responds with the VLAN to assign to port 3/1. Because spanning-tree PortFast mode is enabled by default on dynamic ports, port 3/1 connects immediately and enters forwarding mode.

Step 5 Repeat Steps 2 and 3 to configure the VMPS server addresses and assign dynamic ports on each VMPS client switch.

Figure 19-1 Dynamic Port VLAN Membership Configuration

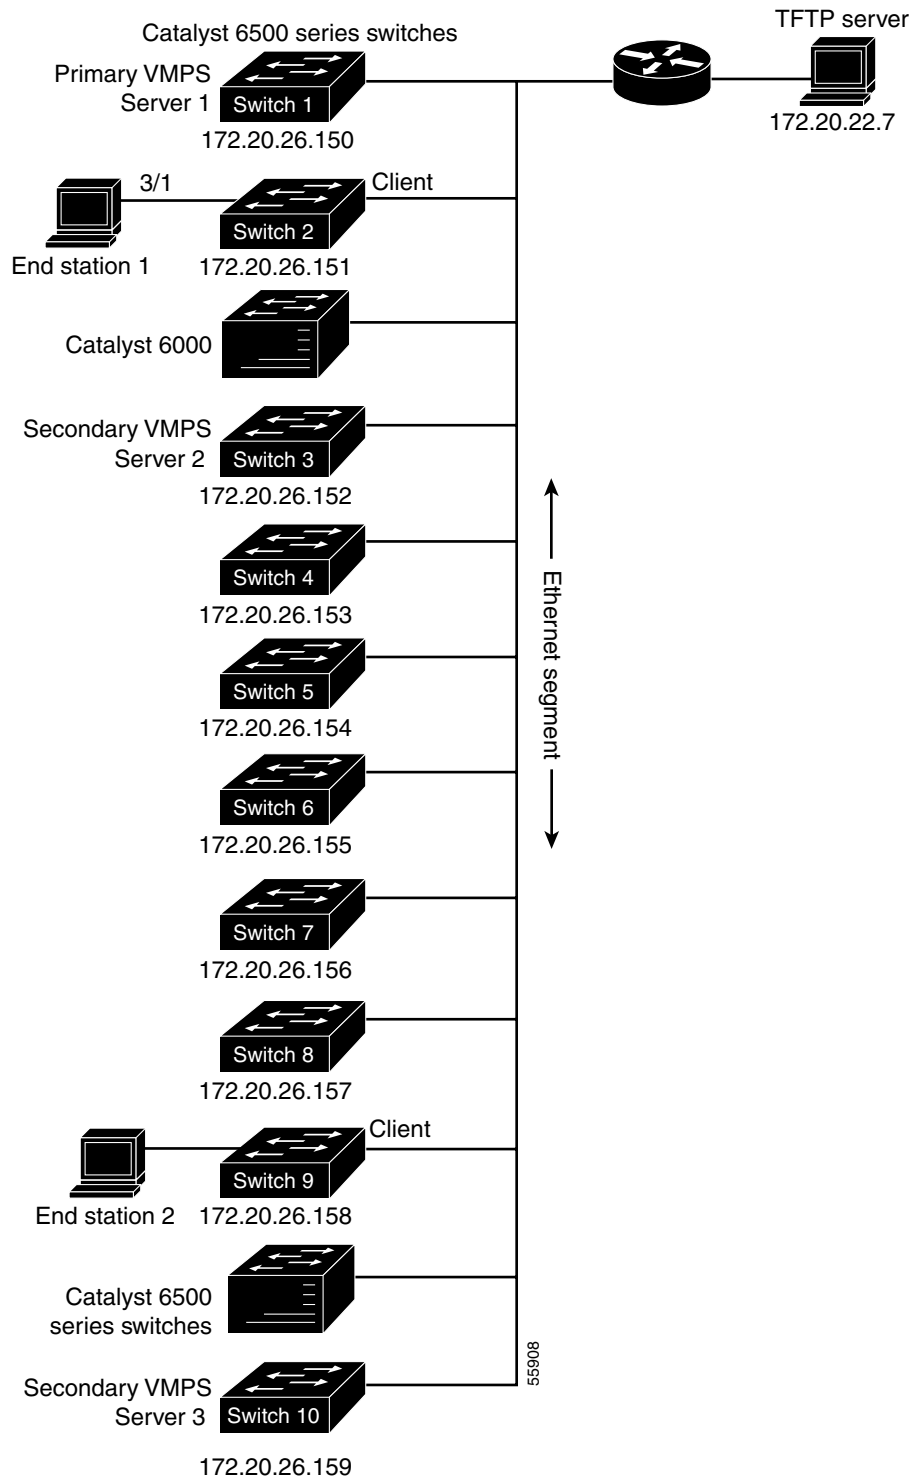

Dynamic Port VLAN Membership with Auxiliary VLANs

**Note**

This feature requires software release 6.2(1) or later releases.

This section describes how to configure a dynamic port to belong to two VLANs—a native VLAN and an auxiliary VLAN. This section uses the following terminology:

- Auxiliary VLAN—Separate VLAN for IP phones
- Native VLAN—Traditional VLAN for data
- Auxiliary VLAN ID—VLAN ID of an auxiliary VLAN
- Native VLAN ID—VLAN ID of a native VLAN

Prior to software release 6.2(1), the dynamic ports could only belong to one VLAN. You could not enable the dynamic port VLAN feature on the ports that carried a native VLAN and an auxiliary VLAN.

With software release 6.2(1) and later releases, the dynamic ports can belong to two VLANs. The switch port that is configured for connecting an IP phone can have separate VLANs that are configured for carrying the following:

- Voice traffic to and from the IP phone (auxiliary VLAN)
- Data traffic to and from the PC that is connected to the switch through the *access port* of the IP phone (native VLAN)

These sections include configuration guidelines and examples:

- [Dynamic Port VLAN Membership with Auxiliary VLANs Guidelines, page 19-14](#)
- [Configuring Dynamic Port VLAN Membership with Auxiliary VLANs, page 19-15](#)

**Note**

For detailed information on the auxiliary VLANs and Cisco voice-over-IP networks, see [Chapter 55, “Configuring a VoIP Network.”](#)

Dynamic Port VLAN Membership with Auxiliary VLANs Guidelines

This section describes the guidelines and restrictions for configuring dynamic port VLAN membership for the auxiliary VLANs:

- Configuration of the native VLAN ID is dynamic for the PC that is connected to the access port of the IP phone. Configuration of the auxiliary VLAN ID is not dynamic; you need to configure it manually. As the auxiliary VLAN ID is manually configured, the VMPS server is queried for packets coming from the PC, not for the packets coming from the IP phone.
- All the packets except the Cisco Discovery Protocol (CDP) packets from the IP phone are tagged with the auxiliary VLAN ID. All the packets that are tagged with the auxiliary VLAN ID are considered to be the packets from the phone, and all the other packets are considered to be the packets from the PC.

- When configuring the auxiliary VLAN ID with 802.1p or untagged frames, you need to configure the VMPS server with the IP phone's MAC address (see the “[Dynamic Port VLAN Membership with VMPS Configuration Examples](#)” section on page 19-10 for information on configuring VMPS).
- For the dynamic ports, the auxiliary VLAN ID cannot be the same as the native VLAN ID that is assigned by VMPS for the dynamic port.
- See the “[Dynamic Port VLAN Membership and VMPS Configuration Guidelines](#)” section on page 19-3 prior to configuring any port.

Configuring Dynamic Port VLAN Membership with Auxiliary VLANs

To configure dynamic port VLAN membership with auxiliary VLANs, perform this task in privileged mode:

| Task | Command |
|--|---|
| Configure dynamic port VLAN membership with the auxiliary VLANs. | set port auxiliaryvlan <i>mod[/port]</i> { <i>vlan</i> <i>untagged</i> <i>dot1p</i> <i>none</i> } [<i>cdpverify</i> { <i>enable</i> <i>disable</i> }] |

This example shows how to add voice ports to the auxiliary VLANs and specify an encapsulation type:

```
Console> (enable) set port auxiliaryvlan 5/9 222
Auxiliaryvlan 222 configuration successful.
AuxiliaryVlan AuxVlanStatus Mod/Ports
-----
222          active          5/9
Console> (enable)
```

```
Console> (enable) set port auxiliaryvlan 5/9 dot1p
Port 5/9 allows the connected device send and receive packets with 802.1p priority.
Console> (enable)
```

This example shows how to specify port 5/9 as a dynamic port:

```
Console> (enable) set port membership 5/9 dynamic
Warning: Auxiliary Vlan set to dot1p|untagged on dynamic port. VMPS will be queried for IP phones.
Port 5/9 vlan assignment set to dynamic.
Spantree port fast start option enabled for ports 5/9.
Console> (enable)
```

This example shows that the auxiliary VLAN ID specified cannot be the same as the native VLAN ID:

```
Console> (enable) set port auxiliaryvlan 5/10 223
Auxiliary vlan cannot be set to 223 as PVID=223.
Console> (enable)
```

