

## tcam dynamic-entries

Use the **tcam dynamic-entries** command to specify the maximum allowable number of TCAM entries.

**tcam dynamic-entries max *number***

### Syntax Description

|               |  |
|---------------|--|
| <b>max</b>    | Keyword and variable to specify the maximum allowable number of TCAM entries; valid values are from 1 to 4096 entries. |
| <i>number</i> |  |

### Default

The default is \_\_\_\_\_.

### Command Mode

Interface configuration mode.

### Example

This example shows how to set the maximum number of TCAM entries:

```
Router(config)# tcam dynamic-entries max 4096
tcam_interface_setup stub
[state = 1]

Router(config)#
```

