



CONTENTS

Contents	1-1
Overview of the CTS-Manager Administration Guide	1-2
Terminology	1-3
Introduction to the Cisco TelePresence System	1-3
Taking Point-to-Point Cisco TelePresence calls	1-4
CTS Endpoints	1-4
Components of the Cisco TelePresence System	1-4
Cisco TelePresence Manager Product Specifications	1-5
Installation Procedures Guideline	1-6
Contents	2-1
Introduction	2-1
System Components and Versions	2-1
Pre-Installation Procedure Guidelines for Initial Network Set-up	2-2
Contents	3-1
Introduction	3-1
Pre-Configuration Set-Up Guidelines	3-2
Configuring Microsoft Exchange for CTS-Manager	3-3
Deploying with Microsoft Exchange 2003	3-4
Deploying with Microsoft Exchange 2007 - WebDAV	3-5
Deploying with Microsoft Exchange 2007 EWS	3-8
Migrating from Exchange 2003 to Exchange 2007	3-11
Contents	4-1
Introduction	4-1
Important Considerations	4-1
Pre-Configuration Procedure Guidelines for IBM Domino Set-up	4-2
Configuring IBM Domino for CTS-Manager	4-3
Directory Assistance in a Domino Deployment	4-4
Contents	5-1
Introduction	5-1
Important Considerations	5-1
Pre-Configuration Procedure Guidelines for Cisco Unified CM Set-up	5-2
Configuring Cisco Unified CM for CTS-Manager	5-2

- For Deployments Using Microsoft Exchange 2003, 2007, and IBM Domino 5-3
 - Configuring Cisco Unified CM Server Names 5-4
- Logging into the Cisco Unified CM Administrator 5-5
- Configuring the Options File 5-5
- Adding a Cisco TelePresence Device 5-6
 - Download Device Packs 5-6
 - Install the Device 5-6
- Creating and Configuring a Cisco TelePresence Device 5-7
 - Adding a New Phone as a Cisco TelePresence Device 5-7
 - Finding a Phone 5-8
- Configuring Cisco TelePresence Devices 5-8
 - Before You Begin 5-8
 - Device Information 5-8
- Contents 6-1
- Introduction 6-1
- Pre-Configuration Procedure Guidelines for Checking Initial Network Set-up 6-2
- Installing the PreQualification Assistant Tool 6-3
 - Running the Tool - Using the Tool Application Window 6-6
- Menu Commands 6-8
 - File Menu Commands 6-8
 - System Menu Command 6-8
 - Host Configuration Window 6-9
 - Test Status Window 6-10
- Using PreQualification Configuration Forms 6-11
 - Cisco Unified Call Manager Configuration Form 6-11
 - Test(s) Enabled by the Host Configuration Form 6-13
 - Test Host Configuration Forms in a Generic Environment 6-13
 - LDAP (Generic) Test Configuration Form 6-15
 - Test Configuration Forms in a Microsoft Exchange Environment 6-16
 - LDAP Server (Active Directory) Test Configuration Form 6-18
 - Calendar Server (Microsoft Exchange) Host Configuration Form 6-20
 - Test Configuration Forms in an IBM Domino Environment 6-21
 - LDAP (Domino Directory) Host Configuration Form 6-23
 - Calendar Server (IBM Domino) Configuration Form 6-24
 - Cisco Unified Call Manager Server (IBM Domino) Configuration Window 6-26
 - LDAP (Domino Directory) Host Configuration Form 6-28
 - Test(s) Enabled by the Execute Test button 6-28
 - Test Configuration Forms in a Microsoft Exchange Web Services (EWS) Environment 6-29

LDAP Server (Active Directory) Add/Edit Configuration Form	6-30
LDAP Server Microsoft Exchange EWS Calendar Server Configuration Form	6-32
Contents	7-1
Introduction	7-1
System Information	7-2
Installation Guidelines	7-2
Installing Cisco TelePresence Manager from DVD	7-3
Required Information and Equipment	7-3
Introduction to the CTS-Manager Administration Software	7-4
Logging Into CTS-Manager	7-4
Administrator Role	7-4
Superuser Role	7-4
Live Desk Role	7-5
Installation Procedure for Cisco TelePresence Manager	7-5
Installation Page Values Defined	7-6
Recovering Administrator and Security Passwords	7-9
Recovery procedure 1:	7-9
Recovery procedure 2:	7-9
System Log Error Detection	7-9
System Log	7-10
System Error - AXL Error or Invalid Credential	7-11
Software Upgrade	7-11
Upgrading to Cisco TelePresence Manager 1.6	7-12
Switch Version	7-13
Upgrade Software	7-13
Cisco TelePresence Manager Window	7-19
Header Pane	7-19
System Status Pane	7-20
Navigation Pane	7-21
Work Pane	7-22
Preferences	7-23
Contents	8-1
Introduction	8-2
Post-Install Guidelines for CTS-Manager	8-2
Initializing Cisco TelePresence Manager After Installation	8-3
Required Information and Equipment	8-3
Initialization Procedure	8-4
Initialization for Microsoft Exchange Deployments	8-4

- CTS-Manager Configuration Options 8-4
- Configure the System Manually 8-5
- Configure the system with Pre-Qualification Assistant Data File 8-6
- Restore Configuration Settings from a Database Back-up 8-6
- Calendar Server Option 8-7
- Verifying the LDAP Servers Configuration 8-8
 - Cisco Unified Call Manager (CUCM) Server Configuration 8-9
 - Verifying the Cisco Unified Communications Manager Configuration 8-10
 - Calendar Server Configuration 8-11
 - Explanation of Microsoft Exchange Fields 8-11
 - Database Back-up Schedule 8-12
 - Explanation of Database Backup Schedule Fields 8-13
- Microsoft Exchange Calendar Service Window 8-14
 - Re-sync Operations 8-17
- Initialization for IBM Domino Deployments 8-18
 - Verifying the LDAP Servers Configuration 8-19
 - Cisco Unified Call Manager (CUCM) Server Configuration 8-21
 - Verifying the Cisco Unified Communications Manager Configuration 8-21
- IBM Domino Calendar 8-23
 - Explanation of IBM Domino Fields 8-23
- Dashboard for Verification of Installation Status 8-24
- Contents 9-1
- Post-Install Guidelines for CTS-Manager 9-2
- Introduction 9-3
- Security Settings 9-3
 - Web Services Security 9-4
- Digital Security Certificates 9-4
 - Generating Security Certificate Reports 9-5
 - Viewing Security Certificates 9-5
 - Deleting Security Certificates 9-5
 - Uploading Security Certificates 9-5
- LDAP Server 9-6
 - Settings for LDAP 9-6
 - Multiple LDAP Peer Domains 9-7
- Field Mappings 9-7
 - Microsoft Exchange Deployments 9-7
 - Edit 9-10
 - Verifying Field Mapping Data 9-12

IBM Domino Deployments	9-13
Verifying Field Mapping Data	9-16
Deleting Server	9-16
Password	9-16
Calendar Server	9-17
Microsoft Exchange	9-21
Re-sync Operations	9-23
IBM Domino	9-24
Re-sync Operations	9-26
System Settings	9-27
IP Setting	9-27
NTP Setting	9-29
SNMP Setting	9-30
Technical Notes	9-31
Database - Status, Backup, and Restore	9-32
Settings	9-32
Backup	9-34
Changing the Backup Schedule	9-34
Backing Up CTS-Manager Data	9-35
Remote Storage Host Fields	9-35
Viewing Backup History	9-36
Restore	9-36
Restoring Backup Data	9-37
To restore data from a backup:	9-38
Discovery Service	9-38
MCU Devices	9-41
New MCU CTMS Device	9-42
Edit the MCU setting	9-43
Deleting a MCU	9-43
Deallocate a MCU	9-43
Refreshing the list of MCUs	9-43
Access Management	9-44
Assigning Roles to Groups Using Domino Directory Assistance	9-44
Cisco TelePresence Multipoint Switch (CTMS)	9-45
Adding a CTMS	9-45
Editing CTMS Settings	9-46
Cisco Unified Video Conferencing (CUVC)	9-47
Adding a CUVC	9-47

Editing CUVC Settings	9-48
Live Desks	9-49
Live Desk Role	9-49
Creating Live Desk Personnel	9-50
Assigning a Room to a Specific Live Desk	9-51
Policy Management	9-52
CTMS policy	9-52
CTS endpoint policy	9-53
Conference Manager policy	9-53
Remote Account	9-54
System Configuration - System Settings	9-55
Application Settings	9-55
Studio Mode Recording	9-56
Interoperability with Video Conferencing Settings	9-57
Intercompany Setting	9-57
Tentative Room Reservations Support	9-58
Meeting Notification Email Settings	9-58
CTS-Manager Redundancy Failover Procedure	9-59
Cold Standby	9-59
Warm Standby	9-61
CTS-Manager Redundancy Failover Procedure	9-61
CTMS Redundancy Failover Procedure	9-62
Contents	10-1
Introduction	10-2
Post-Install Guidelines for CTS-Manager	10-2
Scheduled Meetings	10-3
Process/Response Times for Scheduled Meetings	10-4
Modifying Meeting Details from a Calendar Client	10-4
Calendar Scheduling Limitation	10-4
Generating Scheduled Meeting Reports	10-4
Exporting Scheduled Meeting Data	10-5
Meeting Details	10-6
Rooms	10-6
Manually Updating Room Schedules on the Cisco TelePresence Room Phone	10-9
Viewing Scheduled Meetings for a Specific Room	10-9
MCU Devices	10-12
Summary Tab	10-12
Generating Multipoint Conference Unit Reports	10-12

Capability Tab	10-16
Cisco Unified Communications Manager	10-18
Command Line Interface	10-19
Contents	11-1
Introduction	11-2
Point-to-Point Meetings	11-2
Multipoint Meetings	11-4
Action Required Email	11-6
Confirmation Meeting Details Window	11-8
Meeting Details	11-8
Occurrence Details Pane	11-8
Rooms Details Option	11-10
VC Interop Options	11-10
Intercompany Host Meeting Options	11-12
Intercompany Participant Meeting Options	11-13
Meeting Options Tab	11-14
Contents	12-1
Introduction	12-2
MIB Support	12-2
Contents	13-1
Introduction	13-2
System Log	13-2
Log Files	13-3
Download All Files	13-5
Scheduled Meeting and Room Issues	13-5
IP Phone User Interface Issues	13-12
Cisco TelePresence Manager Database Issues	13-13
Multipoint Conference Unit (MCU) Issues	13-13
Cisco Unified Communications Manager (CUCM) Issues	13-14
Calendar Server and LDAP Interface Issues	13-14
LDAP Server Issues	13-15
Microsoft Exchange Calendar Server Issues	13-15
IBM Domino Calendar Server Issues	13-18
Web Browser Error Messages	13-20
JavaScript Error Message	13-20
Safe ActiveX Checking Message	13-20
System Error Messages	13-21

