



INDEX

A

access levels See user types
actions [2-3](#)
ad hoc conference call [1-1](#)
Advanced Features dialog box [2-5](#)
Advanced Invitation tab [2-10, 3-13, 3-14, 3-16](#)
auto switch [3-18](#)

B

bandwidth
 configuring outgoing rate [3-12](#)
block admission [3-7](#)
block video stream [3-9](#)

C

cascaded conferences [3-15](#)
 create [3-15](#)
 invite participants [3-16](#)
 view participants [3-16](#)
Change Name dialog box [3-10](#)
Conference Control interface [2-1, 2-6](#)
 accessing [3-2](#)
 Advanced Invitation tab [3-14](#)
 creating conferences [3-4](#)
 Moderator-level options [3-3](#)
 online help [3-3](#)
 refresh [3-2](#)
 screen elements [2-7](#)
 terminate conference [3-18](#)
 working with [3-1](#)

conference description [2-3](#)
conference ID number [1-2, 2-3](#)
conference layouts See layouts
Conference List window [2-3](#)
conference procedures
 access Conference Control interface [2-1, 3-2](#)
 becoming a Moderator [3-3](#)
 block admission [3-7](#)
 block video stream [3-9](#)
 change conference layouts [3-17](#)
 change participant name [3-10](#)
 change participant view [3-8](#)
 change volume [3-8](#)
 configure outgoing bandwidth rate [3-12](#)
 create a sub-conference [3-9](#)
 create cascaded conference [3-15](#)
 create conferences from Conference Control interface [3-4](#)
 create conferences from Create Conference window [2-4](#)
 dial from [1-4](#)
 disable auto-switch [3-18](#)
 disable dynamic layouts [3-17](#)
 disconnect inactive conference [2-5](#)
 display name in video layout frame [3-18](#)
 enable auto-switch [3-18](#)
 enable dynamic layouts [3-17](#)
 exit Create Conference window [2-6](#)
 invite from SIP endpoint [1-4](#)
 invite multiple H.323 endpoints [1-2](#)
 invite operator to join [3-4](#)
 invite participants to a cascaded conference [3-16](#)
 invite using advanced settings [3-14](#)
 invite using quick invite [3-13](#)

- join ad hoc conference with H.323 endpoint [1-2](#)
- join ad hoc conference with SIP [1-3](#)
- join conference with any IP endpoint [1-5](#)
- join T.120 data conference [3-4](#)
- mute audio connection [3-6](#)
- reconnect participant [3-7](#)
- remove participant from conference [3-7](#)
- sign out from a conference [3-19](#)
- start ad hoc conference with H.323 endpoint [1-2](#)
- start ad hoc conference with SIP [1-3](#)
- start conference with any IP endpoint [1-5](#)
- stop moderation [3-3](#)
- terminate conference [3-18](#)
- unmute [3-6](#)
- view a cascaded conference [3-16](#)
- view participant information [3-13](#)
- view statistics [3-13](#)

conference statistics [3-13](#)

Conference View section [3-16](#)

Create Conference window [2-6](#)

- create conference [2-4](#)
- screen elements [2-4](#)
- terminate conference [2-5](#)

creating conferences

- from the Conference Control interface [3-4](#)
- from the Create Conference window [2-4](#)

D

data collaboration

- set up a T.120 conference [3-4](#)

deleting participants [3-7](#)

dialing conventions

- H.323 endpoints [1-2](#)
- IP-based endpoints [1-5](#)
- SIP endpoints [1-3](#)

dial-in See ad hoc conference call

disconnect inactive conference [2-5](#)

DTMF

- conference control [1-5](#)
- control signals [1-5](#)
- dynamic layouts [3-17](#)

E

Edit View dialog box [3-15](#)

encryption [2-3, 2-9](#)

H

H.323 endpoints

- dialing conventions [1-2](#)
- inviting [1-2](#)
- joining ad hoc [1-2](#)
- starting ad hoc [1-2](#)

I

invite

- cascaded conferences [3-16](#)
- from SIP endpoint [1-4](#)
- multiple participants with single dial string [1-2, 1-4](#)
- operator to join a conference [3-4](#)
- using advanced settings [3-14](#)
- using quick invite [3-13](#)

invite sign [1-2](#)

IP-based endpoints

- dialing conventions [1-5](#)

L

layouts

- changing [3-17](#)
- display name in video layout frame [3-18](#)

M

- media types [2-3](#)
- Moderator
 - becoming a Moderator [3-3](#)
 - stopping moderation [3-3](#)
- mute [3-6](#)

O

- online help
 - Conference Control interface [3-3](#)
 - Create Conference window [2-2](#)

P

- participant
 - audio in [3-5](#)
 - audio out [3-5](#)
 - change participant view [3-5](#)
 - current number of [2-3](#)
 - data sharing [3-5](#)
 - name [3-5, 3-10](#)
 - number [3-5](#)
 - status [3-5](#)
 - video display [3-5](#)
 - video image [3-5](#)
 - view [3-8](#)
- participant call information [3-11](#)
- Participant List tab [2-10, 3-5, 3-15](#)

Q

- QualiVision [2-10](#)
- quick invite [3-13](#)

R

- reconnect participants [3-7](#)
- remove participants [3-7](#)

S

- Select sub-conference dialog box [2-10, 3-9](#)
- service prefix number [1-2](#)
- sign out [2-6, 3-19](#)
- SIP endpoints
 - dialing conventions [1-3](#)
 - dialing from [1-4](#)
 - inviting [1-4](#)
 - joining ad hoc [1-3](#)
 - starting ad hoc [1-3](#)
- Statistics tab [2-10](#)
- sub-conference [3-9](#)
 - create [3-9](#)

T

- T.120
 - set up a data collaboration conference [3-4](#)
- terminate
 - conference [3-18](#)
 - inactive conference [2-5](#)

U

- unattended multi-point conferences [1-1](#)
- unmute [3-6](#)
- user types
 - administrators [2-2](#)
 - conference participants [2-3](#)
 - Moderators [2-3](#)
 - operators [2-2](#)

V

Video Quality Classification dialog box [3-10](#)

viewing

- conference statistics [3-13](#)

- online help [2-2, 3-3](#)

- participant names [3-18](#)

- participants in cascaded conference [3-16](#)

volume [3-8](#)