



## CHAPTER 22

# Managing a Gateway in Network Manager

---

- [How to Manage Services, page 22-1](#)
- [Configuring Gateway Addressing, page 22-2](#)

## How to Manage Services

- [Viewing Gateway Supported Services, page 22-1](#)
- [Creating or Modifying a Service, page 22-1](#)
- [Removing a Service, page 22-2](#)

## Viewing Gateway Supported Services

### Procedure

---

- Step 1** Click **Network Tree** in the sidebar menu.
  - Step 2** Select the gateway you require in the tree.
  - Step 3** Click **Services**.
- 

## Creating or Modifying a Service

### Procedure

---

- Step 1** Click **Network Tree** in the sidebar menu.
- Step 2** Select the gateway you require in the tree.
- Step 3** Click **Services**.
- Step 4** Do one of the following to modify an existing service:
  - Double-click the service you require.
  - Select the service you require and click **Edit**.

- Right-click the service you require and select **Edit**.
- Step 5** Do one of the following to create a new service:
- Click **Add**.
  - Right-click any existing service and select **Add**.
- Step 6** Enter the service prefix description.
- Step 7** Select the call type and bit rate.
- Step 8** Click **OK**.
- 

## Removing a Service

### Procedure

---

- Step 1** Click **Network Tree** in the sidebar menu.
- Step 2** Select the gateway you require in the tree.
- Step 3** Click **Services**.
- Step 4** Do one of the following:
- Select the service you require and click **Delete**.
  - Right-click the service you require and select **Delete**.
- Step 5** Click **OK** to save your changes.
- The service is removed from the database.
- 

## Configuring Gateway Addressing

### Procedure

---

- Step 1** Click **Network Tree** in the sidebar menu.
- Step 2** Select the gateway you require in the tree.
- Step 3** Click **Configure**.
- Step 4** Enter the IP address of the gatekeeper with which the gateway registers.
- Step 5** (Optional) Enter a string identifying the physical location of the gateway.
-