



CHAPTER 1

SOAP Architecture and Application Programming Interface

Revised: August 21, 2008, OL-15336-02

The *Cisco BTS 10200 Softswitch Release 6.0 SOAP Adapter Interface Specification Programmer Guide, Release 6.0.x* describes the Simple Object Access Protocol (SOAP) adapter. The SOAP adapter provides a machine-to-machine interface (MMI) over SOAP.

The goal of the SOAP interface is to provide a provisioning method for the Cisco BTS 10200 Softswitch product that parallels the Command Line Interface (CLI) adapter in capabilities. SOAP provides an abstraction of the BTS 10200 in a consistent, object-oriented model. Discussion of the actual object model for this interface is not within the scope of this document.

The Cisco BTS 10200 Softswitch Command Line Interface Database is the definitive source for token descriptions (parameters) and their values, as used in the SOAP interface.

Overview

This chapter describes the Simple Object Access Protocol (SOAP) adapter architecture and application programming interface (API) for the BTS 10200. This chapter includes the following sections:

- [SOAP Adapter Architecture, page 1-2](#)
- [Application Interface, page 1-2](#)
- [XML Interface, page 1-2](#)
- [Batch Data Retrieval \(Paging\), page 1-2](#)
- [Connections and Transactions, page 1-2](#)
- [SOAP Interface Specifications, page 1-3](#)
- [Cisco BTS 10200 Softswitch API, page 1-9](#)
- [Understanding the SOAP Session Manageability Feature, page 1-13](#)

SOAP Adapter Architecture

The SOAP adapter interface leverages the adapter architecture of the Element Management System (EMS) component in the BTS 10200. This architecture allows for a variety of adapters to provide operations, administration, management, and provisioning (OAM&P) by adapting the external interface to a common infrastructure in the EMS.

Application Interface

The SOAP adapter uses the Tomcat AXIS version 1.4 package to develop and deploy the SOAP application. AXIS 1.4 is a third-party freeware provided as part of the BTS 10200 Tomcat package.

XML Interface

The XML interface is abstracted by SOAP itself. The Tomcat package uses either the Transmission Control Protocol (TCP) or the User Datagram Protocol (UDP) for connections. Narrowing on the NameService will also produce the BTS10200 objects. Narrowing is covered in great detail in the coding examples in the BTS 10200 SDK package. This is bundled with the BTS 10200 application.

To create separate application-level connections or objects requires some object pooling and numerous logins to obtain valid login keys for every instance of the BTS10200 object. Examples are available in the bundled SDK package.

Batch Data Retrieval (Paging)

Batch data retrieval (paging) is available using the CLI **show** command. Paging is required to view large data sets, and the initial setup of paging impacts BTS 10200 performance. Paged data is cached for quick retrieval upon subsequent requests. Paged data must be contiguous for optimal system performance. For more information, see the *Cisco BTS 10200 Softswitch Operations and Maintenance Guide*, the *Cisco BTS 10200 Softswitch Troubleshooting Guide*, and the Cisco BTS 10200 Softswitch Command Line Interface Database.

Connections and Transactions

SOAP supports up to 100 simultaneous sessions. A session is any valid login to the SOAP interface. A transaction is any specific request; for example, **show** or **change**.

Each login session allocates its own set of resources, much like an individual CLI session. If a command is not executed within 30 minutes, the session is identified as idle. An idle session is removed from the interface, and all resources are closed.

**Note**

Idle time is configured through the `bts.properties` file of the Tomcat application jar file. The `bts.properties` file is located on the BTS 10200 in the `/opt/BTSsoap/etc` directory.

**Note**

Modification of the `bts.properties` file should not be attempted without Cisco TAC support or supervision.

SOAP Interface Specifications

The SOAP interface adapter conforms to SOAP 1.2 specifications.

Compiler Tools

The SOAP adapter utilizes the J2SE Development Kit (JDK)–1.6.0. The BTS 10200 uses JDK 1.6.0 for compilation and the JDK 1.5.0 or JDK 6 for the Java Runtime Environment (JRE).

Client-side applications might require the following tools:

- Xerces parsers
- ECS Report Builder

WSDL Stub Generation

The SOAP adapter uses the Apache AXIS toolkit to generate skeletons and stubs. The skeletons and stubs abstract the SOAP interface from the BTS 10200 middleware.

The following example of SOAP script code uses the Java package tree as developed in the BTS 10200 product. Such code can vary. Other clients can specify a different package tree to contain the Web Services Description Language (WSDL) interface objects. See the SDK for a detailed breakdown of this script.

```
#!/bin/sh
#####
# Copyright (c) 2002, 2006 by Cisco Systems, Inc.
#
#
#####
set -e
set -a
#set -x

#
# List required jar files
#
AXISLIB=/opt/Tomcat/webapps/axis/WEB-INF/lib
CLASSPATH=$AXISLIB/axis.jar:$AXISLIB/commons-logging-1.0.4.jar:$AXISLIB/jaxrpc:$AXISLIB/commons-discovery-0.2.jar:$AXISLIB/saaj:$AXISLIB/wsdl4j-1.5.1.jar

export CLASSPATH

java -classpath $CLASSPATH org.apache.axis.wsdl.WSDL2Java -o . -p
com.sswitch.oam.soap.client bts10200.wsdl
```

Java files are generated in a local directory tree specified in the package directory. This package path is required in the bind logic to find the object interface implementation.

```
#!/bin/sh
#####
# Copyright (c) 2002, 2006 by Cisco Systems, Inc.
#
#
#####
set -e
set -a
#set -x

#
# List required jar files
#
AXISLIB=/opt/Tomcat/webapps/axis/WEB-INF/lib
```

```
CLASSPATH=$AXISLIB/axis.jar:$AXISLIB/commons-logging-1.0.4.jar:$AXISLIB/jaxrpc:$AXISLIB/commons-discovery-0.2.jar:$AXISLIB/saaj:$AXISLIB/wsd14j-1.5.1.jar
```

```
export CLASSPATH
```

```
javac -classpath $CLASSPATH -d ./ com/sswitch/oam/soap/client/*.java
```

The preceding example suggests compiling a package of Java files to generate the required class files. These class files must exist in the client classpath.

**Note**

The preceding example shows a common method for building all java files in a single directory with a single command. This is one of the fastest ways to compile bulk java code.

The BTS 10200 offers a Software Developer's Kit (SDK) with a complete range of examples that utilize the SOAP interface. These include many topics such as

- CLI
- Proxy example
- Batch file processing

The following example illustrates the basic extraction of the BTS 10200 objects:

```
package com.sswitch.oam.ccc;

import com.sswitch.oam.soap.client.*;
import java.net.*;

/**
 * Copyright (c) 2002-2004, 2006 by Cisco Systems, Inc.
 */
public class SoapProvAdapter implements XMLAdapter {

    private String key="";

    private String url=null;

    private Bts10200Operations port=null;

    private String host="";

    public SoapProvAdapter(String args[]) {

        //
        // General SSL properties
        //
        java.util.Properties props = System.getProperties();
        props.put( "javax.net.ssl.keyStore", "bts10200_ks" );
        props.put( "javax.net.ssl.keyStorePassword", "Chillan" );
        props.put( "javax.net.ssl.trustStore", "bts10200_ts" );
        props.put( "javax.net.ssl.trustStorePassword", "Chillan" );

        // Plug our context finder class into the SSL extension
        for(int i=0; i<args.length; i++) {

            if (args[i].equals("-b")) {

                host=args[i+1];

                break;

            }

        }

    }

}
```

```

    }
}

/**
 * Connect to target server specified by destAddr, using default user and password
 * @param destAddr Hostname, ip address or URL of the destination
 */
public void connect() throws XMLAdapterException {

    connect("btsadmin","btsadmin");

}

/**
 * Connect to target server specified by destAddr, with provided user and password
 * @param destAddr Hostname, ip address or URL of the destination
 */
public void connect(String user, String pass) throws XMLAdapterException {

    try {

        disconnect();

    } catch(Exception e) {}

    try {

        if (host.equals("")) {

            throw new XMLAdapterException(100, "not a valid host
name");

        }

        url="https://" + host + "/axis/services/bts10200";

        port=new Bts10200OperationsServiceLocator().getbts10200(new
URL(url));

        key=port.login(user,pass);

    } catch(BtsSoapException e) {

        throw new XMLAdapterException(100, e.getError_string());

    } catch(Exception e) {

        throw new XMLAdapterException(100, e.toString());

    }

}

/**
 * Make a request to execute a normal CLI command
 * @param request The XML request document
 * @param String The XML formatted answer
 */
public synchronized String request(String request) throws XMLAdapterException {

    try {

        testConnected();


```

```

        return port.request(request, key);
    } catch (XMLAdapterException e) {
        throw e;
    } catch (BtsSoapException e) {
        throw new XMLAdapterException(100, e.getError_string());
    } catch (Exception e) {
        throw new XMLAdapterException(100, e.toString());
    }
}

/**
 * Make a getCommandDoc request to
 * @param request The XML request document
 * @param String The XML formatted answer
 */
public synchronized String getCommandDoc(String verb, String noun) throws
XMLAdapterException {
    try {
        testConnected();
        return port.getCommandDoc(verb, noun, key);
    } catch (XMLAdapterException e) {
        throw e;
    } catch (BtsSoapException e) {
        throw new XMLAdapterException(e.getError_code(),
e.getError_string());
    } catch (Exception e) {
        throw new XMLAdapterException(1, e.toString());
    }
}

public synchronized String getExtCommandDoc(String verb, String noun) throws
XMLAdapterException {
    try {
        testConnected();
        return port.getExtCommandDoc(verb, noun, key);
    } catch (XMLAdapterException e) {
        throw e;
    }
}

```

```

        } catch(BtsSoapException e) {
            throw new XMLAdapterException(e.getError_code(),
e.getError_string());
        } catch(Exception e) {
            throw new XMLAdapterException(1, e.toString());
        }
    }

    public synchronized String executeMacro(String command) throws XMLAdapterException {

        throw new XMLAdapterException(1, "not implemented yet!");
    }

    public void disconnect() throws XMLAdapterException {
        try {
            if (port != null && key!=null) {
                port.logout(key);
            }
        } catch(BtsSoapException e) {
            throw new XMLAdapterException(e.getError_code(),
e.getError_string());
        } catch(Exception e) {
            throw new XMLAdapterException(1, e.toString());
        } finally {
            port=null;
            key=null;
        }
    }

    private void testConnected() throws XMLAdapterException {

        if (port==null || key==null) {
            throw new XMLAdapterException(1, "Adapter is not connected to
target box !");
        }
    }
}

```

WSDL Overview

The Web Services Description Language (WSDL) is used to describe services for the interface in the SOAP adapter. This section provides an overview of the WSDL for the Cisco BTS 10200 Softswitch. These WSDL operations define access to the XML descriptions and documents used to provision the Cisco BTS 10200 Softswitch. The XML document is described in a [Chapter 2, “Extensible Markup Language Processing.”](#) For the most part, SOAP acts as the transport for these documents.

BTS 10200 Softswitch WSDL

The `bts10200.wsdl` file contains the general system-wide data structures and type definitions. It also contains the error interfaces (exceptions). See the [“Cisco BTS 10200 Softswitch WSDL Code”](#) section on [page 2-6](#) for the full text of the `bts10200.wsdl` file. This file contains all objects that are defined for use in the BTS 10200. The breakdown of each object is listed below.

- **Bts10200_Security**—The primary security object. It is used to create login keys for use in another object. This security object is required to enable access the BTS 10200.
- **Bts10200**—The basic object used to retrieve XML description documents as well as provisioning and control documents.
- **BtsSoapException**—The object used to report all errors in the Cisco BTS 10200 Softswitch SOAP interface.
- **Mgp**—The object used to communicate with media gateways. It uses simple strings to contain MGW-compatible text commands.

Cisco BTS 10200 Softswitch API

This section covers the actual API calls to the SOAP interface. The assumption is that the client application is developed in the Java language. This does not prohibit the use of C++. However, that is not within the scope of this document.

All parameters that are listed are required for each invocation of methods in the associated object.

Cisco BTS 10200 Softswitch Security

The BTS 10200 security object (`Bts10200_Security`) provides a user several levels of security for the SOAP interface. It allows authorized users to obtain a security key and use this key for all future transactions. This object must be used prior to all other SOAP method invocations in the interface. This key is valid in the SOAP interface for the life of the user's session. The key is no longer valid once the logout method has been invoked. Likewise, the security key expires after 10 minutes if the system has not been accessed during that period of time, and the user is automatically logged out of the SOAP interface. The user name and password values are the same as those allowed in the CLI /MAC adapter interfaces. The same authorization permissions apply.

Both the login and logout methods described in this section are part of the `Bts10200_Security` interface. The parameters listed are required for each method and must contain data.

Login

The login method provides authentication of a SOAP interface user. It utilizes the same user security as the FTP or CLI adapters. This method returns a string value defined as a key. This key is required for all transactions against the SOAP interface. It is an authentication key to indicate the specific authorization of a particular user. The method signature is defined using the following code:

```
<wsdl:operation name="login">
    <wsdl:input message="impl:loginRequest" name="loginRequest"/>
    <wsdl:output message="impl:loginResponse" name="loginResponse"/>
    <wsdl:fault message="impl:BtsSoapException" name="BtsSoapException"/>
</wsdl:operation>
```

- **Return value**—Status indicating success or failure of the operation. A failure indication means the facility is unavailable. A successful return means the operation was completed.
- **Exception**—A BtsSoapException means there is an operational error in processing the request. This includes faults with the parameter types, ranges, and database access.

Login sessions expire in 10 minutes with no activity. This means that a command must traverse each session once every 10 minutes to keep a session alive. This is important for any client application that deploys the use of connection pools.

Logout

Logging out terminates a login session. This destroys the validity of the authentication key. Once this method is complete, the key can no longer be used for other method invocations. The method signature is defined in the following code:

```
<wsdl:operation name="logout">
    <wsdl:input message="impl:logoutRequest" name="logoutRequest"/>
    <wsdl:output message="impl:logoutResponse" name="logoutResponse"/>
    <wsdl:fault message="impl:BtsSoapException" name="BtsSoapException"/>
</wsdl:operation>
```

Attempts to login can receive two types of status indicators.

- **Return value**—Status indicating success or failure of the operation. A failure indication means the facility is unavailable. A successful return indicates the operation was completed.
- **Exception**—A BtsSoapException means there is an operational error in processing the request. This includes faults within the parameter types, ranges, and in database access.

BTS 10200 Provisioning API

The BTS 10200 object (Bts10200) provides provisioning interface functions to the BTS 10200 CLI engine for authorized users. See [Chapter 2, “Extensible Markup Language Processing”](#) for a description of XML input and output. The CLI commands are parsed into an XML document before the document is sent through the SOAP interface. The SOAP adapter web service then executes the CLI provisioning commands and sends back the reply in an XML document. Each method (description of command retrieval) in this section is part of the Bts10200 interface. The parameters listed are required for each method and must contain data.

getCommandDoc

The getCommandDoc method provides command description retrieval. This method obtains the XML document describing the command syntax and options for a specific noun-verb combination. The method is defined using the following code:

```
<wsdl:operation name="getCommandDoc">
  <wsdl:input message="impl:getCommandDocRequest" name="getCommandDocRequest" />
  <wsdl:output message="impl:getCommandDocResponse" name="getCommandDocResponse" />
  <wsdl:fault message="impl:BtsSoapException" name="BtsSoapException" />
</wsdl:operation>
```

getExtCommandDoc

The getExtCommandDoc method provides command description retrieval. This method obtains the XML document describing the command syntax and options for a specific noun-verb combination. The method is defined using the following code:

```
<wsdl:operation name="getExtCommandDoc">
  <wsdl:input message="impl:getExtCommandDocRequest"
name="getExtCommandDocRequest" />
  <wsdl:output message="impl:getExtCommandDocResponse"
name="getExtCommandDocResponse" />
  <wsdl:fault message="impl:BtsSoapException" name="BtsSoapException" />
</wsdl:operation>
```

request

The request method processes an XML document-based provisioning request through SOAP interface. The SOAP web service executes the provisioning commands and sends back the reply in an XML document. The method signature is defined using the following code:

```
<wsdl:operation name="request">
    <wsdl:input message="impl:requestRequest" name="requestRequest"/>
    <wsdl:output message="impl:requestResponse" name="requestResponse"/>
    <wsdl:fault message="impl:BtsSoapException" name="BtsSoapException"/>
</wsdl:operation>
```

BtsSoapException

The following basic BtsSoapExceptions can be returned. The numbers given in the sample code refer to the text in the explanation. The text is returned if the sample code is used.

```
public static final int CLIENT_LOGIN_FAIL = 401;
public static final int CLIENT_LOGOUT_FAIL = 402;
public static final int CLIENT_ACCESS_DENIED = 404;
public static final int CLIENT_SESSION_INVALID = 406;
public static final int CLIENT_SESSION_IN_USE = 407;

public static final int CLIENT_BAD_REQUEST = 410;
public static final int CLIENT_INVALID_VALUE = 411;
public static final int CLIENT_SIDE_UNKNOWN = 499;

/** server side exception block */
public static final int ADAPTER_BLOCKED = 501;
public static final int ADAPTER_INITING = 502;
public static final int ADAPTER_STOPED = 503;
public static final int ADAPTER_FAULT = 504;
public static final int ADAPTER_UNKNOWN = 505;

public static final int BTS_STANDBY = 511;
public static final int BTS_FAULT = 512;
public static final int BTS_UNKNOWN = 513;

public static final int SESSION_OVERLOAD = 520;
public static final int RESOURCE_ALO_FAIL = 530;
public static final int CMD_NOT_SUPPORT = 540;

public static final int SERVER_SIDE_UNKNOWN = 599;
```

Understanding the SOAP Session Manageability Feature

The SOAP Session Manageability (SSM) feature enhances the manageability of user sessions. It impacts four areas:

1. SOAP Software Developer's Kit (SDK)
2. SOAP Interface Servant
3. Session and System Manager (SMG for EMS)
4. User Security Manager (USM for EMS)

SOAP session policy is a timer-controlled process for removing the policy-violated sessions.

Software Developer's Kit

There are two login APIs in the SDK client code. The first API is `loginWithStatus` that returns password aging status. The other API is `loginResetPassword` that resets a new password when an old password should be changed.

The SOAP SDK has the following components:

- `ResetPassword.java`—A driver program to utilize the login, reset password, and logout functions
- `SoapProvAdapter.java`—Adds access to the password reset API for SOAP, and provides external indications and API for driver logic

SOAP Interface Servant

Session Manageability affects the SOAP Interface Servant application. The objects `UserSessionManager` and `UserAuth` control security for users of the SOAP Interface Servant. These objects provide the means for password validation and for tracking user attributes such as idle login and security keys.

The user security information must have its data externalized by the use of an API. This API provides queries that enable you to take snapshots of the present condition of sessions. You obtain this information from database statistics tables in the MySQL database.

Additional message handler functions enable you to obtain reports that contain session information. Certain of these added functions provide commands that can terminate sessions. The SOAP Interface Servant uses the user security API.

The Session Control Policy is processed in a minute-based looping operation, which screens and removes sessions that match a record in the policy. A new CLI command supplies policy management.

The `bts.properties` file contains the Maximum User Limit (item name: `max.users`) and Idle Timeout (item name: `idle.timeout`), which can be modified manually. The SOAP adapter relies on these numbers to decide if: (1) the maximum user limit is reached, or (2) the user session must be timed out because it is idle. The SOAP adapter dynamically reads the file upon user login and during session audit. If the maximum number of users is set to a value higher than 100, the hard limit of 100 maximum users applies.

**Note**

You should not attempt to modify the `bts.properties` file without Cisco TAC support or supervision.

Session and System Manager

In managing SOAP sessions for the BTS 10200 system, the SOAP Manageability feature provides the following capabilities:

- **User Session Display**—Display current secure and nonsecure SOAP sessions using the new **show client-session** and **report client-session** commands. The returned data also includes any current CLI sessions.
- **Manual Session Removal**—You can remove a SOAP session or a CLI session by issuing the **stop client-session** command. The present **stop session** command is for CLI users only. Additional information returned by the **stop client-session** command pertains to individual sessions.
- **Policy-driven Smart Session Management**—Administrators can enable the smart removal of idle sessions, which allows new sessions to log in. Administrators have access to manage sessions at all times. Session management does not affect idle time. The maximum duration of a session is set whether a session is idle or not. Default idle time is 10 minutes.
- **Password Aging Notification**—When a user enables the loginWithStatus API, that API notifies the user when his password is aging.
- **SOAP Password Reset**—Users can login and reset an aging password using the loginResetPassword API. If a password expires, access is denied until the password is reset.
- **Disable Password Aging**—Enables setting passwords never to expire when adding a new user or using the **change user** command. One sets a password so that it never expires by setting the status token to PERSIST.
- **Alarms and Events for Critical Session Handling**—New warnings, major alarms, and events are issued when the session thresholds are reached. An alarm is issued when the maximum number of login sessions is reached. An event is issued when a user session is terminated because of a policy violation. The BTS 10200 manages the issuance of the alarms and events through the Policy table.

User Security Manager

The User Security Manager (USM) has a new attribute, PERSIST. The PERSIST attribute disables the password aging function. You can set the USM to one of the following attributes:

- **DISABLED**—The user is locked out and the user cannot access the system.
- **ENABLED**—The user is active and current for all attributes including password aging.
- **PERSIST**—The user has no password aging.