



Preface

Revised: July 31, 2008, OL-15911-03

This document provides an overview of the components, functions and signaling protocols supported by the Cisco BTS 10200 Softswitch.

Organization

This System Description contains the following chapters:

- [Chapter 1, “Cisco BTS 10200 Softswitch Technical Overview”](#)
- [Chapter 2, “Supported Signaling Protocols”](#)

This document also includes the Glossary and Index.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

Document Change History

The following table lists the revision history for the *Cisco BTS 10200 Softswitch System Description, Release 6.0.x*.

Version Number	Issue Date	Status	Reason for Change
OL-15911-01	31 Mar 2008	Initial	Initial document for Release 6.0.x
OL-15911-02	29 Apr 2008	Updated	Editorial changes were incorporated to improve readability.
OL-15911-03	31 Jul 2008	Updated	Turkish ISUP variant was added in the “Support for ISUP Variants” section on page 2-5.