



A

- activating Windows Server 2003 (selected servers) [4-4](#)
- antivirus software
 - excluding selected directories from scanning [5-6](#)
 - installing and configuring [4-2](#)

C

- Cisco PCA, securing access to Cisco Unity Connection [7-1](#)
- Cisco Personal Communications Assistant. *See* Cisco PCA
- Cisco Security Agent for Cisco Unity
 - downloading Server Updates wizard for latest version of [2-2](#)
 - installing [4-2](#)
- Cisco Unity Connection server
 - connecting to network [4-3](#)
 - setting up [3-4](#)
- Cisco Unity Connection Server Updates wizard. *See* Server Updates wizard
- Cisco Unity Connection software
 - configuring [5-1](#)
 - downloading [2-3](#)
 - downloading service release [2-3](#)
 - installing [4-5](#)
 - installing, unattended [A-1](#)
 - installing service release [5-5](#)
- configuring
 - access to Exchange calendars and contacts for personal call transfer rules [9-1](#)
 - access to Exchange e-mails through TTS [8-1](#)
 - antivirus software [4-2](#)
 - Cisco Unity Connection software [5-1](#)

- configuring (continued)
 - dual NIC [3-9](#)
 - Internet Explorer to access the Internet through a proxy server [3-8](#)
 - IP address [4-3](#)
 - Remote Desktop [3-12](#)
 - TCP/IP properties [4-3](#)
 - voice-recognition software [5-3](#)
 - Windows Server 2003 (selected servers) [3-6](#)
 - Windows Server 2003 menu options [3-8](#)
- conventions, documentation [vii](#)
- converting demonstration system to standard system [B-4](#)

D

- demonstration system
 - converting to standard system [B-4](#)
 - installing with default license file [B-2](#)
 - installing with time-limited license file [B-3](#)
 - limits on [B-2](#)
 - overview [B-1](#)
- documentation
 - conventions [vii](#)
 - required for installation [2-1](#)
- downloading
 - Cisco Unity Connection languages [2-3](#)
 - Cisco Unity Connection service release [2-3](#)
 - Cisco Unity Connection software [2-3](#)
 - recommended Microsoft service packs [2-4](#)
 - Server Updates wizard [2-2](#)
 - software for the installation [2-2](#)

E

enabling Remote Desktop [3-12](#)

Exchange

configuring access to calendars and contacts for personal call transfer rules [9-1](#)

configuring access to e-mails through TTS [8-1](#)

excluding selected directories from virus scanning [5-6](#)

I

IMAP e-mail clients, securing access to Cisco Unity Connection [7-1](#)

installation

documentation required for [2-1](#)

downloading software for [2-2](#)

overview of mandatory tasks for [1-1](#)

installing

antivirus software [4-2](#)

Cisco Security Agent for Cisco Unity [4-2](#)

Cisco Unity Connection languages [4-6](#)

Cisco Unity Connection service release [5-5](#)

Cisco Unity Connection software [4-5](#)

Cisco Unity Connection software, unattended [A-1](#)

demonstration system with default license file [B-2](#)

demonstration system with time-limited license file [B-3](#)

license files [5-1](#)

memory upgrade (selected servers) [3-1](#)

Microsoft updates [4-2](#)

Microsoft updates, unattended [A-1](#)

monitoring software [6-1](#)

optional [6-1](#)

recommended Microsoft service packs [4-1](#)

voice-recognition software [4-5](#)

Windows Server 2003 by using the Cisco Platform Configuration disc (selected servers) [3-4](#)

integration. *See* phone system

Internet Explorer, configuring to access the Internet through a proxy server [3-8](#)

IP address

configuring [4-3](#)

verifying [4-4](#)

L

languages

downloading Cisco Unity Connection [2-3](#)

installing Cisco Unity Connection [4-6](#)

license files

demonstration [B-1](#)

installing [5-1](#)

installing demonstration system with default [B-2](#)

installing demonstration system with time-limited [B-3](#)

obtaining [3-10](#)

limits on demonstration system [B-2](#)

M

memory, installing upgrade (selected servers) [3-1](#)

Microsoft updates

downloading Server Updates wizard for latest version of [2-2](#)

installing [4-2](#)

installing, unattended [A-1](#)

monitoring software, installing [6-1](#)

N

network

connecting Cisco Unity Connection server to [4-3](#)

connecting voice-recognition server to [4-3](#)

verifying connection [4-4](#)

NIC, configuring a dual [3-9](#)

O

obtaining license files [3-10](#)

optional software, installing [6-1](#)

P

- passwords, specifying [5-1](#)
- personal call transfer rules, configuring access to Exchange data for [9-1](#)
- phone system
 - configuring Cisco Unity Connection for [5-1](#)
 - testing the integration [5-6](#)
- proxy server, configuring Internet Explorer to access the Internet through [3-8](#)

R

- Remote Desktop, enabling [3-12](#)

S

- securing Cisco PCA and IMAP client access to Cisco Unity Connection [7-1](#)
- server. *See* Cisco Unity Connection server *or* voice-recognition server
- Server Updates wizard
 - downloading [2-2](#)
 - installing Microsoft updates [4-2](#)
 - running, unattended [A-1](#)
- service packs
 - downloading recommended Microsoft [2-4](#)
 - installing recommended Microsoft [4-1](#)
- service release
 - downloading Cisco Unity Connection [2-3](#)
 - installing Cisco Unity Connection [5-5](#)
- setting up
 - Cisco Unity Connection server [3-4](#)
 - voice-recognition server [3-4](#)
- software, downloading for the installation [2-2](#)
- SSL certificate, using to secure Cisco PCA and IMAP client access to Cisco Unity Connection [7-1](#)

T

- TCP/IP properties
 - configuring [4-3](#)
 - verifying [4-4](#)
- TTS, configuring access to Exchange e-mails through [8-1](#)

U

- unattended installation [A-1](#)

V

- verifying IP address and network connection [4-4](#)
- virus-scanning software, installing and configuring [4-2](#)
- voice-recognition server
 - connecting to network [4-3](#)
 - setting up [3-4](#)
- voice-recognition software
 - configuring [5-3](#)
 - installing [4-5](#)

W

- Windows Server 2003
 - activating (selected servers) [4-4](#)
 - changing menu options [3-8](#)
 - completing configuration (selected servers) [3-6](#)
 - installing by using the Cisco Platform Configuration disc (selected servers) [3-4](#)

