



A

accessing

TFTP server **6-3**

adding

button templates **40-6**

Cisco IP Phones **39-3**

Cisco uOne ports **37-2**

directory number **39-14**

adding gateways **38-7**

digital **38-9**

H.323 **38-22**

MGCP **38-21**

Admission control **4-1, 16-1**

Alarm conditions **32-2**

analog gateways **38-3**

Audio quality **4-1**

Auto-registration **3-1**

B

Bandwidth

Allocation of **4-1**

Calculations for admission control **16-4**

Usage per call **13-1**

button templates

12-Series, default template **40-6**

30 SP+, default template **40-2**

30 VIP, default template **40-4**

7960, default template **40-2**

adding **40-6**

deleting **40-13**

renaming **40-12**

understanding **40-1**

updating **40-14**

C

Call admission control **4-1**

Calling Search Space **19-1**

Adding **19-1**

Copying **19-3**

Deleting **19-4**

Updating **19-3**

Call Park

Adding a number **35-2**

Deleting a number **35-3**

Described **35-1**

Updating a number **35-3**

- Call Pickup
 - Adding a group number **36-2**
 - Assigning directory numbers to a group **36-4**
 - Configuring **36-2**
 - Deleting a group number **36-4**
 - Described **36-1**
 - Updating a group number **36-3**
 - Using **36-5**
- Call processing, distributed **1-1**
- Cisco Access gateways
 - analog **38-3**
 - digital **38-4**
- Cisco CallManager
 - Adding **9-1**
 - Configuring **9-1**
 - Deleting **9-6**
 - Groups **10-1**
 - Starting and stopping **17-1**
 - Updating **9-5**
- Cisco CallManager Group **2-2**
- Cisco Catalyst 6000 gateways **38-4**
 - DSP services card **38-5**
 - T1 line card **38-5**
- Cisco IP Phones
 - adding **39-3**
 - Cisco IP Phone 12 SP+, Description **39-2**
 - Cisco IP Phone 30 VIP, Description **39-2**
 - Cisco IP Phone 7960, Description **39-2**
 - configuring **39-3**
 - configuring phone features **39-11**
 - deleting **39-6**
 - finding **39-9**
 - resetting **39-7**
 - understanding **39-1**
 - updating **39-8**
- Cisco Messaging Interface
 - Adding Service **27-4**
 - Cisco Messaging Interface **27-1**
 - Configuring Trace Parameters **27-11**
 - Deleting Service **27-5**
 - Deleting Trace Parameters **27-14**
 - Most Commonly Changed Service Parameter Fields **27-2**
- Cisco TFTP **28-1**
 - Configuring Command Line Parameters **28-5**
 - Configuring Trace Parameters **28-8**
 - Deleting Command Line Parameters **28-7**
 - Deleting Service **28-3**
 - Inserting Service **28-2**
- Cisco uOne
 - adding ports **37-2**
 - copying ports **37-7**
 - deleting ports **37-5**
 - resetting ports **37-5**
 - understanding **37-1**
 - updating ports **37-6**
- Cisco VG200 gateway **38-6**
 - configuring FXO ports **38-35**
 - configuring FXS ports **38-33**

- Closest-match routing **5-11**
 - Clusters
 - Compared to groups **2-1**
 - Described **1-1**
 - CMLocal Date/Time Group **11-1**
 - communication protocols, gateway **38-1**
 - Compression of data **13-1**
 - Conference Bridge
 - Adding a Hardware Device **29-11**
 - Adding a Meet-Me Number Pattern **29-18**
 - Adding a Software Device **29-9**
 - Ad-Hoc **29-6**
 - Conference Bridge **29-1**
 - Deleting a Conference Device **29-14**
 - Deleting a Meet-Me Number Pattern **29-21**
 - Meet-Me **29-7**
 - Two Types of Conferences **29-5**
 - Understanding Conference Devices **29-3**
 - Updating a Conference Device **29-13**
 - Updating a Meet-Me Number Pattern **29-19**
 - Updating Conference Bridge Parameters **29-16**
 - configuring
 - Cisco IP Phones **39-3**
 - directory numbers **39-14**
 - phone features **39-11**
 - configuring gateways **38-1**
 - Control Center
 - Control Center **34-1**
 - Starting and Stopping Services **34-1**
 - copying
 - Cisco uOne ports **37-7**
 - custom button templates
 - adding **40-6**
 - guidelines for creating **40-9**
-
- D**
- Data compression **13-1**
 - Date/Time Group **11-1**
 - Default settings
 - For devices **12-1**
 - deleting
 - button templates **40-13**
 - Cisco IP Phones **39-6**
 - Cisco uOne ports **37-5**
 - directory numbers **39-18**
 - deleting gateways **38-38**
 - Device defaults **12-1**
 - device loads
 - understanding **6-5**
 - updating **6-6**
 - verifying **6-8**
 - digital gateways **38-4**
 - directory number, searching **38-43**

directory numbers

- adding **39-14**
- configuring **39-14**
- deleting **39-18**
- updating **39-19**

Discard Digits Instructions **5-12**Distributed call processing **1-1**Distributed system, configuring **1-3**Domain Name System (DNS) **8-1**

EE1 gateways **38-4**Enterprise parameters **15-1**Error messages **32-2**EventLog **32-7**External Phone Number Mask **3-3**External Route Plan Wizard **25-1**

- confirming the external route plan **25-9**
- creating an external route plan **25-2**
- deleting an external route plan **25-10**
- entering location information **25-5**
- finishing the external route plan **25-10**
- generating the external route plan **25-8**
- providing gateway information **25-7**
- providing tenant information **25-4**
- selecting gateways **25-6**
- setting the routing options **25-3**

F

finding

- Cisco IP Phones **39-9**

finding gateways **38-40**

FXO

- configuring ports on the Cisco VG200 **38-35**
- Foreign Exchange Office **38-2**

FXS

- configuring ports on the Cisco VG200 **38-33**
- Foreign Exchange Station **38-2**

GG.711 **13-1**G.723 **13-1**G.729 **13-1**gateways **38-1**

- adding **38-7**
 - analog ports **38-26**
 - digital **38-9**
 - H.323 **38-22**
- analog **38-3**
- Cisco Catalyst 6000 **38-4**
- Cisco VG200 **38-6**
- communication protocols **38-1**

- configuring
 - Cisco VG200 ports **38-33**
 - loop start ports **38-29**
 - ports **38-25**
 - deleting **38-38**
 - digital **38-4**
 - E1 **38-4**
 - finding **38-40**
 - H.323 **38-6**
 - ISDN **38-10**
 - MGCP **38-21**
 - modifying **38-38**
 - PRI **38-10**
 - resetting **38-39**
 - searching **38-42**
 - station **38-3**
 - T1 **38-4**
 - trunk **38-3**
 - updating **38-39**
 - Global Directory
 - Advanced User Search **42-3**
 - Basic User Search **42-2**
 - Global Directory **42-1**
 - Lightweight Directory Access Protocol (LDAP) **42-1**
 - ground start, configuring ports on MGCP gateway **38-35**
 - Group Call Pickup
 - Adding a group number **36-2**
 - Assigning directory numbers to a group **36-4**
 - Configuring **36-2**
 - Deleting a group number **36-4**
 - Described **36-1**
 - Updating a group number **36-3**
 - Using **36-5**
 - Groups
 - Compared to clusters **2-1**
 - Components of **2-2**
 - Configuring **10-1**
 - Date/Time **11-1**
-
- ## H
- H.225 **38-2**
 - H.323 **38-2**
 - adding gateways **38-22**
 - gateway **38-6**
 - Hub-and-spoke topology **4-1**
-
- ## I
- identifying
 - TFTP server **6-3**
 - IP address **8-1**
 - ISDN, gateway configuration **38-10**

L

LDAP parameters **15-1**

Locations

Adding **16-5**

Defined **16-1**

Deleting **16-7**

Interaction with regions **16-3**

Updating **16-7**

Used in admission control **4-1**

loop start

configuring gateway ports **38-29**

configuring on MGCP gateway **38-36**

M

Media Access Control (MAC) address **8-2**

Media Termination Point

Adding **30-6**

Call Failure/User Alert **30-4**

Call Hold **30-2**

Call Park **30-2**

Call Transfer **30-2**

CiscoIpVoiceMediaStreamingApp **30-1**

Conferencing **30-2**

Deleting **30-9**

Important Information **30-3**

IpVoiceMediaStreamer **30-1**

Media Termination Point **30-1**

Transcoders **30-1**

Updating **30-7**

MGCP

adding gateways **38-21**

configuring ground start ports **38-35**

configuring loop start ports **38-36**

Media Gateway Control Protocol **38-2**

N

Network Interface Card (NIC) **8-2**

O

Output Debug String **32-7**

P

Parameters

Enterprise **15-1**

LDAP **15-1**

Partion

adding **18-1**

Partition **18-1**

deleting **18-2**

phone features

call forward **39-12**

call park **39-13**

call pickup **39-13**

call waiting **39-12**
 configuring **39-11**
 PRI, gateway configuration **38-10**

Q

Quality of sound **4-1**

R

Redundancy

Configuring **2-5**
 Types of **2-1**
 With distributed call processing **2-3**

Regions

Configuring **13-1**
 Interaction with locations **16-3**
 Used with admission control **16-3**

renaming

button templates **40-12**

resetting

Cisco IP Phones **39-7**
 Cisco uOne ports **37-5**

Resetting Cisco CallManager **17-1**

resetting gateways **38-39**

Restarting Cisco CallManager **17-1**

Route Filters **20-1**

Adding **20-5**
 Adding Clauses **20-9**

Copying **20-8**

Deleting **20-11**

Removing Clauses **20-10**

Understanding Tags **20-2**

Updating **20-7**

Route Groups **21-1**

Adding **21-2**

Adding Devices **21-3**

Deleting **21-5**

Removing Devices **21-4**

Understanding **21-1**

Route Lists **22-1**

Adding **22-5**

Adding Route Groups **22-7**

Changeing the order of Route Groups **22-9**

Deleting **22-10**

Removing Route Groups **22-8**

Route Pattern **23-1**

Adding **23-3**

Considerations for Using **23-1**

Copying **23-6**

Deleting **23-7**

Understanding **23-1**

Updating **23-5**

Route pattern wildcards and special characters **5-7**

Route Plan Report **26-1**

Viewing All Records **26-1**

Route plans **5-1**

Understanding **5-1**

S

searching

- directory number **38-43**

- gateways **38-42**

Server configuration **8-1**

Service Parameters

- Adding **31-5**

- Adding New Service **31-2**

- Deleting **31-9**

- Deleting a Service **31-3**

- Service Parameters **31-1**

- Updating **31-6**

Skinny Station Protocol **38-1**Sound quality **4-1**station gateways **38-3**System Log **32-7****T**T1 gateways **38-4**

TFTP server

- accessing **6-3**

- identifying **6-3**

Time zones **11-1**

Trace

- Adding a configuration **32-9**

- Date and time **32-3**

- Deleting a configuration **32-11**

- Described **32-1**

- Event type **32-6**

- Levels **32-2**

- Log components **32-7**

- Options **32-2**

- Recommended settings **32-9**

- Services **32-4**

- Updating a configuration **32-11**

- User mask **32-4**

Transcoder

- Configuring **33-3**

- Copying **33-5**

- Deleting **33-6**

- MTPs **33-1**

- Updating **33-4**

Translation Patterns

- Adding **24-2**

- Copying **24-4**

- Deleting **24-5**

- Understanding **24-1**

- Updating **24-3**

trunk gateways **38-3****U**

understanding

- button templates **40-1**

- Cisco IP Phones **39-1**

- Cisco uOne **37-1**

- device loads **6-5**
- DHCP **6-2**
- TFTP **6-2**
- Understanding Called Party Transformation Settings **22-4**
- Understanding Calling Party Transformation Settings **22-1**
- Understanding Service Parameters
 - Cisco CallManager Service Parameters **7-2**
 - Cisco IP Voice Media Streaming Service Parameters **7-16**
 - Cisco Messaging Interface Service Parameters **7-14**
 - Cisco Technical Assistance (TAC) **7-1**
 - Cisco TFTP Service Parameters **7-12**
 - Database Layer Service Parameters **7-17**
 - Understanding Service Parameters **7-1**
- updating
 - button templates **40-14**
 - Cisco IP Phones **39-8**
 - Cisco uOne ports **37-6**
 - device loads **6-6**
 - directory numbers **39-19**
- updating gateways **38-39**
- User Information
 - Adding a User **41-2**
 - Associate Devices **41-2**
 - User Information **41-1**
- User mask **32-4**

V

- verifying
 - device loads **6-8**
 - voice gateways **38-1**
- Voice quality **4-1**

