



## **PART 2**

# **System Configuration**

The following chapters explain how to configure the system parameters used by Cisco CallManager:

- Chapter 8, “Server”
- Chapter 9, “Cisco CallManager”
- Chapter 10, “Cisco CallManager Group”
- Chapter 11, “Date/Time Group”
- Chapter 12, “Device Defaults”
- Chapter 13, “Region”
- Chapter 14, “Device Pool”
- Chapter 15, “Enterprise Parameters”
- Chapter 16, “Location”
- Chapter 17, “Starting and Stopping Cisco CallManager”

