



A

- admission control 5-1, 19-1
- analog gateways 45-3
- attendant console 8-1
 - administration 8-3
 - Cisco WebAttendant 8-1
 - hunt groups and pilot points 8-5
- audio quality 5-1
- auto-registration 4-1
 - disabling 4-6
 - enabling 4-2
 - reusing auto-registration numbers 4-7

B

- bandwidth 5-1, 16-1
 - allocation of 5-1
 - calculations for admission control 19-4
 - usage per call 16-1
- batch phone operations 46-1
- Bulk Administration Tool (BAT) 46-1

C

- call admission control 5-1
- calling search spaces 22-1
 - adding 22-1
 - copying 22-3
 - deleting 22-4
 - updating 22-3
- call processing, distributed 2-1
- Cisco Access gateways 45-3
 - analog 45-3
 - digital 45-4
- Cisco CallManager 11-1
 - adding 12-1
 - configuring 12-1
 - deleting 12-6
 - groups, configuring 13-1
 - server configuration 11-1
 - starting and stopping 20-1
 - updating 12-5
- Cisco CallManager Group 3-2
- Cisco Catalyst 6000 gateways 45-4
 - DSP services card 45-5
 - E1/T1 line card 45-5

- Cisco IP Phones 46-1
 - 12 SP+, description 46-4
 - 30 VIP, description 46-4
 - 7910, description 46-4
 - 7940, description 46-3
 - 7960, description 46-3
 - adding 46-7
 - auto-registration 4-1
 - batch operations 46-1
 - configuring 46-5
 - configuring phone features 46-16
 - deleting 46-11
 - device loads for 7-6
 - directory numbers 46-18
 - finding and listing 46-15
 - MAC address, displaying 46-6
 - resetting 46-12
 - templates, phone button 47-1
 - understanding 46-2
 - updating 46-13
- Cisco IP Phone Services 41-1
- Cisco Messaging Interface 30-1
 - adding service 30-5
 - commonly changed service parameter fields 30-2
 - configuring trace parameters 30-10
 - deleting service 30-6
- Cisco TAPI Service Provider A-1
 - activating A-3
 - configuring A-4
 - installation and configuration A-1
 - installing A-1
 - installing the wave driver A-10, A-12
 - setting up the client-server configuration A-16
 - uninstalling A-9
 - verifying the installation A-14
- Cisco Telephony Interface (CTI)
 - CTI ports 46-5
- Cisco Telephony Interface (CTI) route point 42-1
- Cisco uOne 43-1
 - adding ports 43-12
 - configuring CallManager for uOne 43-1
 - copying ports 43-19
 - deleting ports 43-16
 - MWI device, configuring 43-11
 - MWI On/Off numbers, setting 43-8
 - port wizard 43-3
 - resetting ports 43-17
 - understanding 43-1
 - updating ports 43-18
- Cisco uOne Port wizard 43-3
 - adding a new uOne server and ports 43-3
 - adding ports 43-6
 - deleting ports 43-7
- Cisco VG200 gateway 45-6
 - configuring FXO ports 45-38
 - configuring FXS ports 45-35

- closest-match routing 6-11
- clusters 2-1
 - compared to groups 3-1
 - described 2-1
- CMI (Cisco Messaging Interface) 30-1
- CMLocal Date/Time Group 14-1
- communication protocols, gateway 45-1
- compression of data 16-1
- configuring route groups
 - adding devices 24-3
- configuring call park 39-1
 - adding a number 39-2
 - assigning directory numbers to a group 40-5
 - configuring 40-2
 - configuring call parknumber 40-2
 - deleting a group number 40-4
 - deleting a number 39-4
 - updating a group number 40-3
 - updating a number 39-3
- configuring call pickup
 - described 40-1
- configuring Cisco TFTP 31-1
 - configuring command line parameters 31-5
 - configuring trace parameters 31-9
 - deleting service 31-4
 - inserting service 31-2
- configuring conference bridges 33-1
 - adding a hardware device 33-8
 - adding a Meet-Me number pattern 33-14
 - adding a software device 33-6
 - Ad-Hoc 33-4
 - deleting a conference device 33-11
 - deleting a Meet-Me number pattern 33-17
 - Meet-Me 33-5
 - two types of conferences 33-3
 - understanding conference devices 33-2
 - updating a conference device 33-10
 - updating a Meet-Me number pattern 33-15
 - updating conference bridge parameters 33-12
- configuring gateways 45-1
- configuring media termination point 34-1
 - adding 34-5
 - avoiding call failure/user alert 34-4
 - call hold 34-2
 - call park 34-2
 - call transfer 34-2
 - CiscoIpVoiceMediaStreamingApp 34-1
 - conferencing 34-2
 - deleting 34-8
 - IpVoiceMediaStreamer 34-1
 - planning MTP configuration 34-3
 - transcoders 34-1
 - updating 34-7
- configuring route filters 23-1
 - adding 23-5
 - adding clauses 23-9
 - copying 23-7
 - deleting 23-11

- removing clauses 23-10
- updating 23-7
- configuring route groups 24-1
 - adding 24-2
 - deleting 24-7
 - removing devices 24-5
 - understanding 24-2
 - updating 24-6
- configuring route lists 25-1
 - adding 25-6
 - adding route groups 25-8
 - changing the order of route groups 25-11
 - deleting 25-12
 - removing route groups 25-10
 - understanding called party transformation settings 25-4
 - understanding calling party transformation settings 25-2
- configuring service parameters 35-1
 - adding 35-4
 - adding new service 35-2
 - deleting 35-8
 - deleting a service 35-3
 - updating 35-6
- configuring trace 36-1
 - adding a configuration 36-9
 - alarm conditions 36-2
 - components 36-7
 - deleting a configuration 36-12
 - deleting a service 36-13
 - error messages 36-2
 - event level 36-6
 - event log 36-7
 - levels 36-2
 - options 36-2
 - output debug string 36-7
 - recommended settings 36-9
 - services 36-3
 - system log 36-7
 - time 36-3
 - updating a configuration 36-11
 - user mask 36-3
- configuring transcoder 37-1
 - configuring 37-3
 - copying 37-5
 - deleting 37-6
 - MTPs 37-1
 - updating 37-4
- configuring Cisco TFTP
 - deleting command line parameters 31-7
- Control Center 38-1
 - starting and stopping services 38-2
 - using 20-2
- CTI ports 46-5
- CTI route point 42-1
 - adding 42-2
 - deleting 42-4
 - finding and listing 42-5

- modifying 42-3
 - resetting 42-6
 - custom phone button templates
 - adding 47-5
 - guidelines for creating 47-7
-
- D**
- data compression 16-1
 - Date/Time Group 14-1
 - default settings
 - for devices 15-1
 - device defaults 15-1
 - updating 15-2
 - device loads 7-6
 - understanding 7-6
 - updating 7-7
 - verifying 7-9
 - device pool 17-1
 - adding 17-1
 - deleting 17-4
 - updating 17-3
 - devices 15-1
 - Cisco uOne ports 43-1
 - defining common characteristics 17-1
 - device defaults 15-1
 - device loads 7-6
 - gatekeeper 44-1
 - gateways 45-1
 - phones 46-1
 - understanding device support 7-1
 - DHCP 7-2
 - understanding 7-2
 - digital gateways 45-4
 - directory numbers 46-18
 - adding 46-19
 - auto-registration 4-1
 - configuring 46-18
 - deleting 46-23
 - searching 45-47
 - updating 46-24
 - discard digits Instructions 6-12
 - distributed system, configuring 2-3
 - Domain Name System (DNS) 11-1
-
- E**
- E1 gateways 45-4
 - enterprise parameters 18-1
 - external phone number mask 4-4
 - external route plan wizard 28-1
 - confirming the external route plan 28-10
 - creating an external route plan 28-2
 - deleting an external route plan 28-11
 - entering location information 28-5
 - finishing the external route plan 28-11
 - generating the external route plan 28-9
 - providing gateway information 28-8

providing tenant information 28-4
selecting gateways 28-6
setting the routing options 28-2
understanding 6-25

F

FXO 45-38

configuring ports on the Cisco VG200 45-38
Foreign Exchange Office 45-2

FXS 45-35

configuring ports on the Cisco VG200 45-35
Foreign Exchange Station 45-2

G

G.711 16-1

G.723 16-1

G.729 16-1

gatekeeper 44-1

adding 44-1
configuring 44-1
deleting 44-6
modifying 44-7
restarting or resetting 44-6

gateways 45-1

adding 45-7
analog ports 45-27

digital 45-9

H.323 45-23

analog 45-3

Cisco Catalyst 6000 45-4

Cisco VG200 45-6

communication protocols 45-1

configuring 45-35

Cisco VG200 ports 45-35

loop start ports 45-31

ports 45-27

deleting 45-42

digital 45-4

E1 45-4

finding and listing 45-44

H.323 45-6

ISDN 45-10

MGCP 45-21

modifying 45-41

PRI 45-10

resetting 45-42

searching 45-45

station 45-3

T1 45-4

trunk 45-3

updating 45-43

Global Directory

Advanced User Search 49-3

Basic User Search 49-1

Global Directory 49-1

Lightweight Directory Access Protocol (LDAP) 49-1

ground start, configuring ports on MGCP gateway 45-38

group call pickup

- adding a group number 40-2
- assigning directory numbers to a group 40-5
- deleting a group number 40-4
- updating a group number 40-3

groups, CallManager

- adding 13-2
- compared to clusters 3-1
- components of 3-2
- configuring 13-1
- deleting 13-6
- updating 13-4

groups, Date/Time 14-1

H

H.225 45-2

H.323 45-2

- adding gateways 45-23
- gateway 45-6
- H.323 clients 46-5

hub-and-spoke topology 5-1

hunt groups 8-5, 32-5

- adding members 32-5
- configuring 32-5

- deleting members 32-9
- described 8-5
- updating 32-9
- viewing 32-9

introduction 1-1

IP address 11-1

ISDN, gateway configuration 45-10

K

keypad templates 47-1

L

LDAP directory 9-1

- Cisco CallManager directory 9-1
- using the embedded directory 9-2

LDAP parameters 18-1

Lightweight Directory Access Protocol (LDAP) 9-1

locations 19-1

- adding 19-5
- defined 19-1
- deleting 19-7
- interaction with regions 19-3

updating 19-7
 used in admission control 5-1

loop start

configuring gateway ports 45-31
 configuring on MGCP gateway 45-40

M

MAC address 46-6

phone 46-6
 server 11-2

Media Access Control (MAC) address 11-2

phone 46-6
 server 11-2

messaging

Cisco Messaging Interface (CMI) 30-1
 Cisco uOne 43-1

MGCP 45-21

adding gateways 45-21
 configuring ground start ports 45-38
 configuring loop start ports 45-40
 Media Gateway Control Protocol 45-2

MWI (message waiting indicator) 43-8

MWI device for uOne 43-11
 MWI On/Off numbers 43-8

N

Network Interface Card (NIC) 11-2

O

overview 1-1

P

parameters

enterprise 18-1
 LDAP 18-1

partitions 21-1

adding 21-1
 deleting 21-2

phone button templates 47-1

12-Series, default template 47-4
 30 SP+, default template 47-3
 30 VIP, default template 47-4
 7910, default templates 47-3
 7940, default templates 47-3
 7960, default template 47-2

adding 47-5

deleting 47-11

guidelines for creating 47-7

renaming 47-10

understanding 47-1

updating 47-12

- phone features 46-16
 - call forward 46-17
 - call park 46-17
 - call pickup 46-18
 - call waiting 46-17
 - configuring 46-16
 - phones 46-1
 - adding 46-7
 - auto-registration 4-1
 - batch operations 46-1
 - Cisco IP Phone 12 SP+ 46-4
 - Cisco IP Phone 30 VIP 46-4
 - Cisco IP Phone 7900 Family 46-2
 - Cisco IP Phone 7910 46-4
 - Cisco IP Phone 7940 46-3
 - Cisco IP Phone 7960 46-3
 - Cisco IP Phone Services 41-1
 - configuring 46-5
 - deleting 46-11
 - device loads for 7-6
 - directory numbers 46-18
 - directory numbers, configuring 46-18
 - features, configuring 46-16
 - finding and listing 46-15
 - MAC address, displaying 46-6
 - phone button templates 47-1
 - resetting 46-12
 - understanding Cisco IP Phones 46-2
 - updating 46-13
 - pilot points 8-5, 32-2
 - adding 32-2
 - configuring 32-2
 - deleting 32-4
 - described 8-5
 - updating 32-4
 - viewing 32-4
 - plug-ins 8-9
 - Cisco WebAttendant client 8-9
 - PRI, gateway configuration 45-10
-
- ## Q
- quality of sound 5-1
-
- ## R
- redundancy 3-1
 - configuring 3-5
 - types of 3-1
 - with distributed call processing 3-3
 - regions 16-1
 - configuring 16-1
 - interaction with locations 19-3
 - used with admission control 19-3
 - resetting Cisco CallManager 20-1
 - restarting Cisco CallManager 20-1

route filters

- understanding tags 23-2

Route Pattern

- considerations for using 6-24

- understanding 6-24

route patterns 26-1

- adding 26-1

- copying 26-5

- deleting 26-6

- updating 26-4

route pattern wildcards and special

- characters 6-7

S

- server configuration 11-1

- services 38-2

- Control Center 20-2, 38-2

- Telephony Call Dispatcher (TCD) 8-8

- shared line appearances 46-25

- Skiny Gateway Protocol 45-1

- sound quality 5-1

- starting and stopping 38-2

- station gateways 45-3

T

- T1 gateways 45-4

- TCD (Telephony Call Dispatcher) 8-8

- service parameters 32-18

- starting 32-20

TFTP

- understanding 7-2

- TFTP server 7-3

- accessing 7-3

- identifying 7-4

- time zones 14-1

- translation patterns 27-1

- adding 27-2

- copying 27-5

- deleting 27-6

- understanding 27-1

- updating 27-4

- trunk gateways 45-3

U

- understanding distributed call processing 2-1

- understanding route plans

- route plan overview 6-1

- understanding 6-1

- Understanding Service Parameters

- 10-1

- Cisco CallManager service parameters 10-2
- Cisco database layer service parameters 10-21
- Cisco IP voice media streaming service parameters 10-20
- Cisco messaging interface service parameters 10-14
- Cisco telephony call dispatcher service parameters 10-22
- Cisco TFTP service parameters 10-13
- uOne, Cisco 43-1
 - port wizard 43-3
- user information
 - adding a user 48-2, 48-3
 - associate devices 48-2, 48-3
 - user information 48-1
- using route plan report 29-1
 - viewing all records 29-2
 - viewing in a file 29-3

V

- voice gateways 45-1
- voice mail 43-1
 - Cisco uOne 43-1
- voice quality 5-1

W

- WebAttendant, Cisco 8-1, 32-1
 - administration 8-3
 - client, configuring 32-14
 - client, installing 32-13
 - client installation 8-9
 - client requirements 8-9
 - configuring CallManager for 8-3
 - described 8-1
 - directory database 8-10
 - hunt groups, configuring 32-5
 - performance monitors 8-13
 - phone guidelines 8-4
 - pilot points, configuring 32-2
 - pilot points and hunt groups 8-5
 - redundancy 8-12
 - TCD service parameters 32-18
 - Telephony Call Dispatcher (TCD) 8-8
 - tips and troubleshooting 8-12, 8-15
 - users, adding 32-11
 - wausers 8-10
- wizards 43-3
 - Cisco uOne Port wizard 43-3

