



Transcoder Configuration

The Media Resource Manager (MRM) has responsibility for resource registration and resource reservation of transcoders within a Cisco CallManager cluster. Cisco CallManager simultaneously supports registration of both the MTP and Transcoder and concurrent MTP and transcoder functionality within a single call.

The maximum transcoding sessions per port is 24. The following list gives the supported transcoding capacity and sessions per port:

- G711–G711 MTP: 24 (no DSP is involved)
- G729–G729 MTP: 24 (no DSP is involved)
- G711–G723 transcoding: 24
- G711–G729 transcoding: 24
- G711–GSM Full Rate (FR) transcoding: 24
- G711–GSM Enhanced Full Rate (EFR) transcoding: 24

The Cisco CallManager invokes a transcoder on behalf of endpoint devices when the two devices are using different codecs, and would normally not be able to communicate. When inserted into a call, the transcoder converts the data streams between the two disparate codecs to enable communications between them.

Transcoders are accessible by all Cisco CallManagers within a cluster through the Media Resource Manager (MRM). The MRM determines the number of transcoders needed for a call and allocates the appropriate number of connections.

The MRM makes use of Cisco CallManager media resource groups and media resource group lists. The media resource group list allows transcoders to communicate with other devices in the assigned media resource group, which in turn, provides management of resources within a cluster.

A transcoder control process is created for each transcoder device defined in the database. Each transcoder registers with the MRM when it initializes. The MRM keeps track of the transcoder resources and advertises their availability throughout the cluster.

Use the following topics to configure transcoders:

- [Configuring a Transcoder, page 29-2](#)
- [Updating a Transcoder, page 29-3](#)
- [Copying a Transcoder, page 29-4](#)
- [Resetting a Transcoder, page 29-5](#)
- [Deleting a Transcoder, page 29-6](#)
- [Transcoder Configuration Settings, page 29-7](#)

Configuring a Transcoder

This section describes how to configure a transcoder.

Procedure

- Step 1** Choose **Service > Media Resource > Transcoder**.
- Step 2** Enter the appropriate settings as described in [Table 29-1](#).
- Step 3** Click **Insert**.

The window refreshes showing specific information, including the status, for the transcoder you just configured. The transcoder should now appear in the list on the left side of the window.

Related Topics

- [Transcoder Configuration, page 29-1](#)
- [Media Termination Point Configuration, page 26-1](#)
- [Conference Bridge Configuration, page 25-1](#)
- [Updating a Transcoder, page 29-3](#)

- [Copying a Transcoder, page 29-4](#)
- [Resetting a Transcoder, page 29-5](#)
- [Deleting a Transcoder, page 29-6](#)
- [Transcoder Configuration Settings, page 29-7](#)

Updating a Transcoder

This section describes how to update a transcoder.

Procedure

- Step 1** Choose **Service > Media Resource > Transcoder**.
- Step 2** From the Transcoders list on the left side of the window, click the transcoder you want to update.
- The window refreshes displaying the transcoder you selected.
- Step 3** Update the appropriate settings as described in [Table 29-1](#).
- Step 4** Click **Update**.
- A message displays stating that the transcoder must be reset before the changes will take effect.
- Step 5** Click **OK**.
- Step 6** Click the **Reset** button, and then click **OK** to continue.
-

Related Topics

- [Transcoder Configuration, page 29-1](#)
- [Media Termination Point Configuration, page 26-1](#)
- [Conference Bridge Configuration, page 25-1](#)
- [Configuring a Transcoder, page 29-2](#)
- [Copying a Transcoder, page 29-4](#)
- [Resetting a Transcoder, page 29-5](#)

- [Deleting a Transcoder, page 29-6](#)
- [Transcoder Configuration Settings, page 29-7](#)

Copying a Transcoder

This section describes how to copy a transcoder.

Procedure

- Step 1** Choose **Service > Media Resource > Transcoder**.
- Step 2** From the Transcoders list, choose the transcoder you want to copy.
The window refreshes displaying the transcoder you selected.
- Step 3** Click **Copy**.
The window refreshes again and displays the transcoder with a Copy of... name in the Current Transcoder field.
- Step 4** Update the appropriate settings as described in [Table 29-1](#).
- Step 5** Click **Insert**.
The screen refreshes and the new transcoder appears in the transcoder list on the left side of the window.
-

Related Topics

- [Transcoder Configuration, page 29-1](#)
- [Media Termination Point Configuration, page 26-1](#)
- [Conference Bridge Configuration, page 25-1](#)
- [Configuring a Transcoder, page 29-2](#)
- [Updating a Transcoder, page 29-3](#)
- [Resetting a Transcoder, page 29-5](#)
- [Deleting a Transcoder, page 29-6](#)
- [Transcoder Configuration Settings, page 29-7](#)

Resetting a Transcoder

This section describes how to reset a Transcoder.

-
- Step 1** Choose **Service > Media Resource > Transcoder**.
- Step 2** From the Transcoders list, choose the transcoder you want to reset.
The window refreshes displaying the transcoder you selected.
- Step 3** Click **Reset**.
The Reset dialog box displays.
- Step 4** Click **OK**.
-

Related Topics

- [Transcoder Configuration, page 29-1](#)
- [Media Termination Point Configuration, page 26-1](#)
- [Conference Bridge Configuration, page 25-1](#)
- [Configuring a Transcoder, page 29-2](#)
- [Updating a Transcoder, page 29-3](#)
- [Copying a Transcoder, page 29-4](#)
- [Deleting a Transcoder, page 29-6](#)
- [Transcoder Configuration Settings, page 29-7](#)

Deleting a Transcoder

This section describes how to delete a transcoder.

Procedure

- Step 1** Choose **Service > Media Resource > Transcoder**.
- Step 2** From the Transcoders list, choose the transcoder you want to delete.
The window refreshes, displaying the transcoder you selected.
- Step 3** Click **Delete**.
A message displays stating that you are about to permanently delete this transcoder and that you cannot undo this action.
- Step 4** Click **OK** if you want to continue or **Cancel** to cancel the deletion.
After the window refreshes, the transcoder you deleted should no longer appear in the transcoder list.
-

Related Topics

- [Transcoder Configuration, page 29-1](#)
- [Media Termination Point Configuration, page 26-1](#)
- [Conference Bridge Configuration, page 25-1](#)
- [Configuring a Transcoder, page 29-2](#)
- [Updating a Transcoder, page 29-3](#)
- [Copying a Transcoder, page 29-4](#)
- [Transcoder Configuration Settings, page 29-7](#)
- [Transcoders, *Cisco CallManager System Guide*](#)

Transcoder Configuration Settings

Table 29-1 describes the transcoder configuration settings.

Table 29-1 Transcoder Configuration Settings

Field	Description
Transcoder Type	Choose the appropriate transcoder type: Cisco Media Termination Point Hardware or Cisco IOS Media Termination Point .
MAC Address	Enter a MAC address (must be at least 12 characters). For IOS gateways, use the host name in the format MTPxxxxxxxxxxx, where xxxxxxxxxxxx is the MAC address of the IOS gateway.
Description	Enter a description (up to 15 characters).
Device Pool	Choose a device pool. For more detailed information on the selected device pool, click View Details .
Special Load Information	Enter any special load information into the Special Load Information field, or leave blank to use default.

Related Topics

- [Configuring a Transcoder, page 29-2](#)
- [Updating a Transcoder, page 29-3](#)
- [Copying a Transcoder, page 29-4](#)

