



Calling Search Space Configuration

A calling search space comprises an ordered list of route partitions that are typically assigned to devices. Calling search spaces determine the partitions where calling devices search when they are attempting to complete a call. For more detailed information on calling search spaces and partitions, refer to [“Partitions and Calling Search Spaces”](#) in the *Cisco CallManager System Guide*.

Use the following topics to add, update, copy, or delete a calling search space:

- [Finding a Calling Search Space, page 15-2](#)
- [Adding a Calling Search Space, page 15-3](#)
- [Updating a Calling Search Space, page 15-4](#)
- [Copying a Calling Search Space, page 15-5](#)
- [Deleting a Calling Search Space, page 15-6](#)
- [Calling Search Space Configuration Settings, page 15-7](#)

Finding a Calling Search Space

Because you might have several calling search spaces in your network, Cisco CallManager lets you locate specific calling search spaces by using specific criteria as the basis. Use the following procedure to locate calling search spaces.

Procedure

Step 1 Choose **Route Plan > Calling Search Space**.

The Find and List Calling Search Spaces window displays.

Step 2 From the drop-down list box, choose one of the following criteria:

- begins with
- contains
- ends with
- is exactly

Step 3 Specify the appropriate search text, if applicable, and click **Find**. You can also specify how many items per page to display.



Note To find all calling search spaces that are registered in the database, click **Find** without entering any search text.

A list of discovered calling search spaces displays by

- CSS name
- Description



Note You can delete multiple calling search spaces from the Find and List Calling Search Spaces window by checking the check boxes next to the appropriate calling search spaces and clicking **Delete Selected**. You can choose all calling search spaces in the window by checking the check box in the matching records title bar and clicking **Delete Selected**.

Step 4 From the list of records, click the calling search space that matches your search criteria.

The window displays the calling search space that you choose.

Related Topics

- [Adding a Calling Search Space, page 15-3](#)
- [Updating a Calling Search Space, page 15-4](#)
- [Copying a Calling Search Space, page 15-5](#)
- [Deleting a Calling Search Space, page 15-6](#)
- [Calling Search Space Configuration Settings, page 15-7](#)

Adding a Calling Search Space

The following procedure describes how to add a calling search space.

Procedure

Step 1 In the menu bar, choose **Route Plan > Calling Search Space**.

Step 2 Click **Add a New Calling Search Space**.

Step 3 Enter the appropriate settings as described in [Table 15-1](#).

Step 4 To add the new calling search space, click **Insert**.

The message “Status: Insert completed” displays.

Step 5 To add more calling search spaces, click **Add a New Calling Search Space** and repeat this procedure.

Related Topics

- [Finding a Calling Search Space, page 15-2](#)
- [Updating a Calling Search Space, page 15-4](#)

- [Copying a Calling Search Space, page 15-5](#)
- [Deleting a Calling Search Space, page 15-6](#)

Updating a Calling Search Space

The following procedure describes how to update a calling search space.

Procedure

- Step 1** In the menu bar, choose **Route Plan > Calling Search Space**.
- Step 2** Locate the calling search space that you want to update. See the [“Finding a Calling Search Space” section on page 15-2](#).
- Step 3** Update the appropriate settings as described in [Table 15-1](#).
- Step 4** Click **Update**.
- Step 5** Click **Restart Devices**. When you restart the devices that are associated with the calling search space, all calls on affected gateways drop.
-

Related Topics

- [Finding a Calling Search Space, page 15-2](#)
- [Adding a Calling Search Space, page 15-3](#)
- [Copying a Calling Search Space, page 15-5](#)
- [Deleting a Calling Search Space, page 15-6](#)
- [Calling Search Space Configuration Settings, page 15-7](#)

Copying a Calling Search Space

The following procedure describes how to copy a calling search space.

Procedure

- Step 1** In the menu bar, choose **Route Plan > Calling Search Space**.
- Step 2** Locate the calling search space that you want to copy. See the “[Finding a Calling Search Space](#)” section on page 15-2.
- Step 3** Check the check box next to the calling search space that you want to copy.
- Step 4** Click the **Copy** icon of that calling search space.
The window displays the copy of the calling search space.
- Step 5** Update the appropriate settings as described in [Table 15-1](#).
- Step 6** Click **Insert** to add the new calling search space.



Tip

You can also copy a calling search space by locating and displaying the calling search space that you want to copy and clicking **Copy**. Then, follow the instructions in [Step 5](#) and [Step 6](#).

Related Topics

- [Finding a Calling Search Space, page 15-2](#)
- [Adding a Calling Search Space, page 15-3](#)
- [Updating a Calling Search Space, page 15-4](#)
- [Deleting a Calling Search Space, page 15-6](#)
- [Calling Search Space Configuration Settings, page 15-7](#)

Deleting a Calling Search Space

The following procedure describes how to delete a calling search space.

**Note**

You cannot delete calling search spaces that are being used by devices, lines (DNs), or translation patterns.

Procedure

- Step 1** In the menu bar, choose **Route Plan > Calling Search Space**.
- Step 2** Locate the calling search space that you want to delete. See the [“Finding a Calling Search Space” section on page 15-2](#).
- Step 3** Check the check box of the calling search space that you want to delete and click **Delete Selected**.
A message displays that states that you cannot undo this action.
- Step 4** Click **OK** to delete the calling search space or click **Cancel** to cancel the deletion.

**Caution**

Before initiating this action, check carefully to ensure that you are deleting the correct calling search space. You cannot retrieve deleted calling search spaces. If a calling search space is accidentally deleted, you must rebuild it.

**Tip**

You can also delete a calling search space by locating and displaying the calling search space that you want to delete and clicking **Delete**.

Related Topics

- [Finding a Calling Search Space, page 15-2](#)
- [Adding a Calling Search Space, page 15-3](#)
- [Updating a Calling Search Space, page 15-4](#)

- [Copying a Calling Search Space, page 15-5](#)
- [Calling Search Space Configuration Settings, page 15-7](#)

Calling Search Space Configuration Settings

Table 15-1 describes the calling search space configuration settings.

Table 15-1 Calling Search Space Configuration Settings

Field	Description
Calling Search Space Name	<p>Enter a name in the Calling Search Space Name field. The name can comprise up to 50 alphanumeric characters and can contain any combination of spaces, periods (.), hyphens (-), and underscore characters (_). Ensure each calling search space name is unique to the plan.</p> <p>Note Use concise and descriptive names for your calling search spaces. The CompanynameLocationCalltype format usually provides a sufficient level of detail and is short enough to enable you to quickly and easily identify a calling search space. For example, CiscoDallasMetroCS identifies a calling search space for toll-free, inter-local access and transport area (LATA) calls from the Cisco office in Dallas.</p>
Description	Enter a description in the Description field. The description can comprise up to 50 alphanumeric characters and can contain any combination of spaces, periods (.), hyphens (-), and underscore characters (_).
Find Partitions containing	Enter the character(s) that are found in the partition name that you are seeking and click the Find button. Partition names that match the character(s) that you entered display in the Available Partitions box.

Table 15-1 Calling Search Space Configuration Settings (continued)

Field	Description
Available Partitions	<p>Choose a partition in the Available Partitions list box and add it to the Selected Partitions list box by clicking the arrow button between the two list boxes.</p> <p>To add a range of partitions at once, click on the first partition in the range; then, hold down the Shift key while clicking on the last partition in the range. Click the arrow button between the two list boxes to add the range of partitions.</p> <p>To add multiple partitions that are not contiguous, hold down the Control (Ctrl) key while clicking on multiple partitions. Click the arrow button between the two list boxes to add the chosen partitions.</p> <p>Note The length of the partition names limits the maximum number of partitions that can be added to a calling search space. Table 15-2 provides examples of the maximum number of partitions that can be added to a calling search space if partition names are of fixed length.</p>
Selected Partitions (ordered by highest priority)	To change the priority of a partition, choose a partition name in the Selected Partitions list box. Move the partition up or down in the list by clicking the arrows on the right side of the list box.

[Table 15-2](#) provides examples of the maximum number of partitions that can be added to a calling search space if partition names are of fixed length. Refer to “[Partition Name Limitations](#)” in the *Cisco CallManager System Guide* for details about how this maximum number is calculated.

Table 15-2 Calling Search Space Partition Limitations

Partition Name Length	Maximum Number of Partitions
2 characters	170
3 characters	128

Table 15-2 Calling Search Space Partition Limitations (continued)

Partition Name Length	Maximum Number of Partitions
4 characters	102
5 characters	86
...	...
10 characters	46
15 characters	32

Related Topics

- [Finding a Calling Search Space, page 15-2](#)
- [Adding a Calling Search Space, page 15-3](#)
- [Updating a Calling Search Space, page 15-4](#)
- [Copying a Calling Search Space, page 15-5](#)

