



Meet-Me Number/Pattern Configuration

Meet-Me conferences require an allocation of directory numbers. Cisco CallManager Administration provides the Meet-Me conference directory number range to users, so they can access the feature.

This section describes the following procedures:

- [Adding a Meet-Me Number/Pattern, page 36-1](#)
- [Updating a Meet-Me Number/Pattern, page 36-3](#)
- [Deleting a Meet-Me Number/Pattern, page 36-4](#)
- [Meet-Me Number/Pattern Configuration Settings, page 36-5](#)

Adding a Meet-Me Number/Pattern

This section describes how to add a Meet-Me Number/Pattern.

Before You Begin

Make sure the following prerequisites are met before proceeding with the steps:

- Configure the servers. See the “[Server Configuration](#)” section on [page 2-1](#).
- Configure the device pools. See the “[Device Pool Configuration](#)” section on [page 8-1](#).

Procedure

Step 1 Choose **Feature > Meet-Me Number/Pattern**.

The Meet-Me Number/Pattern Configuration window displays.

Step 2 From the Meet-Me Number/Patterns list, click **Add a New Directory Number/Pattern**.

Step 3 Enter the appropriate settings as described in [Table 36-1](#).

Step 4 Click **Insert**.

The window refreshes, and the new Meet-Me Number/Pattern appears in the list on the left side of the window.

Related Topics

- [Updating a Meet-Me Number/Pattern, page 36-3](#)
- [Deleting a Meet-Me Number/Pattern, page 36-4](#)
- [Adding a Software Conference Device, page 27-2](#)
- [Adding a Hardware Conference Device, page 27-5](#)
- [Adding a Cisco IOS Conference Bridge Device, page 27-7](#)
- [Updating a Conference Device, page 27-9](#)
- [Deleting a Conference Device, page 27-11](#)
- [Updating Conference Bridge Parameters, page 27-12](#)
- [Partition Configuration, page 14-1](#)
- [Conference Bridges, *Cisco CallManager System Guide*](#)

Updating a Meet-Me Number/Pattern

This section describes how to update a Meet-Me Number/Pattern.

Before You Begin

Make sure the following prerequisites are met before proceeding with the steps:

- Configure the servers. See the “[Server Configuration](#)” section on page 2-1.
- Configure the device pools. See the “[Device Pool Configuration](#)” section on page 8-1.
- Configure the meet-me number/pattern. See the “[Adding a Meet-Me Number/Pattern](#)” section on page 36-1.

Procedure

Step 1 Choose **Feature > Meet-Me Number/Pattern**.

The Meet-Me Number/Pattern Configuration window displays.

Step 2 From the Meet-Me Numbers/Patterns list, choose the Meet-Me Number/Pattern that you want to update.

The pattern that you chose appears in the Directory Number or Pattern field.

Step 3 Update the appropriate settings as described in [Table 36-1](#).



Note You can change the number or pattern as needed (example, changing 5000 to 500X).

Step 4 Click **Update**.

The window refreshes, and the pattern updates.

Related Topics

- [Adding a Software Conference Device, page 27-2](#)
- [Adding a Hardware Conference Device, page 27-5](#)
- [Adding a Cisco IOS Conference Bridge Device, page 27-7](#)

- [Updating a Conference Device, page 27-9](#)
- [Deleting a Conference Device, page 27-11](#)
- [Updating Conference Bridge Parameters, page 27-12](#)
- [Adding a Meet-Me Number/Pattern, page 36-1](#)
- [Deleting a Meet-Me Number/Pattern, page 36-4](#)
- [Partition Configuration, page 14-1](#)
- [Conference Bridges, Cisco CallManager System Guide](#)

Deleting a Meet-Me Number/Pattern

This section describes how to delete a Meet-Me Number/Pattern.

Before You Begin

Make sure the following prerequisites are met before proceeding with the steps:

- Configure the servers.
- Configure the device pools.
- Configure the meet-me number/pattern.

Procedure

-
- Step 1** Choose **Feature > Meet-Me Number/Pattern**.
- The Meet-Me Number/Pattern Configuration window displays.
- Step 2** From the Meet-Me Numbers/Patterns list, choose the Meet-Me Number/Pattern you want to delete.
- Step 3** Click **Delete**.
-

Related Topics

- [Adding a Software Conference Device, page 27-2](#)
- [Adding a Hardware Conference Device, page 27-5](#)
- [Adding a Cisco IOS Conference Bridge Device, page 27-7](#)

- [Updating a Conference Device](#), page 27-9
- [Deleting a Conference Device](#), page 27-11
- [Updating Conference Bridge Parameters](#), page 27-12
- [Adding a Meet-Me Number/Pattern](#), page 36-1
- [Updating a Meet-Me Number/Pattern](#), page 36-3
- [Conference Bridges](#), *Cisco CallManager System Guide*

Meet-Me Number/Pattern Configuration Settings

Table 36-1 describes the meet-me number/pattern configuration settings.

Table 36-1 Meet-Me Number/Pattern Configuration Settings

Field	Description
Directory Number or Pattern	Enter a Meet-Me Numbers/pattern or a range of numbers (such as 8000 to 8009).
Partition	<p>To use a partition to restrict access to the meet-me/number pattern, choose the desired partition from the drop-down list box.</p> <p>If you do not want to restrict access to the meet-me number/pattern, choose <None> for the partition. See the “Partition Configuration” section on page 14-1 for more information.</p> <p>If more than 250 partitions exist, the ellipsis (...) button displays next to the drop-down list box. Click the ... button to display the Select Partition window. Enter a partial partition name in the List items where Name contains field. Click the desired partition name in the list of partitions that displays in the Select item to use box and click OK.</p> <p>Note Make sure that the combination of meet-me number/pattern and partition is unique within the Cisco CallManager cluster.</p>

Related Topics

- [Adding a Meet-Me Number/Pattern, page 36-1](#)
- [Updating a Meet-Me Number/Pattern, page 36-3](#)