



A

adding

Cisco CallManager AutoAttendant to Cisco CRA [5-20](#)

Cisco CallManager Extension Mobility [1-20](#)

CTI ports [5-10](#)

CTI ports to Cisco CRA [5-17](#)

CTI route points [5-8](#)

audio sources

creating for MOH [4-13](#)

for MOH [4-12](#)

managing for MOH [4-14](#)

MOH CD-ROM [4-12](#)

multicast [4-14](#)

unicast [4-14](#)

C

calling search spaces

Cisco IPMA

configuration tips [2-22](#)

call park

example with MOH [4-7](#)

call pickup

group configuration settings (table) [2-48](#)

Cisco [5-4](#)

Cisco Call Back

configuration checklist [3-11](#)

configuring [3-11](#)

description [3-2](#)

installing [3-10](#)

overview [3-1](#)

service parameters [3-14](#)

system requirements [3-8](#)

Cisco CallManager

adding CTI ports [5-10](#)

adding CTI route points [5-8](#)

configuring [5-8](#)

supported version [5-5](#)

Cisco CallManager

MOH servers [4-9](#)

Cisco CallManager AutoAttendant

adding to Cisco CRA [5-20](#)

components [5-4](#)

customizing [5-22](#)

installation requirements [5-5](#)

installing [5-6](#)

managing [5-28](#)

modifying instance [5-22](#)

- reinstalling [5-7](#)
- script [5-3](#)
- upgrading [5-7](#)
- Cisco CallManager Extension Mobility
 - adding [1-20](#)
 - configuration checklist [1-19](#)
 - configuration checklist (table) [1-19](#)
 - configuration example [1-18](#)
 - configuration guidelines [1-17](#)
 - configuring [1-17](#)
 - description [1-3](#)
 - device profile, creating [1-23](#)
 - device profiles [1-5](#)
 - error clearing [A-3](#)
 - general problems, clearing [A-2](#)
 - illustrated (figure) [1-4](#)
 - installing [1-14](#)
 - login call flow [1-8](#)
 - logout call flow [1-10](#)
 - overview [1-1](#)
 - service parameters [1-21](#)
 - subscribing [1-26](#)
 - system requirements [1-11](#)
 - trace files [A-2](#)
 - troubleshooting [A-1](#)
 - upgrading [1-15](#)
 - user device profile, associating [1-25](#)
 - using [1-28](#)
- Cisco CRA Engine
 - adding Cisco CallManager AutoAttendant [5-20](#)
 - adding CTI port group [5-17](#)
 - configuring for Cisco CallManager AutoAttendant [5-12](#)
 - configuring JTAPI subsystem [5-16](#)
 - overview [5-4](#)
 - starting and stopping [5-28](#)
- Cisco Customer Response Platform
 - components [5-4](#)
- Cisco IPMA
 - assistant assignment does not change [A-20](#)
 - assistant proxy lines contain blank fields [A-21](#)
 - calls do not get routed [A-22](#)
 - manager or assistant search slow [A-18](#)
 - new manager not created [A-19](#)
 - service unreachable [A-16](#)
 - updated user information is lost [A-24](#)
 - user authentication fails [A-15, A-28](#)
- Cisco IP Manager Assistant
 - architecture
 - understanding [2-2](#)
 - assistant interfaces [2-7](#)
 - bulk administration tool [1-13, 2-10](#)
 - calling search space and partitions
 - configuration tips [2-22](#)
- Cisco IP phone interface [2-6](#)
- Cisco IP phone services
 - configuration tips [2-28](#)

- configuration checklist (table) [2-14](#)
 - database and directory access architecture
 - understanding [2-6](#)
 - desktop interface [2-6](#)
 - manager assistant administration
 - interface [2-8](#)
 - manager interfaces [2-7](#)
 - more information [2-53](#)
 - phones
 - configuration tips [2-28](#)
 - reporting tools [2-11](#)
 - route point
 - configuration tips [2-24](#)
 - softkeys [2-8](#)
 - translation pattern
 - configuration tips [2-24](#)
 - Cisco IP Manager Assistant (IPMA)
 - configuring assistant proxy and incoming intercom lines [2-38](#)
 - configuring manager and assigning assistant [2-33](#)
 - configuring manager primary and incoming intercom lines [2-34](#)
 - deleting [2-36, 2-40](#)
 - updating [2-37, 2-41](#)
 - Cisco IPMA service
 - understanding [2-3](#)
 - Cisco IP phone services
 - Cisco IPMA
 - configuration tips [2-28](#)
 - computer management (device driver) window (figure) [4-25](#)
 - computer management (services) window (figure) [4-23](#)
 - configuring
 - Cisco CallManager [5-8](#)
 - Cisco CRA Engine [5-12](#)
 - CTI ports [5-10](#)
 - CTI route points [5-8](#)
 - directory [5-13](#)
 - JTAPI subsystem [5-16](#)
 - prompts [5-23](#)
 - welcome prompt [5-25](#)
 - CTI port
 - adding [5-10](#)
 - adding to Cisco CRA [5-17](#)
 - CTI route points
 - adding [5-8](#)
 - customizing
 - Cisco CallManager AutoAttendant [5-22](#)
-
- D
 - database
 - scalability [4-10](#)
 - device profiles
 - and Cisco CallManager Extension Mobility [1-5](#)
 - devices
 - driver states, checking [4-24](#)

E

error

Cisco CallManager Extension Mobility [A-3](#)

F

features

Cisco IP Manager Assistant

assistant interfaces [2-7](#)

bulk administration tool [1-13, 2-10](#)

calling search space and partitions [2-22](#)

Cisco IP phone interface [2-6](#)

Cisco IP phone services [2-28](#)

configuration checklist (table) [2-14](#)

desktop interface [2-6](#)

manager assistant administration
interface [2-8](#)

manager interfaces [2-7](#)

phones [2-28](#)

reporting tools [2-11](#)

route point [2-24](#)

softkeys [2-8](#)

translation pattern [2-24](#)

understanding architecture [2-2](#)

understanding database and directory
access architecture [2-6](#)

Cisco IPMA service

understanding [2-3](#)

G

gateways [5-4](#)

group call pickup

group configuration settings (table) [2-48](#)

H

hardware requirements [5-5](#)

I

installing

Cisco CallManager AutoAttendant [5-6](#)

IPMAConsoleInstall.jsp

exception while getting service
parameters [A-9](#)

IIS service not running [A-11](#)

misspelled URL [A-13](#)

network problem [A-12](#)

no page found [A-10](#)

J

JTAPI subsystem, configuring [5-16](#)

L

LDAP directory [5-4](#)

login call flow

 Cisco CallManager Extension Mobility [1-8](#)

logout call flow

 Cisco CallManager Extension Mobility [1-10](#)

M

managing Cisco CallManager

 AutoAttendant [5-28](#)

modifying

 Cisco CallManager AutoAttendant

 instance [5-22](#)

MOH

 audio sources

 adding [4-27](#)

 configuration settings (table) [4-31](#)

 configuring [4-26](#)

 copying [4-29](#)

 deleting [4-30](#)

 explained [4-12](#)

 updating [4-28](#)

 call park example [4-7](#)

 CD-ROM [4-12](#)

 characteristics [4-4](#)

 configuration checklist (table) [4-19](#)

 configuring [4-26, 4-38](#)

 creating audio sources [4-13](#)

 database scalability [4-10](#)

 definitions [4-2](#)

 described [4-1](#)

 failover and failback [4-18](#)

 features

 database requirements [4-9](#)

 database scalability [4-10](#)

 manageability [4-10](#)

 MOH servers [4-7](#)

 server manageability [4-8](#)

 server redundancy [4-9](#)

 server scalability [4-8](#)

 fixed audio source

 configuration settings (table) [4-35](#)

 described [4-34](#)

 functionality [4-5](#)

 list of topics [4-1](#)

 managing audio sources [4-14](#)

 monitoring performance

 computer management (device driver)
 window (figure) [4-25](#)

 computer management (services) window
 (figure) [4-23](#)

 device driver states [4-24](#)

 overview (table) [4-20](#)

 service states [4-23](#)

 more information [4-48](#)

 requirements and limits [4-17](#)

 server configuration settings (table) [4-44](#)

 servers

 adding [4-38](#)

 characteristics [4-7](#)

 copying [4-40](#)

- database requirements [4-9](#)
 - deleting [4-41](#)
 - explained [4-11](#)
 - manageability [4-8](#)
 - perfmon counters [4-21](#)
 - redundancy [4-9](#)
 - resetting [4-43](#)
 - scalability [4-8](#)
 - updating [4-39](#)
 - supported features [4-7](#)
 - transfer hold example [4-7](#)
 - understanding [4-2](#)
 - user hold example [4-6](#)
 - multicast
 - audio sources for MOH [4-14](#)
 - configuration checklist (table) [4-16](#)
 - explained [4-14](#)
 - music on hold (MOH) [4-26, 4-38](#)
 - audio sources [4-12](#)
 - call park example [4-7](#)
 - CD-ROM [4-12](#)
 - characteristics [4-4](#)
 - configuration checklist (table) [4-19](#)
 - creating audio sources [4-13](#)
 - definitions [4-2](#)
 - described [4-1](#)
 - failover and failback [4-18](#)
 - functionality [4-5](#)
 - list of topics [4-1](#)
 - managing audio sources [4-14](#)
 - monitoring performance
 - computer management (device driver) window (figure) [4-25](#)
 - computer management (services) window (figure) [4-23](#)
 - device driver states [4-24](#)
 - overview (table) [4-20](#)
 - service states [4-23](#)
 - more information [4-48](#)
 - requirements and limits [4-17](#)
 - servers
 - characteristics [4-7](#)
 - database requirements [4-9](#)
 - explained [4-11](#)
 - manageability [4-8](#)
 - perfmon counters [4-21](#)
 - redundancy [4-9](#)
 - scalability [4-8](#)
 - supported features [4-7](#)
 - transfer hold example [4-7](#)
 - understanding [4-2](#)
 - user hold example [4-6](#)
-
- ## N
- name
 - uploading [5-27](#)
 - network requirements [5-5](#)
 - no matches for user, troubleshooting [A-27](#)

-
- P**
- perfmon counters
 - counter descriptions (table) [4-22](#)
 - performance window (figure) [4-21](#)
 - using to view MOH servers [4-21](#)
 - prompt
 - configuring [5-23](#)
 - configuring welcome [5-25](#)
 - not found [A-28](#)
 - recording [5-24](#)
-
- R**
- recording welcome prompt [5-24](#)
 - redundancy
 - MOH servers [4-9](#)
 - reinstalling
 - Cisco CallManager AutoAttendant [5-7](#)
 - repository profiles [5-13](#)
 - requirements
 - Cisco Call Back [3-8](#)
 - Cisco CallManager Extension Mobility [1-11](#)
 - route point
 - Cisco IPMA
 - configuration tips [2-24](#)
-
- S**
- service
 - Cisco CallManager Extension Mobility [1-15](#), [1-20](#)
 - software requirements [5-5](#)
 - spoken name
 - uploading [5-27](#)
-
- T**
- trace files for Cisco CallManager Extension Mobility [A-2](#)
 - trace settings [5-28](#)
 - transfer hold, example with MOH [4-7](#)
 - translation pattern
 - Cisco IPMA
 - configuration tips [2-24](#)
 - troubleshooting
 - Cisco CallManager Extension Mobility [A-1](#)
 - no matches for user [A-27](#)
 - prompt not found [A-28](#)
 - troubleshooting Cisco CallManager Extension Mobility [A-3](#)
-
- U**
- unicast
 - audio sources for MOH [4-14](#)
 - explained [4-14](#)

upgrading

 Cisco CallManager Extension Mobility [1-15](#)

upgrading Cisco CallManager

 AutoAttendant [5-7](#)

uploading

 spoken name [5-27](#)

user hold, example with MOH [4-6](#)

W

welcome prompt [5-24](#)

 configuring [5-25](#)

Windows requirements [5-5](#)