



---

## A

### audio sources

creating for MOH [4-13](#)

for MOH [4-12](#)

managing for MOH [4-14](#)

MOH CD-ROM [4-12](#)

multicast [4-14](#)

unicast [4-14](#)

---

## C

### calling search spaces

Cisco IP Manager Assistant (IPMA)

configuration tips [2-23](#)

### call park

example with MOH [4-7](#)

### call pickup

group configuration settings (table) [2-55](#)

### Cisco Call Back

configuration checklist [3-11](#)

configuring [3-11](#)

description [3-2](#)

installing [3-10](#)

overview [3-1](#)

service parameters [3-14](#)

system requirements [3-8](#)

### Cisco CallManager

configuring for Cisco CallManager  
AutoAttendant [5-9](#)

MOH servers [4-9](#)

Cisco CallManager AutoAttendant [5-9, 5-13,](#)  
[5-25, 5-27](#)

adding CTI ports [5-11](#)

adding CTI route points [5-9](#)

adding to Cisco CRA [5-22](#)

components [5-4](#)

configuring directory server settings [5-14](#)

customizing [5-23](#)

description [5-1](#)

installation requirements [5-5](#)

installing [5-6](#)

managing [5-29](#)

modifying instance [5-24](#)

overview [5-3](#)

reinstalling [5-7](#)

script [5-3](#)

understanding [5-2](#)

upgrading [5-7](#)

uploading spoken name [5-28](#)

## Cisco CallManager Extension Mobility

- adding [1-21](#)
- configuration checklist [1-19](#)
- configuration checklist (table) [1-19](#)
- configuration example [1-18, 1-19](#)
- configuration guidelines [1-17](#)
- configuring [1-17](#)
- description [1-3](#)
- device profile, creating [1-24](#)
- device profiles [1-5](#)
- error clearing [A-4](#)
- general problems, clearing [A-2](#)
- illustrated (figure) [1-4](#)
- installing [1-14](#)
- login call flow [1-8](#)
- logout call flow [1-10](#)
- overview [1-1](#)
- service parameters [1-22](#)
- subscribing [1-27](#)
- system requirements [1-11](#)
- trace files [A-2](#)
- troubleshooting [A-1](#)
- upgrading [1-15](#)
- user device profile, associating [1-26](#)
- using [1-29](#)

## Cisco CRA

- viewing trace settings [5-29](#)

## Cisco CRA Engine

- adding Cisco CallManager AutoAttendant [5-22](#)

- adding CTI port group [5-19](#)

- configuring for Cisco CallManager AutoAttendant [5-13](#)

- configuring JTAPI subsystem [5-18](#)

- starting and stopping [5-29](#)

## Cisco Customer Response Platform

- components [5-4](#)

## Cisco IP Manager Assistant (IPMA)

- architecture overview [2-2](#)

- assistant assignment does not change [A-21](#)

- assistant interfaces [2-7](#)

- assistant proxy lines contain blank fields [A-22](#)

- bulk administration tool [1-13, 2-10](#)

- calling search space and partitions
  - configuration tips [2-23](#)

- calls do not get routed [A-23](#)

- Cisco IP Phone interface [2-6](#)

- Cisco IP Phone Services, configuration tips [2-29](#)

- configuration checklist (table) [2-15](#)

- configuring assistant proxy and incoming intercom lines [2-44](#)

- configuring manager and assigning assistant [2-39](#)

- configuring manager primary and incoming intercom lines [2-39](#)

- database and directory access architecture
  - understanding [2-6](#)

- deleting [2-42, 2-47](#)

- desktop interface [2-5](#)

- manager assistant administration
  - interface [2-8](#)
- manager interfaces [2-7](#)
- manager or assistant search slow [A-22](#)
- more information [2-60](#)
- new manager not created [A-20](#)
- phones
  - configuration tips [2-34](#)
- reporting tools [2-11](#)
- route point
  - configuration tips [2-25](#)
- service unreachable [A-17](#)
- softkeys [2-8](#)
- translation pattern
  - configuration tips [2-25](#)
- understanding [2-3](#)
- updated user information is lost [A-25](#)
- updating [2-43, 2-48](#)
- user authentication fails [A-16, A-30](#)

Cisco IP Phone Services

- Cisco IP Manager Assistant (IPMA)
  - configuration tips [2-29](#)
- computer management (device driver) window
  - (figure) [4-25](#)
- computer management (services) window
  - (figure) [4-23](#)
- configuring Cisco CallManager [5-9](#)
- configuring Cisco CRA Engine [5-13](#)
- configuring welcome prompt [5-27](#)
- CTI ports

- adding for Cisco CallManager
  - AutoAttendant [5-11](#)
- adding to Cisco CRA [5-19](#)
- CTI route points
  - adding for Cisco CallManager
    - AutoAttendant [5-9](#)
  - Cisco IP Manager Assistant (IPMA)
    - configuration tips [2-25](#)

---

## D

- database
  - scalability [4-10](#)
- device profiles
  - and Cisco CallManager Extension
    - Mobility [1-5](#)
- devices
  - driver states, checking [4-24](#)
- directory server settings, Cisco CallManager
  - AutoAttendant [5-14](#)

---

## E

- error
  - Cisco CallManager Extension Mobility [A-4](#)

---

## F

- features
  - Cisco IP Manager Assistant (IPMA)
    - assistant interfaces [2-7](#)

bulk administration tool [1-13, 2-10](#)  
 calling search space and partitions [2-23](#)  
 Cisco IP Phone interface [2-6](#)  
 Cisco IP Phone Services [2-29](#)  
 configuration checklist (table) [2-15](#)  
 desktop interface [2-5](#)  
 manager assistant administration  
     interface [2-8](#)  
 manager interfaces [2-7](#)  
 phones [2-34](#)  
 reporting tools [2-11](#)  
 route point [2-25](#)  
 softkeys [2-8](#)  
 translation pattern [2-25](#)  
 understanding [2-3](#)  
 understanding architecture [2-2](#)  
 understanding database and directory  
     access architecture [2-6](#)

---

**G**

group call pickup  
     group configuration settings (table) [2-55](#)

---

**I**

IPMAConsoleInstall.jsp  
     exception while getting service  
         parameters [A-10](#)  
 IIS service not running [A-12](#)

misspelled URL [A-13](#)  
 network problem [A-13](#)  
 no page found [A-11](#)

---

**J**

JTAPI subsystem, configuring [5-18](#)

---

**L**

login call flow  
     Cisco CallManager Extension Mobility [1-8](#)  
 logout call flow  
     Cisco CallManager Extension Mobility [1-10](#)

---

**M**

modifying prompts [5-25](#)  
 MOH  
     audio sources  
         adding [4-27](#)  
         configuration settings (table) [4-32](#)  
         configuring [4-26](#)  
         copying [4-29](#)  
         deleting [4-30](#)  
         explained [4-12](#)  
         updating [4-28](#)  
     call park example [4-7](#)  
     CD-ROM [4-12](#)

- characteristics [4-4](#)
- configuration checklist (table) [4-19](#)
- configuring [4-26, 4-38](#)
- creating audio sources [4-13](#)
- database scalability [4-10](#)
- definitions [4-2](#)
- described [4-1](#)
- failover and failback [4-18](#)
- features
  - database requirements [4-9](#)
  - database scalability [4-10](#)
  - manageability [4-10](#)
  - MOH servers [4-7](#)
  - server manageability [4-9](#)
  - server redundancy [4-9](#)
  - server scalability [4-8](#)
- fixed audio source
  - configuration settings (table) [4-35](#)
  - described [4-34](#)
- functionality [4-5](#)
- list of topics [4-1](#)
- managing audio sources [4-14](#)
- monitoring performance
  - computer management (device driver) window (figure) [4-25](#)
  - computer management (services) window (figure) [4-23](#)
  - device driver states [4-24](#)
  - overview (table) [4-20](#)
  - service states [4-23](#)
- more information [4-51](#)
- requirements and limits [4-17](#)
- server configuration settings (table) [4-47](#)
- servers
  - adding [4-41](#)
  - characteristics [4-7](#)
  - copying [4-43](#)
  - database requirements [4-9](#)
  - deleting [4-44](#)
  - explained [4-11](#)
  - finding [4-39](#)
  - manageability [4-9](#)
  - perfmon counters [4-21](#)
  - redundancy [4-9](#)
  - resetting [4-46](#)
  - scalability [4-8](#)
  - updating [4-42](#)
- supported features [4-7](#)
- transfer hold example [4-7](#)
- understanding [4-2](#)
- user hold example [4-7](#)
- multicast
  - audio sources for MOH [4-14](#)
  - configuration checklist (table) [4-16](#)
  - explained [4-14](#)
- music on hold (MOH) [4-26, 4-38](#)
  - audio sources [4-12](#)
  - call park example [4-7](#)
  - CD-ROM [4-12](#)

- characteristics [4-4](#)
- configuration checklist (table) [4-19](#)
- creating audio sources [4-13](#)
- definitions [4-2](#)
- described [4-1](#)
- failover and fallback [4-18](#)
- functionality [4-5](#)
- list of topics [4-1](#)
- managing audio sources [4-14](#)
- monitoring performance
  - computer management (device driver) window (figure) [4-25](#)
  - computer management (services) window (figure) [4-23](#)
  - device driver states [4-24](#)
  - overview (table) [4-20](#)
  - service states [4-23](#)
- more information [4-51](#)
- requirements and limits [4-17](#)
- servers
  - characteristics [4-7](#)
  - database requirements [4-9](#)
  - explained [4-11](#)
  - manageability [4-9](#)
  - perfmon counters [4-21](#)
  - redundancy [4-9](#)
  - scalability [4-8](#)
- supported features [4-7](#)
- transfer hold example [4-7](#)

- understanding [4-2](#)
- user hold example [4-7](#)

---

## N

- no matches for user, troubleshooting [A-29](#)

---

## P

- perfmon counters
  - counter descriptions (table) [4-22](#)
  - performance window (figure) [4-21](#)
  - using to view MOH servers [4-21](#)
- prompt
  - not found [A-30](#)
- prompts, Cisco CallManager AutoAttendant [5-25](#)

---

## R

- recording welcome prompt [5-25](#)
- redundancy
  - MOH servers [4-9](#)
- requirements
  - Cisco Call Back [3-8](#)
  - Cisco CallManager Extension Mobility [1-11](#)

---

## S

### services

Cisco CallManager Extension Mobility [1-15](#)

Cisco CallManager Extension Mobility,  
adding [1-21](#)

spoken name, uploading [5-28](#)

---

## T

trace files for Cisco CallManager Extension  
Mobility [A-2](#)

transfer hold, example with MOH [4-7](#)

### translation patterns

Cisco IP Manager Assistant (IPMA),  
configuration tips [2-25](#)

### troubleshooting

Cisco CallManager Extension Mobility [A-1](#),  
[A-4](#)

no matches for user [A-29](#)

prompt not found [A-30](#)

---

## U

### unicast

audio sources for MOH [4-14](#)

explained [4-14](#)

user hold, example with MOH [4-7](#)

