



Service Parameters Configuration

Service parameters for Cisco CallManager allow you to configure different services on selected servers. You can view a list of parameters and their descriptions by clicking the **i** button in the upper, right corner of the Service Parameters Configuration window. You can view the list with a particular parameter at the top by clicking that parameter.

If you deactivate a service by using Cisco CallManager Serviceability, Cisco CallManager retains any updated service parameter values. If you start the service again, Cisco CallManager sets the service parameters to the changed values.



Note

For information about what happens to service parameter values during an upgrade, refer to *Upgrading Cisco CallManager*.

For more information about Cisco CallManager services, see [Services](#) in the *Cisco CallManager System Guide*.

Before You Begin

Ensure the following prerequisites are met before proceeding with the steps:

- Make sure that servers are configured. See the [“Server Configuration” section on page 2-1](#) for more information.
- Make sure that the service is activated. Refer to the *Cisco CallManager Serviceability Administration Guide* for more information.

**Caution**

Some changes to service parameters may cause system failure. Cisco recommends that you do not make any changes to service parameters unless you fully understand the feature that you are changing or unless the Cisco Technical Assistance Center (TAC) specifies the changes.

Use the following topics to configure or display service parameters:

- [Configuring Service Parameters for a Service on a Server, page 39-2](#)
- [Displaying Parameters for a Service, page 39-4](#)

Configuring Service Parameters for a Service on a Server

Use the following procedure to configure the service parameters for a particular service on a particular server.

Procedure

- Step 1** Choose **Service > Service Parameters**.
- Step 2** From the Server drop-down list box, choose a server.
- Step 3** From the Service drop-down list box, choose the service that contains the parameter that you want to update.

**Note**

If the service that you want to configure does not appear in the drop-down list box, you must activate the service on the server by using Cisco CallManager Serviceability.

The Service Parameters Configuration window displays.

- Step 4** Update the appropriate parameter value. To set all service parameters for this instance of the service to the default values, click the **Set to Default** button.

To view a list of parameters and their descriptions, click the **i** button in the upper, right corner of the window, as shown in the [Figure 39-1](#). To view the list with a particular parameter at the top, click that parameter in the Service Parameters Configuration window.

Figure 39-1 Service Parameter Configuration Window

The screenshot shows the Cisco CallManager Administration interface. At the top, there is a navigation menu with options: System, Route Plan, Service, Feature, Device, User, Application, and Help. Below this is the Cisco CallManager Administration logo and the Cisco Systems logo. The main heading is 'Service Parameters Configuration' with a link 'Select Another Server/Service'. The current server is 'DOCSERVER1' and the current service is 'Cisco CallManager'. The status is 'Ready'. There are three buttons: 'Update', 'Set to Default', and 'Advanced'. Below the buttons is a table with the following content:

Parameter Name	Parameter Value	Suggested Value
Able To Establish MF*	True	True

An information icon (i) is located in the top right corner of the main content area.



Note

Some services contain service parameters that should rarely be changed. Cisco CallManager Administration does not automatically display these parameters when you access the Service Parameters Configuration window. To view all parameters, click **Advanced**. After all parameters display, you can redisplay the basic parameters by clicking **Condensed**. If the **Advanced** button is disabled, all parameters for that service display by default.

Step 5 Click Update.

The window refreshes, and Cisco CallManager updates the service parameter with your changes.

Related Topics

- [Displaying Parameters for a Service, page 39-4](#)
- [Services, Cisco CallManager System Guide](#)

Displaying Parameters for a Service

You may need to compare all service parameters that belong to a particular service on all servers in a cluster. You may also need to display only out-of-sync parameters (that is, service parameters for which values differ from one server to another) or parameters that have been modified from the suggested value.

Use the following procedure to display the service parameters for a particular service on all servers in a cluster.

Procedure

-
- Step 1** Choose **Service > Service Parameters**.
 - Step 2** From the Server drop-down list box, choose a server.
 - Step 3** From the Service drop-down list box, choose the service for which you want to display the service parameters on all servers in a cluster.



Note If the service that you want to configure does not appear in the drop-down list box, you must activate the service on the server by using Cisco CallManager Serviceability.

- Step 4** In the Service Parameters Configuration window that displays, click **Parameters for all servers**.

The Parameters for All Servers window displays. For the current service, the list shows all parameters in alphabetical order. For each parameter, the suggested value displays next to the parameter name. Under each parameter name, a list of servers that contain this parameter displays. Next to each server name, the current value for this parameter on this server displays.

For a given parameter, click on the server name or on the current parameter value to link to the corresponding service parameter page to change the value. Click **Previous** and **Next** to navigate between Parameters for All Servers windows.

- Step 5** If you need to display out-of-sync service parameters, click **Out of Sync Parameters for All Servers** at the top right of the Parameters for All Servers window.

The Out of Sync Parameters for All Servers window displays. For the current service, service parameters that have different values on different servers display in alphabetical order. For each parameter, the suggested value displays next to the parameter name. Under each parameter name, a list of servers that contain this parameter displays. Next to each server name, the current value for this parameter on this server displays.

For a given parameter, click on the server name or on the current parameter value to link to the corresponding service parameter page to change the value. Click **Previous** and **Next** to navigate between Out of Sync Parameters for All Servers windows.

- Step 6** If you need to display service parameters that have been modified from the suggested value, click **Modified Parameters for All Servers** at the top right of the window.

The Modified Parameters for All Servers window displays. For the current service, service parameters that have values different from the suggested values display in alphabetical order. For each parameter, the suggested value displays next to the parameter name. Under each parameter name, a list of servers that have different values from the suggested values displays. Next to each server name, the current value for this parameter on this server displays.

For a given parameter, click on the server name or on the current parameter value to link to the corresponding service parameter window to change the value. Click **Previous** and **Next** to navigate between Modified Parameters for All Servers windows.

Related Topics

- [Configuring Service Parameters for a Service on a Server, page 39-2](#)
- [Services, Cisco CallManager System Guide](#)

■ **Displaying Parameters for a Service**